

Make	Model	Year	Install	CAN	Lights	Locks	Brake	I/O Changes
DL-HA2 Acura	MDX STD Key AT	2007-13	Type 5	N/A	Park / Auto brn/yel	DATA	lt.green	Green White/Blue N/A

This installation requires **BLADE-AL(DL)-HA2** firmware, flash module and update the controller firmware, before beginning the installation.

**Lights:** Parking light & Light off connections are located at the headlight switch connectors. Additional wiring from the CM I/O connector is required, providing a negative parking light wire, and a status wire to provide lighting and light off control. You are required to select the appropriate POCs and configuration accordingly.

**Parking Light: Brown** (pin #3, green 10-pin connector) at headlight switch harness.

**Light Off: Yellow** (pin #4, green 10-pin connector) at headlight switch harness.

**Brake:** Brake status is not provided over data, additional wiring is required to properly monitor brake status. The vehicle brake wire (**lt.green**) is at the 2-pin brake switch connector, located at the top of the brake pedal assembly.

**Door Locks:** Door locks are covered via data, no additional connections required.

**Tachometer Signal:**

**Coil:** Use non-common wire in 3-wire connector at any ignition coil module, common colors are *black & black/white (do not use)*.

**Injector:** Use non-common wire in 2-wire connector at any fuel injector, common is *yellow/black (do not use)*.



## FTI-HDK1: Installation and Configuration Notes

- A** CUT REQUIRED
- B** NOT REQUIRED
- C** REQUIRED CONNECTION
- D** REQUIRED CONNECTIONS
- E** NOT REQUIRED



FEATURE COVERAGE																			
IMMOBILIZER DATA	AM CONTROL	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	POWER LIFTGATE				DOOR STATUS	TRUNK STATUS	AUTOLIGHT CTRL	BRAKE STATUS	HOOD STATUS					PARKING LIGHTS
○	○	○	○	○	○	○				○	○	○	●	○					●



•FT-DAS Required for manual transmission.  
•BOTH Red & Red/White MUST be connected with high current application.

**Jumper Setting**


**CM7000/7200** Cut loop for A/T

**CM-900S/900AS**


**CM900AS/900S Jumper**

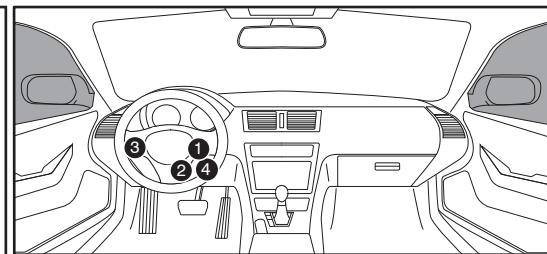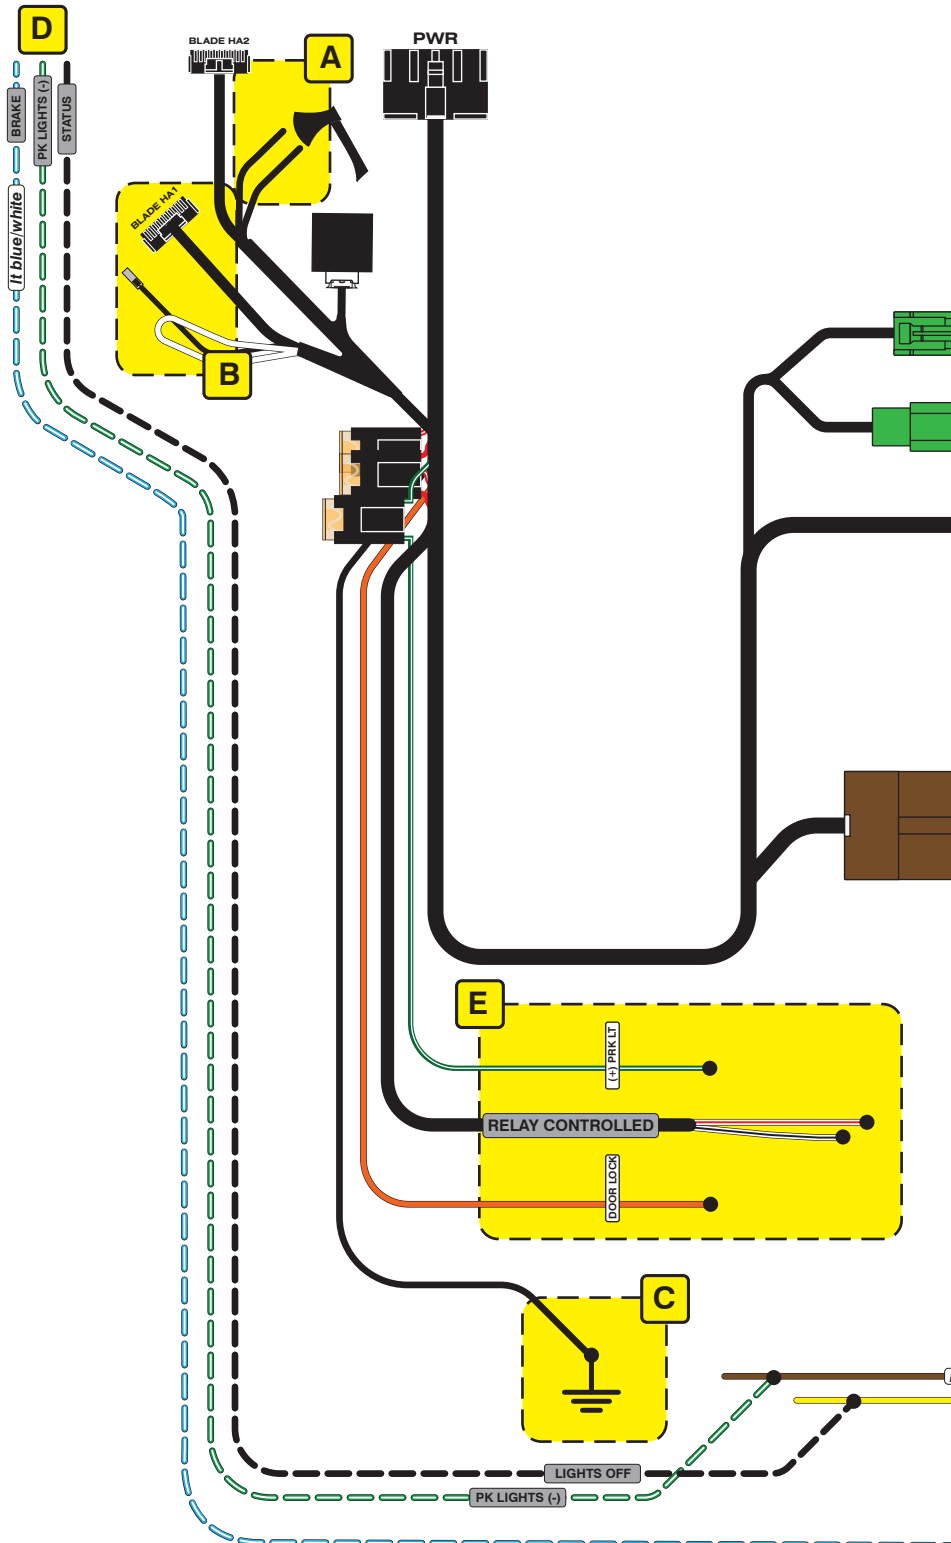


**Immobilizer/Key Cylinder** 1

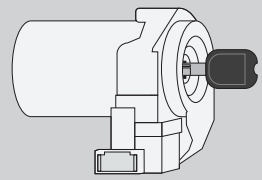


**Ignition Switch Harness** 2

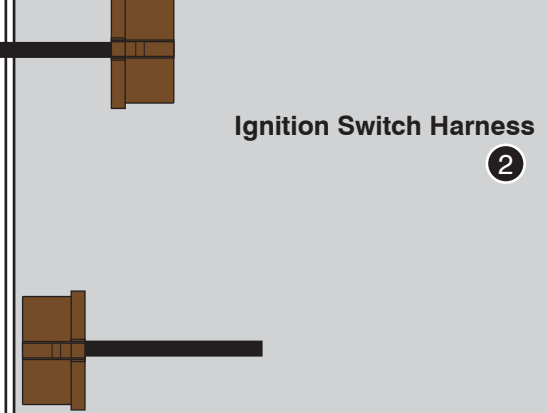

**Headlight Switch Connector** 3

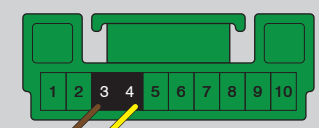

**Brake Switch** 4

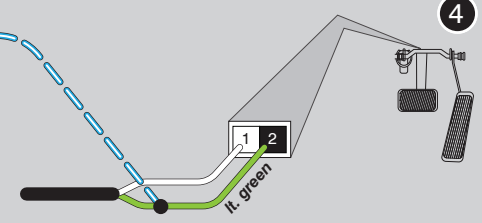

**M/T Applications**  
Clutch Bypass Wiring




**LED Programming Error Codes**

Module LED flashing RED during programming

- 1x - No SWC (doorlock) activity, check orange wire connection
- 2x - IMMO error, check connection and harness configuration (jumpers)
- 3x - Generic error, come on... it's a T-harness :)

## CARTRIDGE INSTALLATION

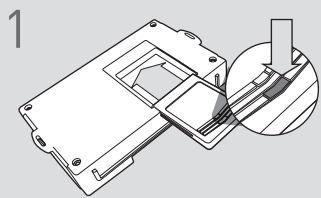


1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

## MODULE PROGRAMMING PROCEDURE

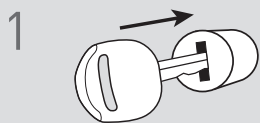


1 Insert key into ignition.




2 Turn key to ON position.

 3



3 Wait, LED will turn solid BLUE for 2 seconds.

 4



4 Turn key to OFF position.

5

5 Module Programming Procedure completed.