



Immobilizer Connector

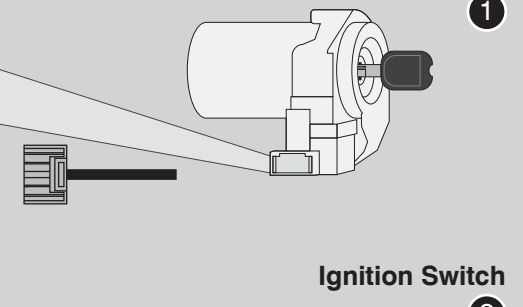

Ignition Switch

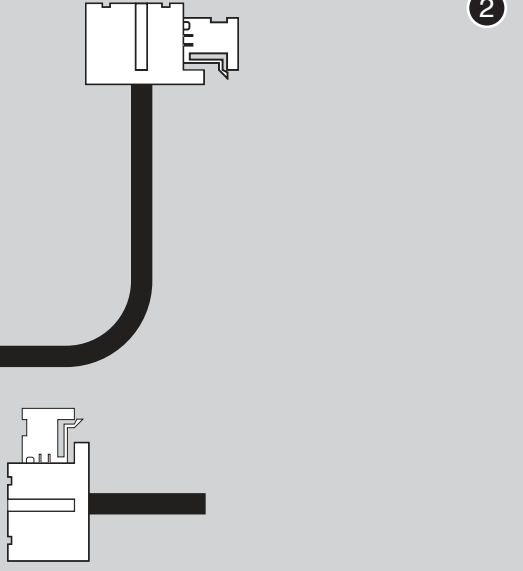

Headlight Switch Connector


1			6
7			12

LED Programming Error Codes

Module LED flashing RED during programming

- 1x - CAN error, confirm harness connections
 - 2x - Klon data is wrong, redo programming from the beginning
 - 3x - No S-net data, check connections
 - 4x - No VIN data, check connections, confirm vehicle entry
- After Klon:
- If module LED stays RED, redo programming from the beginning of the process, remember to close/open door.
 - 2x - Klon failure, redo programming, see note above.

CARTRIDGE INSTALLATION

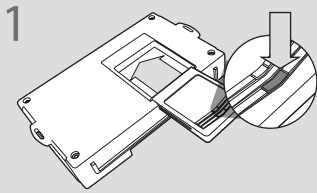


1 Slide cartridge into unit. Notice button under LED.

2


Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

 1




Close driver door.

 

Re-open driver door to wake up data bus.

2

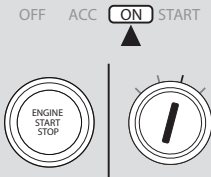


Turn ignition to ON position.

3




Wait, LED will flash BLUE rapidly.

4

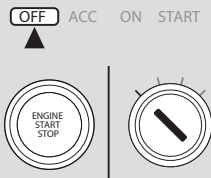

Turn ignition to OFF position.

 5




WARNING:
Disconnect power last.
Disconnect RS from vehicle.

6




Connect RS to computer and proceed with extended programming.

7

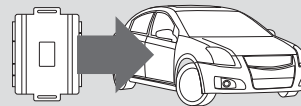


WARNING: Do not press RS programming button.
Connect power first.
Connect RS to vehicle.

8

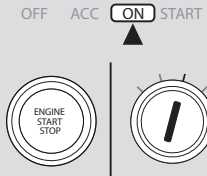


Turn ignition to ON position.

 9



Wait, LED will turn solid BLUE for 2 seconds .

10

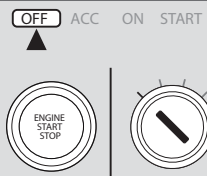

Turn ignition to OFF position.

11



Press UNLOCK on the OEM remote.



If the vehicle is equipped with a power liftgate: Open and close the power liftgate with the OEM keyfob.

12

Module Programming Procedure completed.