



Immobilizer Connector

1

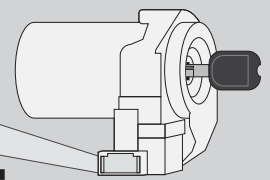


Ignition Switch

 2



Headlight Switch Connector

3

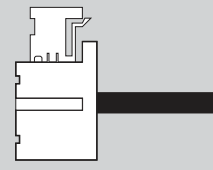


1			6
7			12

Códigos de error de programación de LED
El LED del módulo parpadea en ROJO durante la programación

- 1x - Error de CAN, confirmar las conexiones del arnés
 - 2x - Los datos de Klon son incorrectos, rehaga la programación desde el principio
 - 3x - No hay datos de S-net, verifique las conexiones
 - 4x - No hay datos de VIN, verifique las conexiones, confirme la entrada del vehículo
- Después de Klon:
Si el LED del módulo permanece ROJO, rehaga la programación desde el comienzo del proceso, recuerde cerrar/abrir la puerta.
2x - Fallo de Klon, rehaga la programación, consulte la nota anterior.

CARTRIDGE INSTALLATION

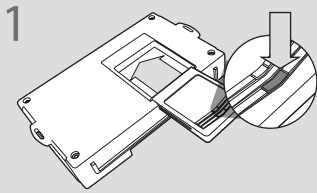


1 Slide cartridge into unit. Notice button under LED.

2


Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

 1




Close driver door.

 

Re-open driver door to wake up data bus.

2

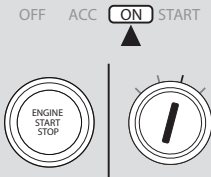


Turn ignition to ON position.

3




Wait, LED will flash BLUE rapidly.

4

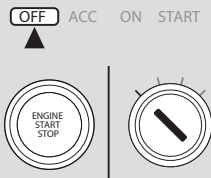

Turn ignition to OFF position.

 5




WARNING:
Disconnect power last.
Disconnect RS from vehicle.

6




Connect RS to computer and proceed with extended programming.

7

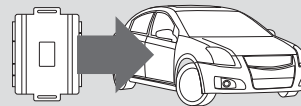


WARNING: Do not press RS programming button.
Connect power first.
Connect RS to vehicle.

8

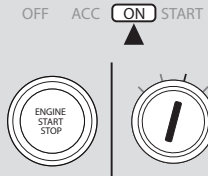


Turn ignition to ON position.

 9



Wait, LED will turn solid BLUE for 2 seconds .

10

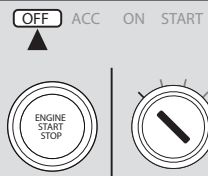

Turn ignition to OFF position.

11



Press UNLOCK on the OEM remote.



If the vehicle is equipped with a power liftgate: Open and close the power liftgate with the OEM keyfob.

12

Module Programming Procedure completed.