


FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

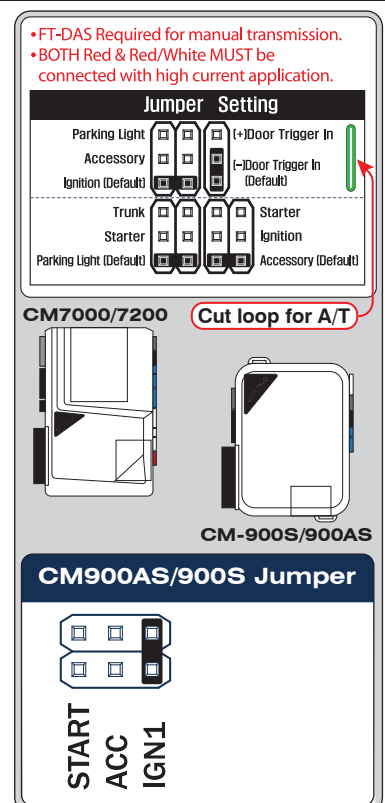



Códigos de error de programación de LED


El LED del módulo parpadea en ROJO durante la programación

- 1x - Sin actividad CAN, verifique conectores / voltaje CAN
- 2x - Error de datos de Klon, confirme la conexión S-NET
- 3x - No hay datos S-NET, confirme la conexión
- 4x - Sin VIN, confirme las conexiones CAN y el vehículo ingresado cuando parpadea

Después de Klon:


LED rojo fijo - rehaga la parte 1 de Klon

- 2x - Los datos de Klon son incorrectos, confirme la conexión de datos, empezar de nuevo desde el principio

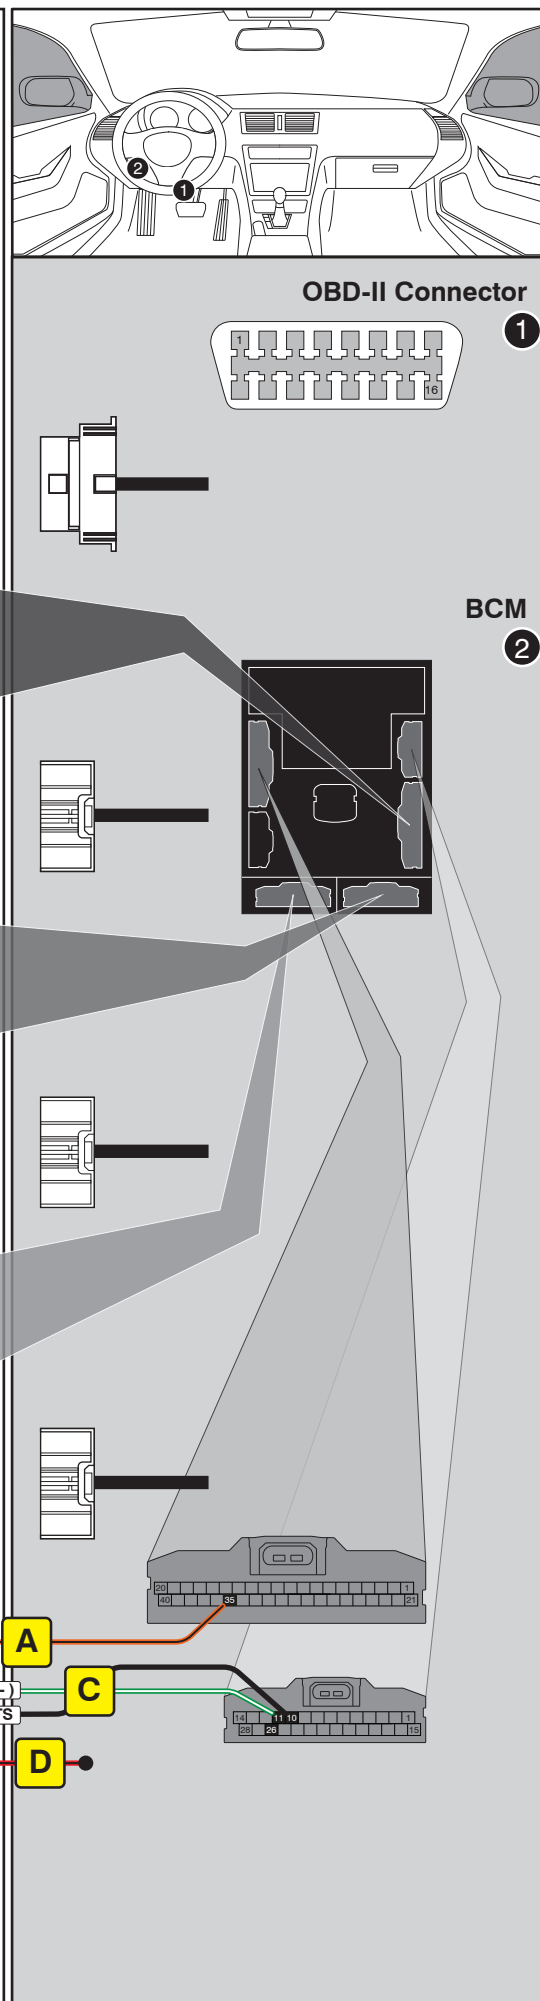

Adquisición no admitida: El motor del vehículo se apagará cuando se abran las puertas.

CARTRIDGE INSTALLATION

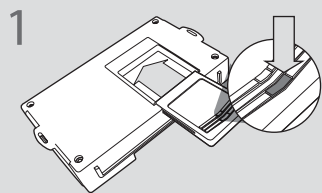


Slide cartridge into unit. Notice button under LED.

2


Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

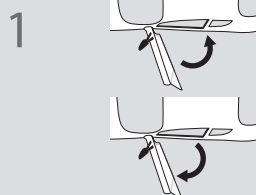


Close driver door.


Re-open driver door to wake up data bus.

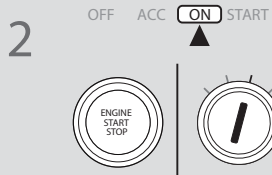


Turn ignition to ON position.

 


Wait, LED will flash BLUE rapidly.

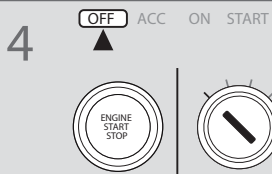


Turn ignition to OFF position.

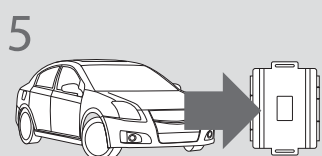


WARNING:
Disconnect power last.
Disconnect RS from vehicle.

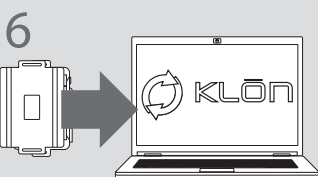


Connect RS to computer and proceed with extended programming.

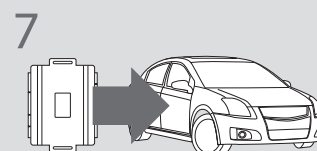


WARNING: Do not press RS programming button.
Connect power first.
Connect RS to vehicle.

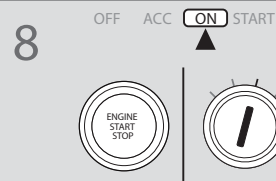

Turn ignition to ON position.

 

Wait, LED will turn solid BLUE for 2 seconds .

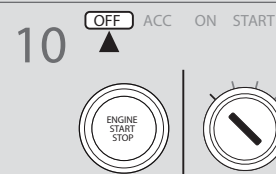

Turn ignition to OFF position.



Press UNLOCK on the OEM remote.

! If the vehicle is equipped with a power liftgate: Open and close the power liftgate with the OEM keyfob.

12

Module Programming Procedure completed.