


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - CAN error, check connectors and CAN voltage
- 2x - No IGN, check connectors and IGN voltage
- 3x - Timeout, redo programming, confirm CAN voltage
- 4x - BCM communication error, connections/CAN voltage
- 5x - Firmware does not match wiring, confirm current version
- 6x - VIN error, flash again and confirm vehicle entry
- Rapid RED - Cycle IGN and START, reset module and repeat entire programming sequence over.

CARTRIDGE INSTALLATION

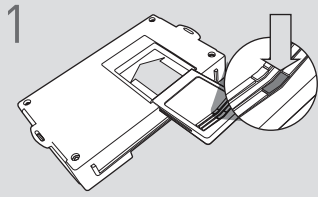

1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

 
MODULE PROGRAMMING PROCEDURE

NOTE


1 **WARNING:** Hood, doors, trunk/hatch must be closed prior to remote start sequence.



1 Push start button twice [2x] to ON position.



 
2 Wait, LED will turn solid RED to confirm that the ignition is ON.




3 Wait 10 seconds, LED will flash BLUE rapidly.




4 Push start button once [1x] to OFF position.

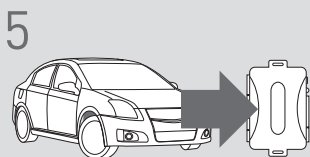


5 **WARNING:** Disconnect power last. Disconnect RS from vehicle.

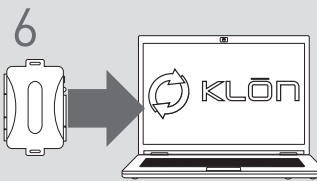


6 Connect RS to computer and proceed with extended programming.

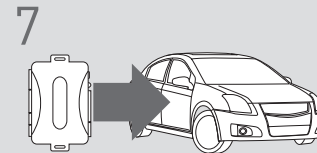

 7 **WARNING:** Do not press RS programming button. Connect power first. Connect RS to vehicle.



 8 Push start button twice [2x] to ON position.



9 Wait, LED will turn solid RED to confirm that the ignition is ON.



10 Wait, LED will turn solid BLUE for 2 seconds.

! If vehicle is equipped with power liftgate: open and close the power liftgate with OEM keyfob.

11

Module Programming Procedure completed.

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PTS - TO THE VEHICLE OWNER

NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.




TIME RESTRICTION COMING UP !

1



Unlock vehicle door using OEM or after-market remote, or door request switch.

2

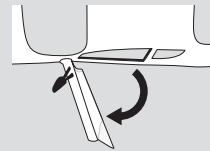

TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.