FTI-NSP8: Vehicle Coverage and Preparation Notes

· · · · · · · · · · · · · · · · · ·												
Make	Model	Year	Install	CAN	Lights	ВСМ	POC	I/O Changes				
DL-NI8 Infiniti	QX50 PTS AT	2019-21	Type 2	BCM	Park / Auto POC 1	DSD	Hazard 1/2	Green White/Blue				

NI8 Type 2 install requires BLADE-AL(DL)-NI8, flash module and update the controller firmware before installing.

CAN: CAN data is acquired from the BCM using the green harness cable.

POC1: Visual status confirmations and diagnostic information are provided by hazard light connections in the harness assembly, POC1 must be configured for either **Hazard1** (POC option #30 (momentary switch) **or Hazard2** (POC option #23 (latching switch).

Type 2 Door Locks: Connect female white 2-pin door lock connector to male black 2-pin (B) BCM jumper.


CM Unlock Configuration: Proper unlock control requires configuring the controller disarm output to double-pulse unlock. Set feature option 1-4 to setting 2 (Double Pulse).

Vehicle Damage Warning:

Caution should be taken to avoid mixing up the BCM connectors, vehicle damage will result if the connectors are positioned improperly. It is advised that you make the BCM connections one at a time, confirming that each T-harness connection is at the correct BCM position before proceeding to the next connection, attempting to program, or attempting to remote start.

FTI-NSP8: Installation and Configuration Notes

A REQUIRED CONNECTIONS - SECURE UNUSED I/O CONNECTORS														FT-DAS Required for manual transmission. BOTH Red & Red/White MUST be connected with high current application.			
B REQUIRED CONNECTIONS - SEE WARNING ABOVE															Jumper Setting Parking Light		
C REQUIRED CO	C REQUIRED CONNECTION - REQUIRES CONFIGURATION (Option 1-4 to 2)														Accessory		
CM900AS/900S Jumper														CM7000/7200 CMX CMX			
ANN * MIMINAN	FEATURE COVERAGE														CMX High Current Programmable		
	\bigcirc	0	00	\bigcirc			\bigcirc	igodol		0				\circ	0		(+) Output Channels HCP #1 - Parking Light
	IMMOBILIZER DATA	DOOR LOCK	DOOR UNLOCK ARM OEM ALARM	DISARM OEM ALARM			DOOR STATUS	TRUNK STATUS		BRAKE STATUS E-BRAKE STATIIS				SECURE TAKEOVER	HAZARD LIGHTS		HCP #2 - Accessory HCP #2 - Ignition [2] 2ND START [3] 2ND IGNITION [4] 2ND ACCESSORY

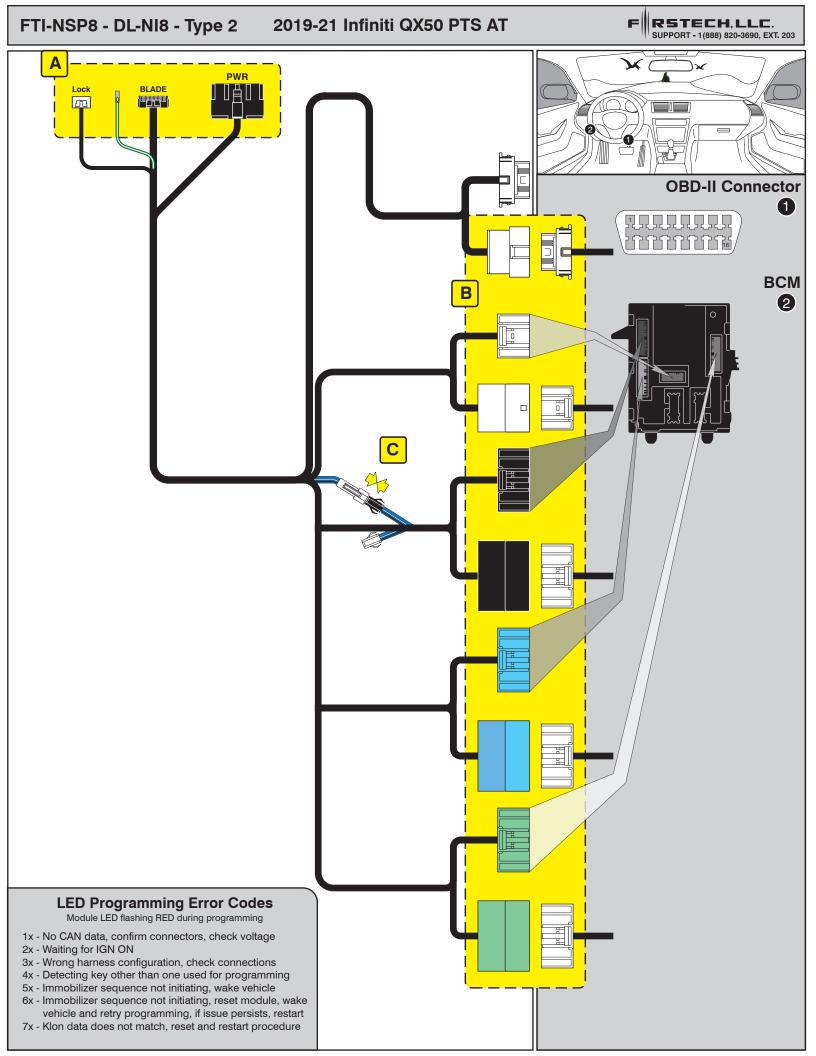

INSTALL GUIDE


BLADE

DOORLOCK INTERFACE INFINITI/NISSAN

Page 14 of 16

COM-BLADE-AL(DL)-NI8-EN


Doc. No.: ##75332## 20210414

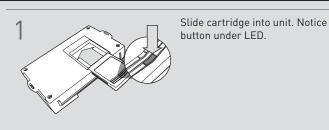

CARTRIDGE INSTALLATION

2

Ready for Module Programming Procedure.

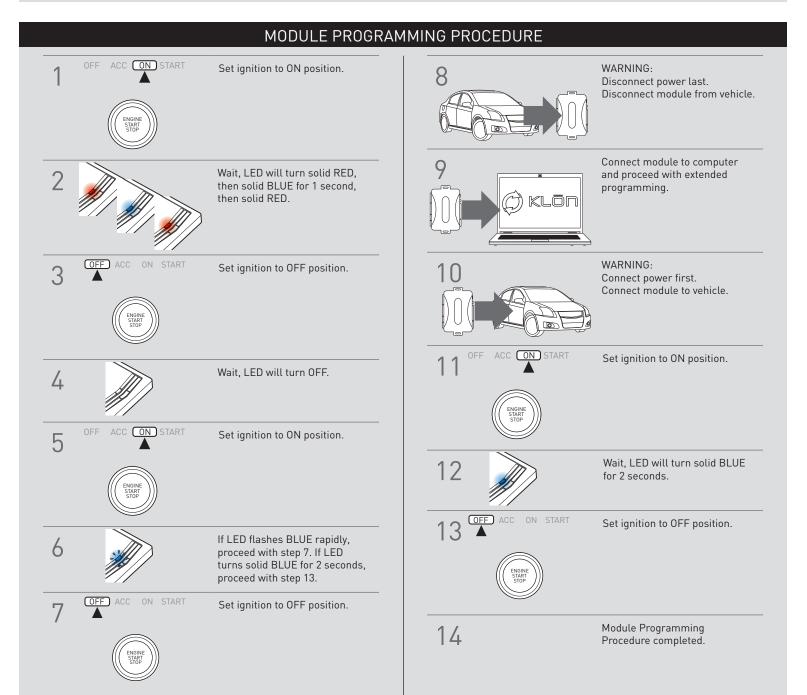

INSTALL GUIDE



DOORLOCK INTERFACE INFINITI/NISSAN

Page 16 of 16

COM-BLADE-AL(DL)-NI8-EN

Doc. No.: ##75332## 20210414

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PUSH TO START - TO THE VEHICLE OWNER

NOTE

I All vehicle doors must be closed and locked prior to remote start sequence.



TIME RESTRICTI ON COMING UP !



Unlock vehicle door using OEM or after-market remote, or door request switch.

