


Steering Lock Connector



Main Body ECU

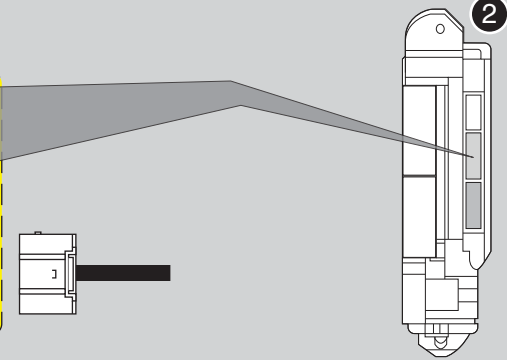


LED Programming Error Codes

- Module LED flashing RED during programming
- 1x - No CAN detected, check connections
 - 2x - VIN not read, check connections
 - 3x - VIN unknown, force platform
 - 4x - No IMMO
 - 5x - OEM remote starter detected, remove
 - 6x - Key platform detected, check connections
 - 7x - No RX detected, check connections
 - 8x - No TX detected, check connections

TAKEOVER NOT SUPPORTED: THE VEHICLE WILL SHUT DOWN UPON OPENING DRIVER'S DOOR

CARTRIDGE INSTALLATION

1

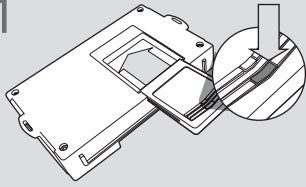

Slide cartridge into unit. Notice button under LED.

2

 
Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

NOTE


I Between each step, LED will turn solid RED, this is the default standby mode.

1




Push start button twice [2x] to ON position.

2

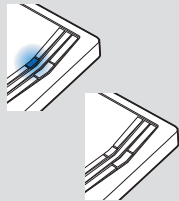

Wait, LED will turn solid BLUE then will turn OFF.

 3



Push start button once [1x] to OFF position.

4

Module Programming Procedure completed.