


















FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

Idle Mode is not a supported feature of the FTI-TLP4 Harness: The Idle Mode feature which allows the user to exit a running has been excluded from the FTI-TLP4 harness wiring. ***If this feature is desired, please refer to the full BLADE installation diagram for the applicable wiring and make the required connection to the vehicle PTS button.***

•FT-DAS Required for manual transmission.
 •BOTH Red & Red/White MUST be connected with high current application.


Jumper		Setting	
	Parking Light		
	Accessory		
	Ignition (Default)		
	Trunk		
	Starter		
	Parking Light (Default)		
	Starter		

(+)Door Trigger In
 (-)Door Trigger In (Default)


Starter
 Ignition
 Accessory (Default)

CM7000/7200


Cut loop for A/T



CM-900S/900AS




CM900AS/900S Jumper



START
 ACC
 IGN1



FEATURE COVERAGE	
IMMOBILIZER DATA	○
TPMS CONTROL	○
ALARM OEM ALARM	○
DISARM OEM ALARM	○
A/M CONTROL FROM OEM REMOTES	○
A/M RS CONTROL	○
FRMO OEM REMOTE	○
PRIORITY UNLOCK	○
DOOR LOCK	○
DOOR UNLOCK	○
TRUNK/HATCH RELEASE	○
HATCH OUTPUT	○
BRAKE STATUS	○
E-BRAKE STATUS	○
DOOR STATUS	○
TRUNK STATUS	○
HOOD STATUS	○
PARKING LIGHTS	○
AUTOLIGHT CONTROL	○

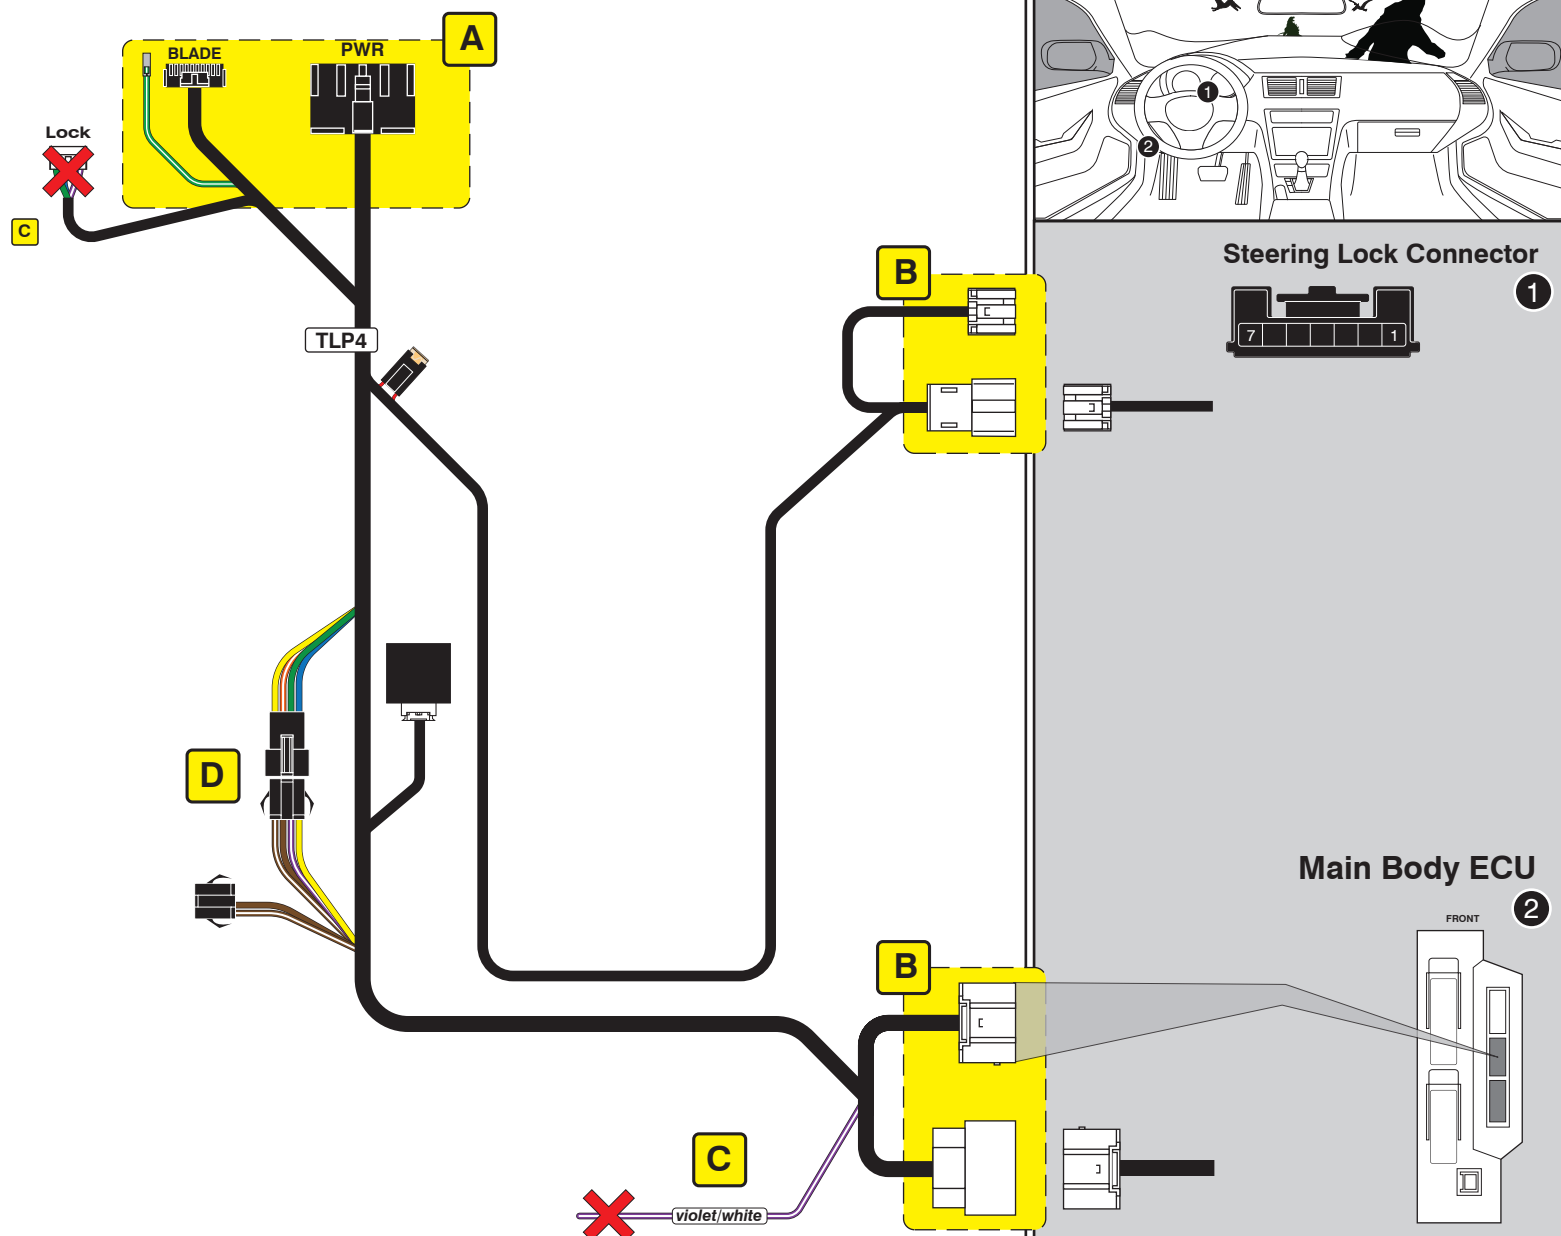


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - No CAN detected, check connections
- 2x - VIN not read, check connections
- 3x - VIN unknown, force platform
- 4x - No IMMO
- 5x - OEM remote starter detected, remove
- 6x - Key platform detected, check connections
- 7x - No RX detected, check connections
- 8x - No TX detected, check connections

TAKEOVER NOT SUPPORTED: THE VEHICLE WILL SHUT DOWN UPON OPENING DRIVER'S DOOR

CARTRIDGE INSTALLATION

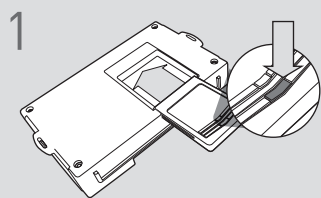

1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

 
MODULE PROGRAMMING PROCEDURE

NOTE


I Between each step, LED will turn solid RED, this is the default standby mode.




1 Push start button twice [2x] to ON position.




2 LED will turn solid RED.

 

 
3 Within 5 seconds, LED will flash BLUE rapidly.



4 Push start button once [1x] to OFF position.

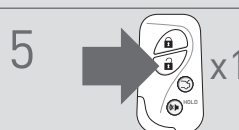

 5 Press unlock button once [1x] on OEM keyfob.



6 Wait, LED will turn solid BLUE for 2 seconds.

7

Module Programming Procedure completed.

TAKEOVER NOT AVAILABLE