


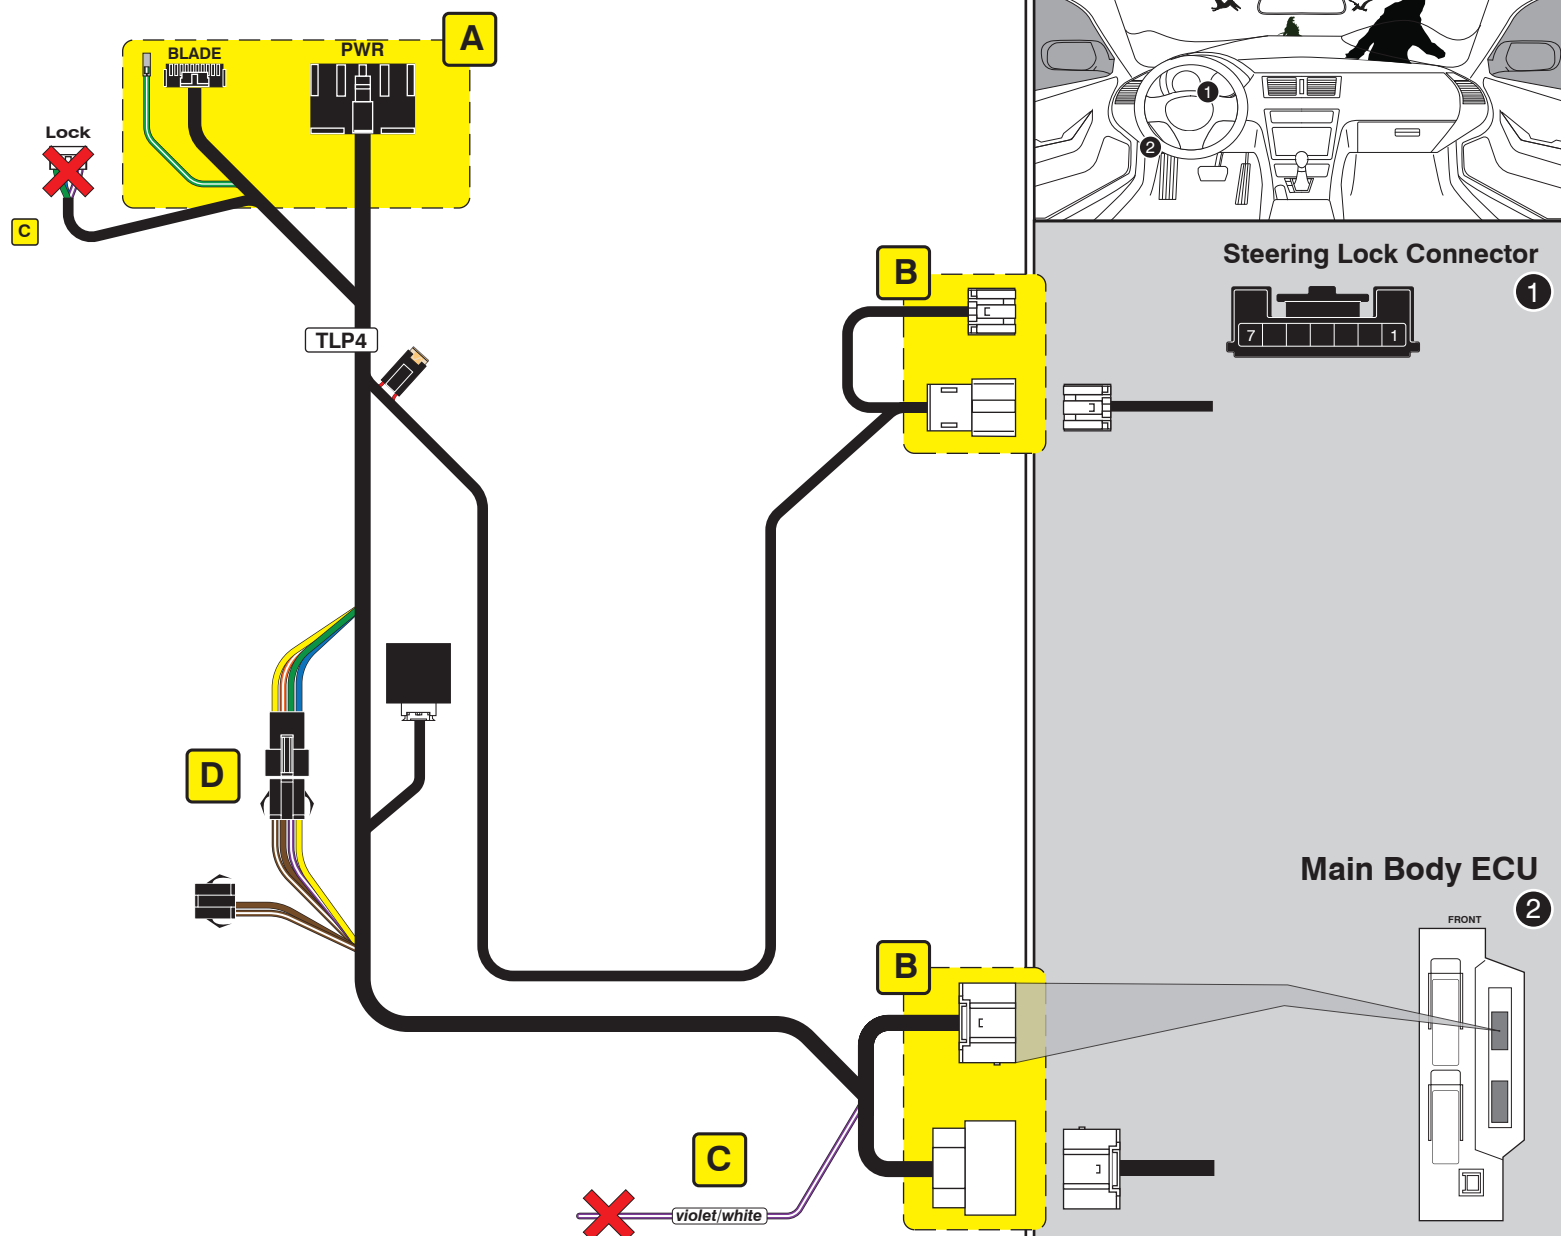


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - No CAN detected, check connections
- 2x - VIN not read, check connections
- 3x - VIN unknown, force platform
- 4x - No IMMO
- 5x - OEM remote starter detected, remove
- 6x - Key platform detected, check connections
- 7x - No RX detected, check connections
- 8x - No TX detected, check connections

TAKEOVER NOT SUPPORTED: THE VEHICLE WILL SHUT DOWN UPON OPENING DRIVER'S DOOR

CARTRIDGE INSTALLATION

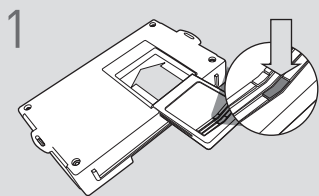

Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

 
MODULE PROGRAMMING PROCEDURE

NOTE

I Between each step, LED will turn solid RED, this is the default standby mode.



Push start button twice [2x] to ON position.




LED will turn solid RED.



Within 5 seconds, LED will flash BLUE rapidly.



Push start button once [1x] to OFF position.

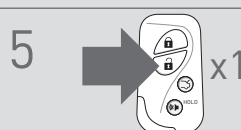

Press unlock button once [1x] on OEM keyfob.



Wait, LED will turn solid BLUE for 2 seconds.

7

Module Programming Procedure completed.

TAKEOVER NOT AVAILABLE