
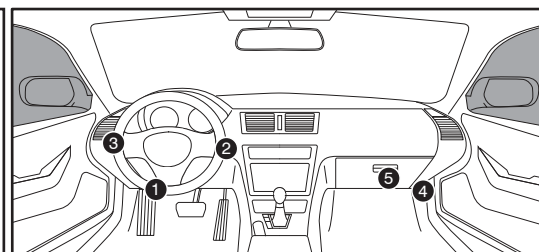



FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

El encendido de tipo 2 está disponible en el BCM del vehículo (conector C5, pin # 27, rosa / blanco).

MMOBILIZER DATA	●
ARM OEM ALARM	●
DISARM OEM ALARM	●
DOOR LOCK	●
DOOR UNLOCK	●
PRIORITY UNLOCK	●
TRUNK/HATCH RELEASE	●
POWER LIFTGATE	
POWER SLIDING DOOR (L)	
POWER SLIDING DOOR (R)	
SECURE TAKEOVER	●
DOOR STATUS	●
TRUNK STATUS	●
HOOD STATUS	●
E-BRAKE STATUS	●
WACH OUTPUT	●
BRAKE STATUS	●
LOW PLUG STATUS	
PARKING LIGHTS	●
HAZARD LIGHTS	
A/M CONTROL	●

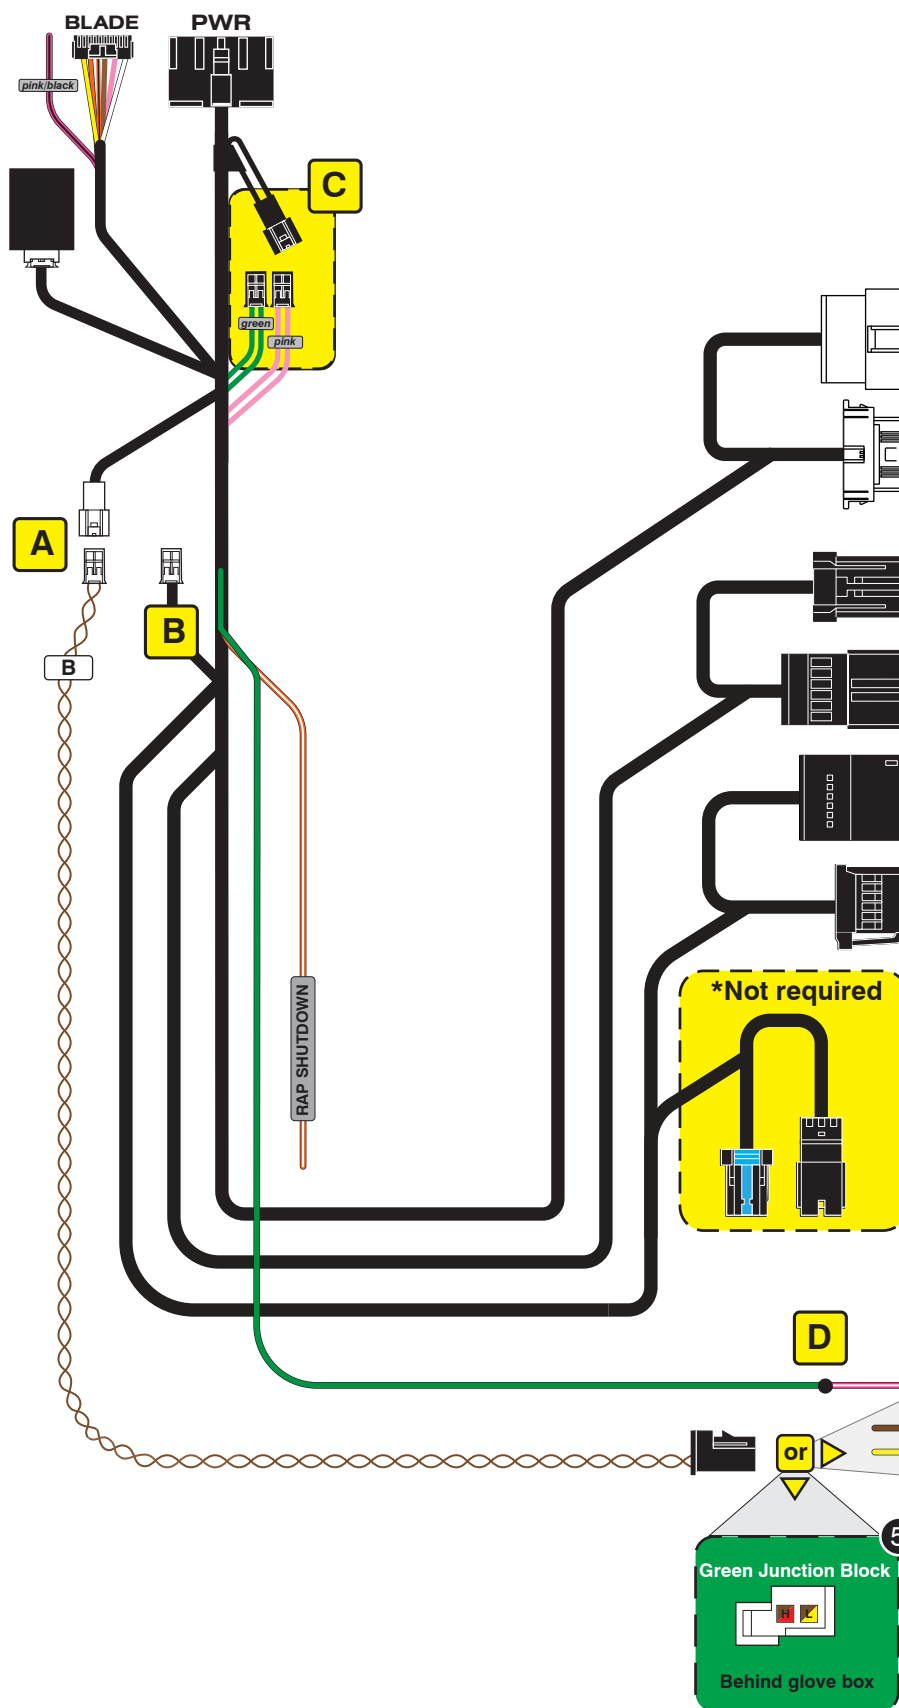

 
OBD-II connector




PTS Button





Headlight switch

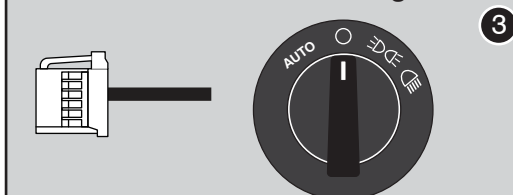

BCM

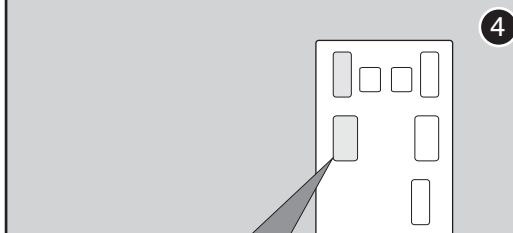

C5 - Ignition

 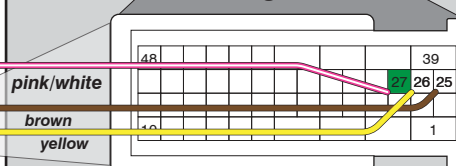

Códigos de error de programación de LED

 

 
 
 
El LED del módulo parpadea en ROJO durante la programación




- 1x - Error de CAN
- 2x - Código clave no aprendido
- 3x - Sin ENCENDIDO
- 4x - Sin inmovilizador, comprobar CAN / llave
- 5x - Error de VIN, verifique el cableado CAN
- 6x - Ver error 4x
- 7x - Error de KLON
- 8x - Sin ENCENDIDO, verifique la conexión

MODULE PROGRAMMING PROCEDURE - PTS

NOTE

I IMPORTANT: The hood must be closed.

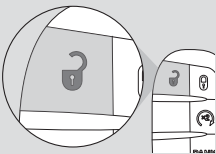- 1  Close driver door.
Re-open driver door to wake up data bus.
- 2  Press UNLOCK on OEM remote.
(If the vehicle is not equipped with an OEM remote, press on the module programming button.)
- 3  Wait, LED will flash BLUE once [1x]. If LED does not flash GREEN, repeat step 2.
- 4  Set ignition to ON position.
- 5  Wait, if LED turns solid RED proceed to step 6.
If LED flashes BLUE rapidly, proceed to step 10.
- 6  Set ignition to OFF position.
- 7  Repeat steps 4 to 6, eight times [8x].
- 8  Set ignition to ON position.
- 9  Wait, LED will flash BLUE rapidly.

   - 10  Set ignition to OFF position.
- 11  **WARNING:**
Disconnect power last.
Disconnect module from vehicle.
- 12  Connect module to computer and proceed with extended programming.
- 13  **WARNING:** Do not press module programming button.
Connect power first.
Connect module to vehicle.
- 14  Set ignition to ON position.
- 15  Wait, LED will turn solid BLUE for 2 seconds .
- 16  Set ignition to OFF position.
- 17 **Module Programming Procedure completed.**

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PTS - TO THE VEHICLE OWNER

NOTE

I All vehicle doors must be closed and locked prior to remote start sequence.




TIME RESTRICTI ⌚ ON COMING UP !

1



Unlock vehicle door using OEM or after-market remote, or door request switch.

2

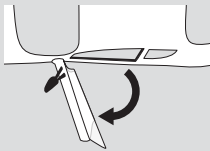

TIME RESTRICTI ⌚ ON

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.