

FIRSTECH, LLC.
SUPPORT • 1(888) 820-3690, EXT. 203

Type 6 ignition is at BCM connector C4 (60-pin connector, pin #3, brown). Caution, proper identification of circuits is crucial, there are two (2) brown wires in the same connector used for this install.

• FT-DAS Required for manual transmission.
 • BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting			
Parking Light			(+)Door Trigger In
Accessory			(-)Door Trigger In (Default)
Ignition (Default)			
Trunk			Starter
Starter			Ignition
Parking Light (Default)			Accessory (Default)

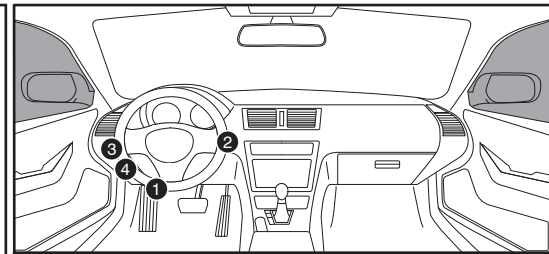
CM7000/7200

Cut loop for A/T

CM-900S/900AS

CM900AS/900S Jumper

START
ACC
IGN1



Module LED flashing RED during programming

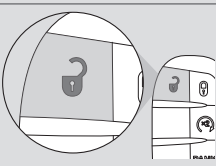
- 1x - CAN Error
- 2x - Key code not learned
- 3x - No IGNITION
- 4x - No immobilizer, check CAN/key
- 5x - VIN error, check CAN wiring
- 6x - See 4x error
- 7x - KLON error
- 8x - No IGNITION, check connection


MODULE PROGRAMMING PROCEDURE - PTS


NOTE

I IMPORTANT: The hood must be closed.

 
1  Close driver door.
Re-open driver door to wake up data bus.

 
2  Press UNLOCK on OEM remote.
(If the vehicle is not equipped with an OEM remote, press on the module programming button.)

3  Wait, LED will flash BLUE once [1x]. If LED does not flash GREEN, repeat step 2.


4  Set ignition to ON position.




5  Wait, if LED turns solid RED proceed to step 6.
If LED flashes BLUE rapidly, proceed to step 10.


6  Set ignition to OFF position.

 


7  Repeat steps 4 to 6, eight times [8x].

 
8  Set ignition to ON position.



 
9  Wait, LED will flash BLUE rapidly.

10  Set ignition to OFF position.




11  **WARNING:**
Disconnect power last.
Disconnect module from vehicle.

 
12  Connect module to computer and proceed with extended programming.

13  **WARNING:** Do not press module programming button.
Connect power first.
Connect module to vehicle.

14  Set ignition to ON position.



15  Wait, LED will turn solid BLUE for 2 seconds.

16  Set ignition to OFF position.



17 Module Programming Procedure completed.

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PTS - TO THE VEHICLE OWNER

NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.



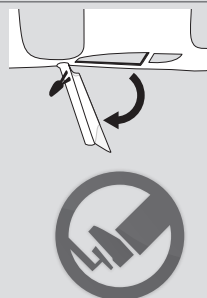
TIME RESTRICTION COMING UP !

1



Unlock vehicle door using OEM or after-market remote, or door request switch.

2



TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.