

FIRSTECH, LLC.
SUPPORT • 1(888) 820-3690, EXT. 203

Type 6 ignition is at BCM connector C4 (60-pin connector, pin #3, brown). Caution, proper identification of circuits is crucial, there are two (2) brown wires in the same connector used for this install.

• FT-DAS Required for manual transmission.
 • BOTH Red & Red/White MUST be connected with high current application.

Jumper		Setting	
Parking Light		(+)Door Trigger In	
Accessory		(-)Door Trigger In (Default)	
Ignition (Default)			
Trunk		Starter	
Starter		Ignition	
Parking Light (Default)		Accessory (Default)	

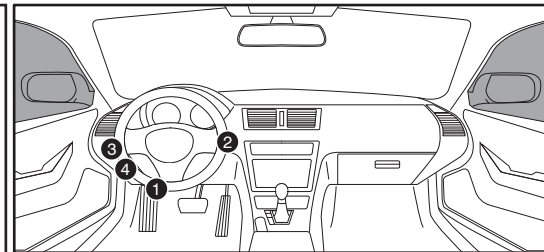
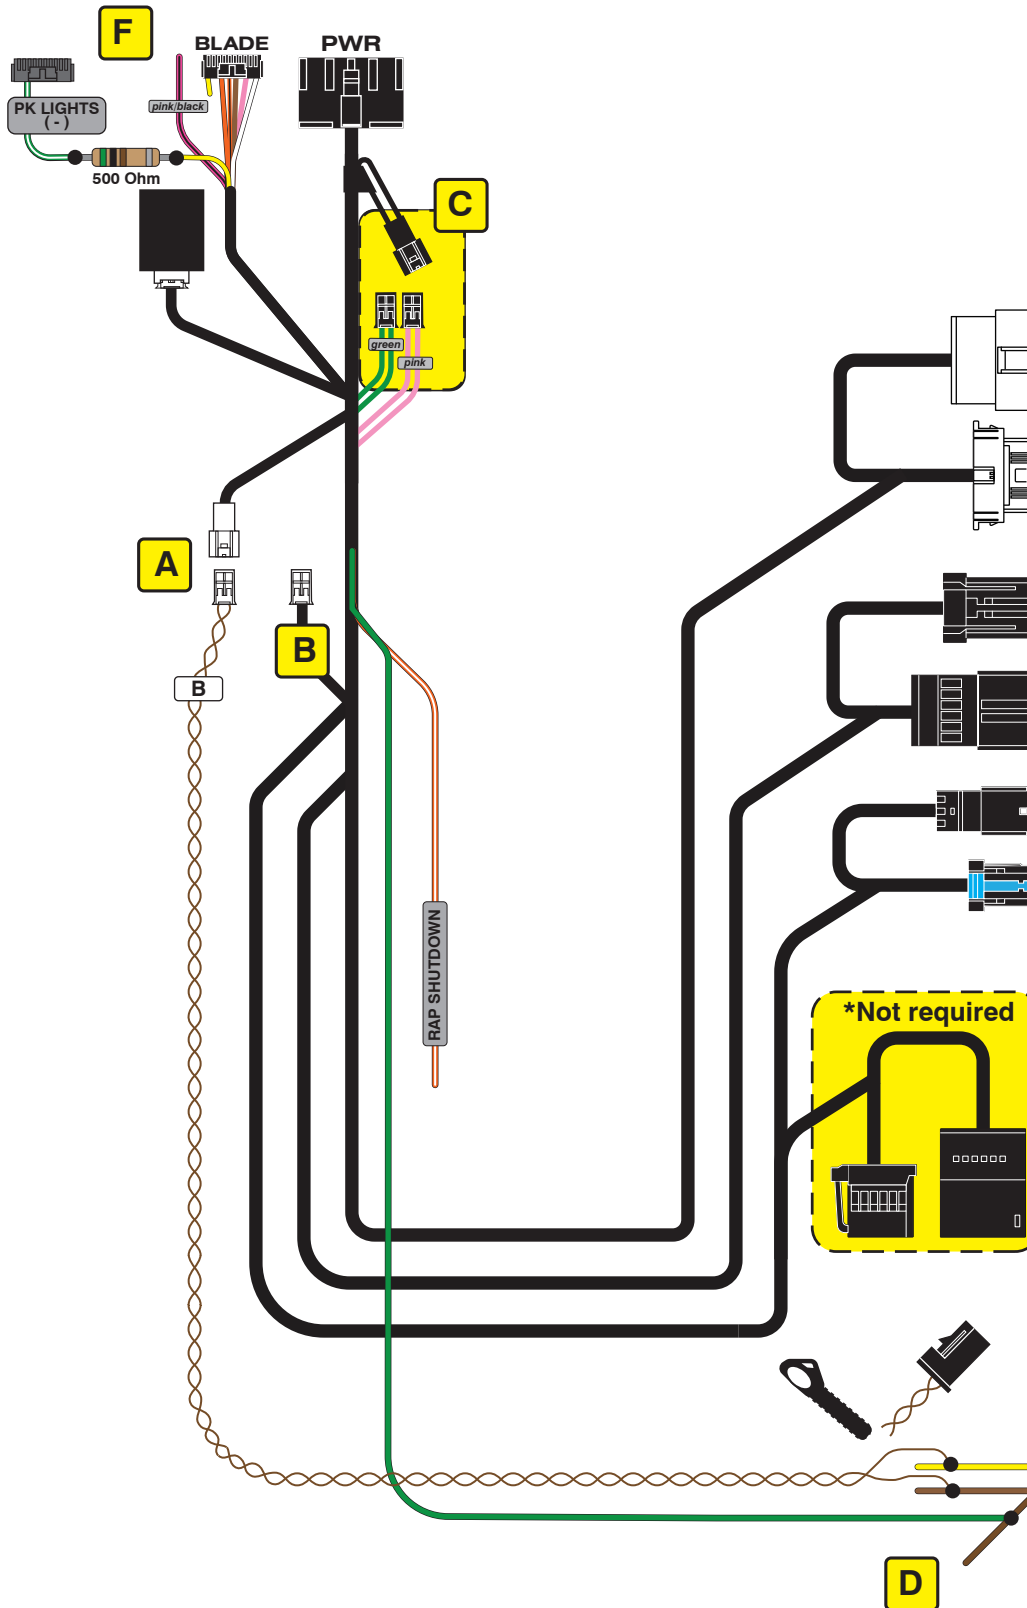
CM7000/7200

Cut loop for A/T

 
CM-900S/900AS

CM900AS/900S Jumper

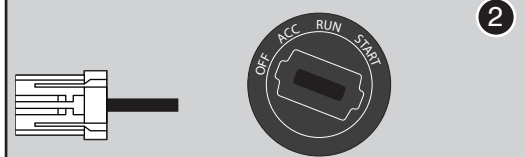
START
 ACC
 IGN1



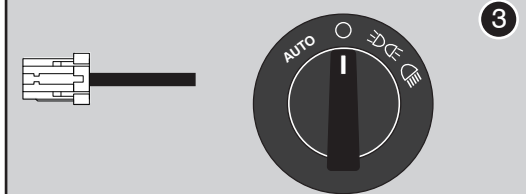
OBD-II connector



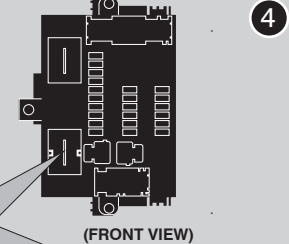
TIP Start Cylinder



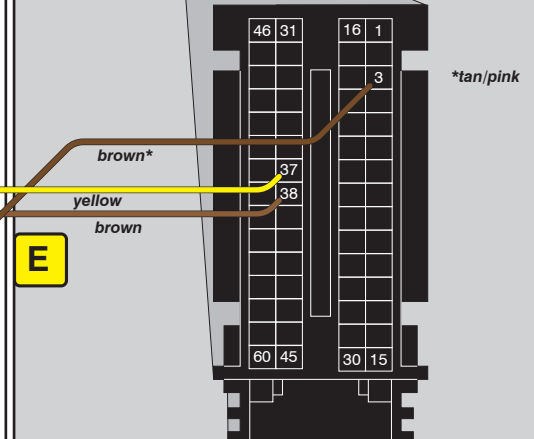
Headlight switch



BCM



C4 - BLACK



LED Programming Error Codes

 
Module LED flashing RED during programming

- 1x - CAN Error
- 2x - Key code not learned
- 3x - No IGNITION
- 4x - No immobilizer, check CAN/key
- 5x - VIN error, check CAN wiring
- 6x - See 4x error
- 7x - KLON error
- 8x - No IGNITION, check connection


MODULE PROGRAMMING PROCEDURE - TIP-START

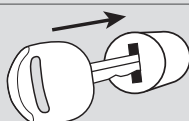
NOTE


I IMPORTANT: The hood must be closed.

1  Close driver door.
Re-open driver door to wake up data bus.

 
2  Press UNLOCK on OEM remote.

 
3  Wait, LED will flash BLUE once [1x]. If LED does not flash BLUE, repeat step 2.

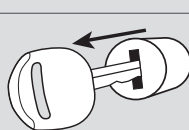
4  Insert key into ignition.


5  Wait, LED will flash BLUE twice [2x].

6  Turn key to ON position.

 
7  Wait, LED will turn solid RED.
If LED flashes BLUE rapidly, proceed to step 13.

 
8  Turn key to OFF position.

9  Remove key.

10  Repeat steps 4 to 9, eight times [8x].


11  Turn key to ON position.

12  Wait, LED will flash BLUE rapidly.

 
13  Turn key to OFF position.

 
14  **WARNING:**
Disconnect power last.
Disconnect module from vehicle.

 
15  Connect module to computer
and proceed with extended
programming.

16  **WARNING:** Do not press module
programming button.
Connect power first.
Connect module to vehicle.

17  Turn key to ON position.

18  Wait, LED will turn solid BLUE
for 2 seconds.

19  Turn key to OFF position.

20  Module Programming
Procedure completed.

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TIP-START - TO THE VEHICLE OWNER

NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.



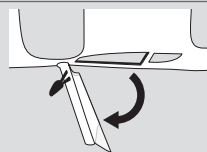
TIME RESTRICTION COMING UP !

1



Press UNLOCK on after-market remote.

2



TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.
Insert key into ignition.
Turn key to ON position.
Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure within time restriction will result in vehicle engine shutdown.