
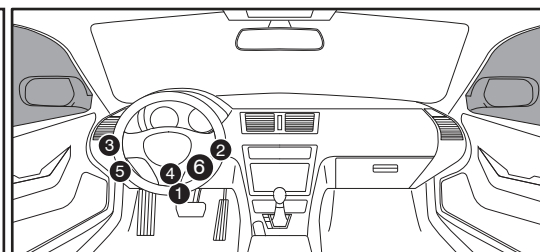


 
FIRSTECH, LLC.
SUPPORT - 1 (888) 820-3690, EXT. 203

Retained accessory power is handled by harness provision (orange/white),and is connected to the driver door pin circuit at the BCM (connector C6, pin #7, white purple).

| FEATURE COVERAGE | |
|------------------------|---|
| IMMOBILIZER DATA | ○ |
| ARM OEM ALARM | ○ |
| DISARM OEM ALARM | ○ |
| DOOR LOCK | ○ |
| DOOR UNLOCK | ○ |
| PRIORITY UNLOCK | ○ |
| TRUNK/HATCH RELEASE | ○ |
| POWER LIFTGATE | |
| POWER SLIDING DOOR (L) | |
| POWER SLIDING DOOR (R) | |
| SECURE TAKEOVER | ○ |
| DOOR STATUS | ○ |
| TRUNK STATUS | ○ |
| HOOD STATUS | ○ |
| E-BRAKE STATUS | ○ |
| WACH OUTPUT | ○ |
| BRAKE STATUS | ○ |
| LOW PLUG STATUS | |
| PARKING LIGHTS | ○ |
| HAZARD LIGHTS | |
| A/M CONTROL | ○ |
| | |

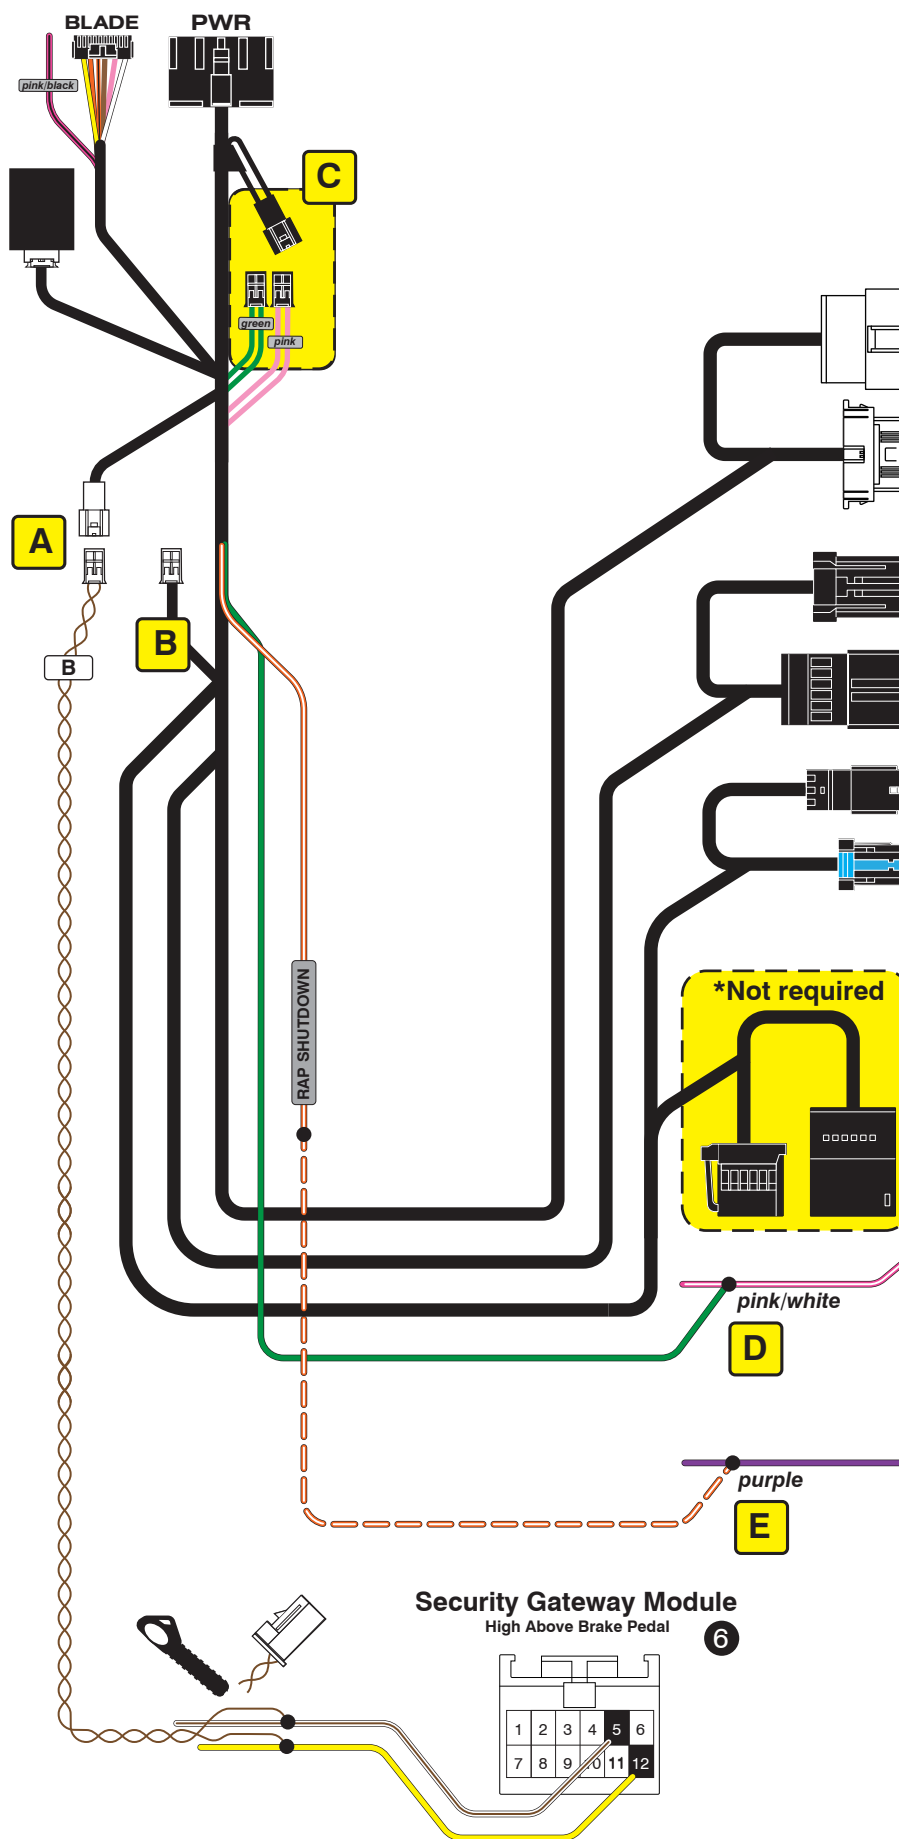


OBD-II connector



PTS Button



Headlight switch

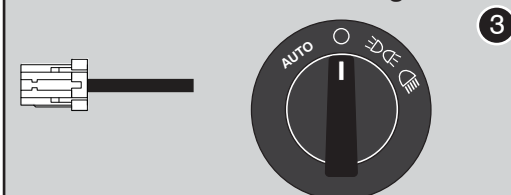


Power Steering Module

C2 - Under steering wheel



BCM

(FRONT VIEW)

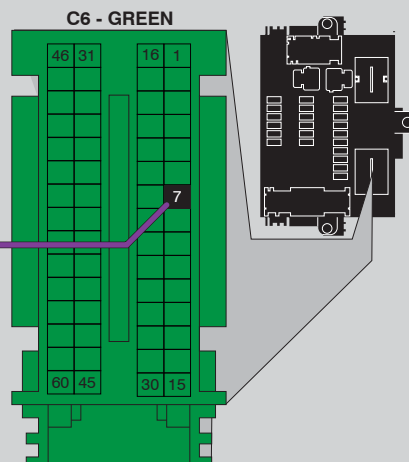

LED Programming Error Codes


Module LED flashing RED during programming


- 1x - CAN Error
- 2x - Key code not learned
- 3x - No IGNITION
- 4x - No immobilizer, check CAN/key
- 5x - VIN error, check CAN wiring
- 6x - See 4x error
- 7x - KLon error
- 8x - No IGNITION, check connection

 
MODULE PROGRAMMING PROCEDURE - PTS

NOTE

I **IMPORTANT:** The hood must be closed.

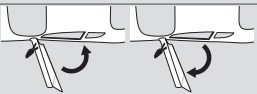
1  Close driver door.
Re-open driver door to wake up data bus.

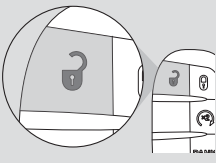
2  Press UNLOCK on OEM remote.
(If the vehicle is not equipped with an OEM remote, press on the module programming button.)

3  Wait, LED will flash BLUE once [1x]. If LED does not flash GREEN, repeat step 2.


4  Set ignition to ON position.

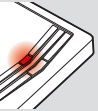


5  Wait, if LED turns solid RED proceed to step 6.
If LED flashes BLUE rapidly, proceed to step 10.

 
6  Set ignition to OFF position.




7  Repeat steps 4 to 6, eight times [8x].


8  Set ignition to ON position.




9  Wait, LED will flash BLUE rapidly.


10  Set ignition to OFF position.

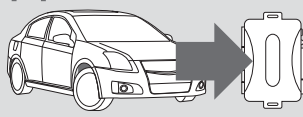


11  **WARNING:**
Disconnect power last.
Disconnect module from vehicle.


12  Connect module to computer and proceed with extended programming.

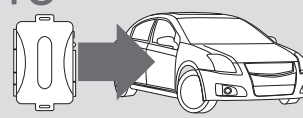13  **WARNING:** Do not press module programming button.
Connect power first.
Connect module to vehicle.

14  Set ignition to ON position.

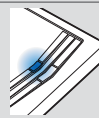

15  Wait, LED will turn solid BLUE for 2 seconds.

16  Set ignition to OFF position.



17 Module Programming Procedure completed.

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PTS - TO THE VEHICLE OWNER

NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.



TIME RESTRICTION COMING UP !

1



Unlock vehicle door using OEM or after-market remote, or door request switch.

2



TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.