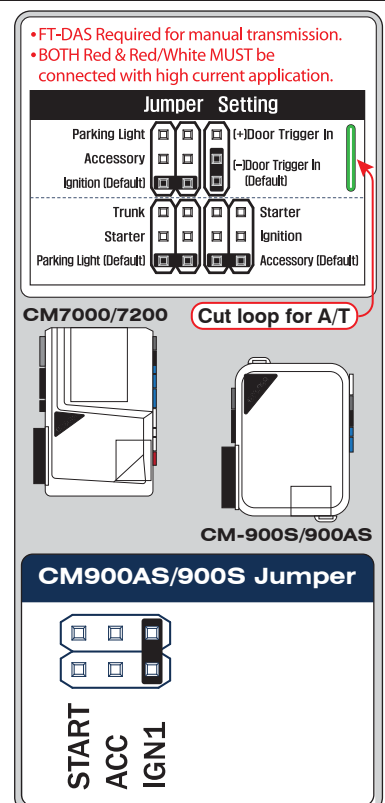


**FIRSTECH, LLC.**  
SUPPORT - 1(888) 820-3690, EXT. 203

Retained accessory power is handled by harness provision (orange/white),and is connected to the driver door pin circuit at the BCM (connector C6, pin #7, white purple).




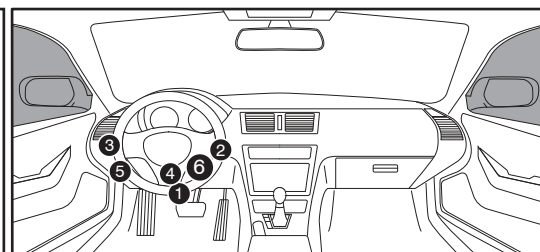


Diagram illustrating the correct grip for the tool handle, showing the thumb and index finger positioned to provide control and stability.

C2 - Under steering wheel

(FRONT VIEW)

**C6 - GREEN**

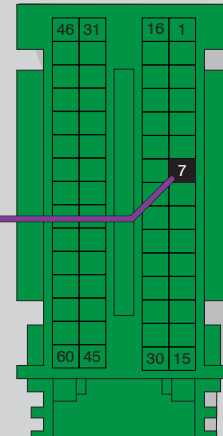


Module LED flashing RED during programming


- 1x - CAN Error
- 2x - Key code not learned
- 3x - No IGNITION
- 4x - No immobilizer, check CAN/key
- 5x - VIN error, check CAN wiring
- 6x - See 4x error
- 7x - KLON error
- 8x - No IGNITION, check connection


## MODULE PROGRAMMING PROCEDURE - PTS


### NOTE

I **IMPORTANT:** The hood must be closed.

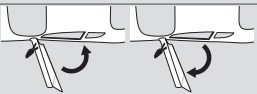
**1**  Close driver door.  
Re-open driver door to wake up data bus.

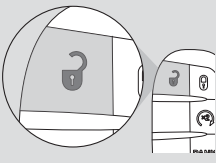
**2**  Press UNLOCK on OEM remote.  
(If the vehicle is not equipped with an OEM remote, press on the module programming button.)

**3**  Wait, LED will flash BLUE once [1x]. If LED does not flash GREEN, repeat step 2.


**4**  Set ignition to ON position.

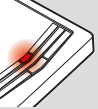

**5**  Wait, if LED turns solid RED proceed to step 6.  
If LED flashes BLUE rapidly, proceed to step 10.


**6**  Set ignition to OFF position.




**7**  Repeat steps 4 to 6, eight times [8x].


**8**  Set ignition to ON position.




**9**  Wait, LED will flash BLUE rapidly.


**10**  Set ignition to OFF position.

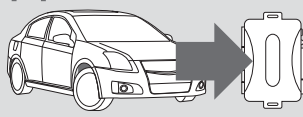


**11**  **WARNING:**  
Disconnect power last.  
Disconnect module from vehicle.


**12**  Connect module to computer and proceed with extended programming.

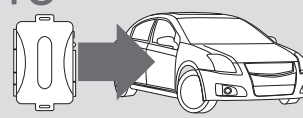**13**  **WARNING:** Do not press module programming button.  
Connect power first.  
Connect module to vehicle.

**14**  Set ignition to ON position.



**15**  Wait, LED will turn solid BLUE for 2 seconds.

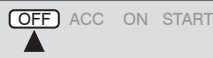**16**  Set ignition to OFF position.



**17** Module Programming Procedure completed.

## WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

### IMPORTANT

- I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

## TAKE OVER PROCEDURE - PTS - TO THE VEHICLE OWNER

### NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.



**TIME RESTRICTION COMING UP !**

1



Unlock vehicle door using OEM or after-market remote, or door request switch.

2



### TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door.  
Enter vehicle.  
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.