

FIRSTECH, LLC.
SUPPORT • 1(888) 820-3690, EXT. 203

Type 7 ignition is available at the security gateway module connector, behind driver side speaker, connector C-1 (black 12-pin, pin #7, pink/green).

• FT-DAS Required for manual transmission.
 • BOTH Red & Red/White MUST be connected with high current application.

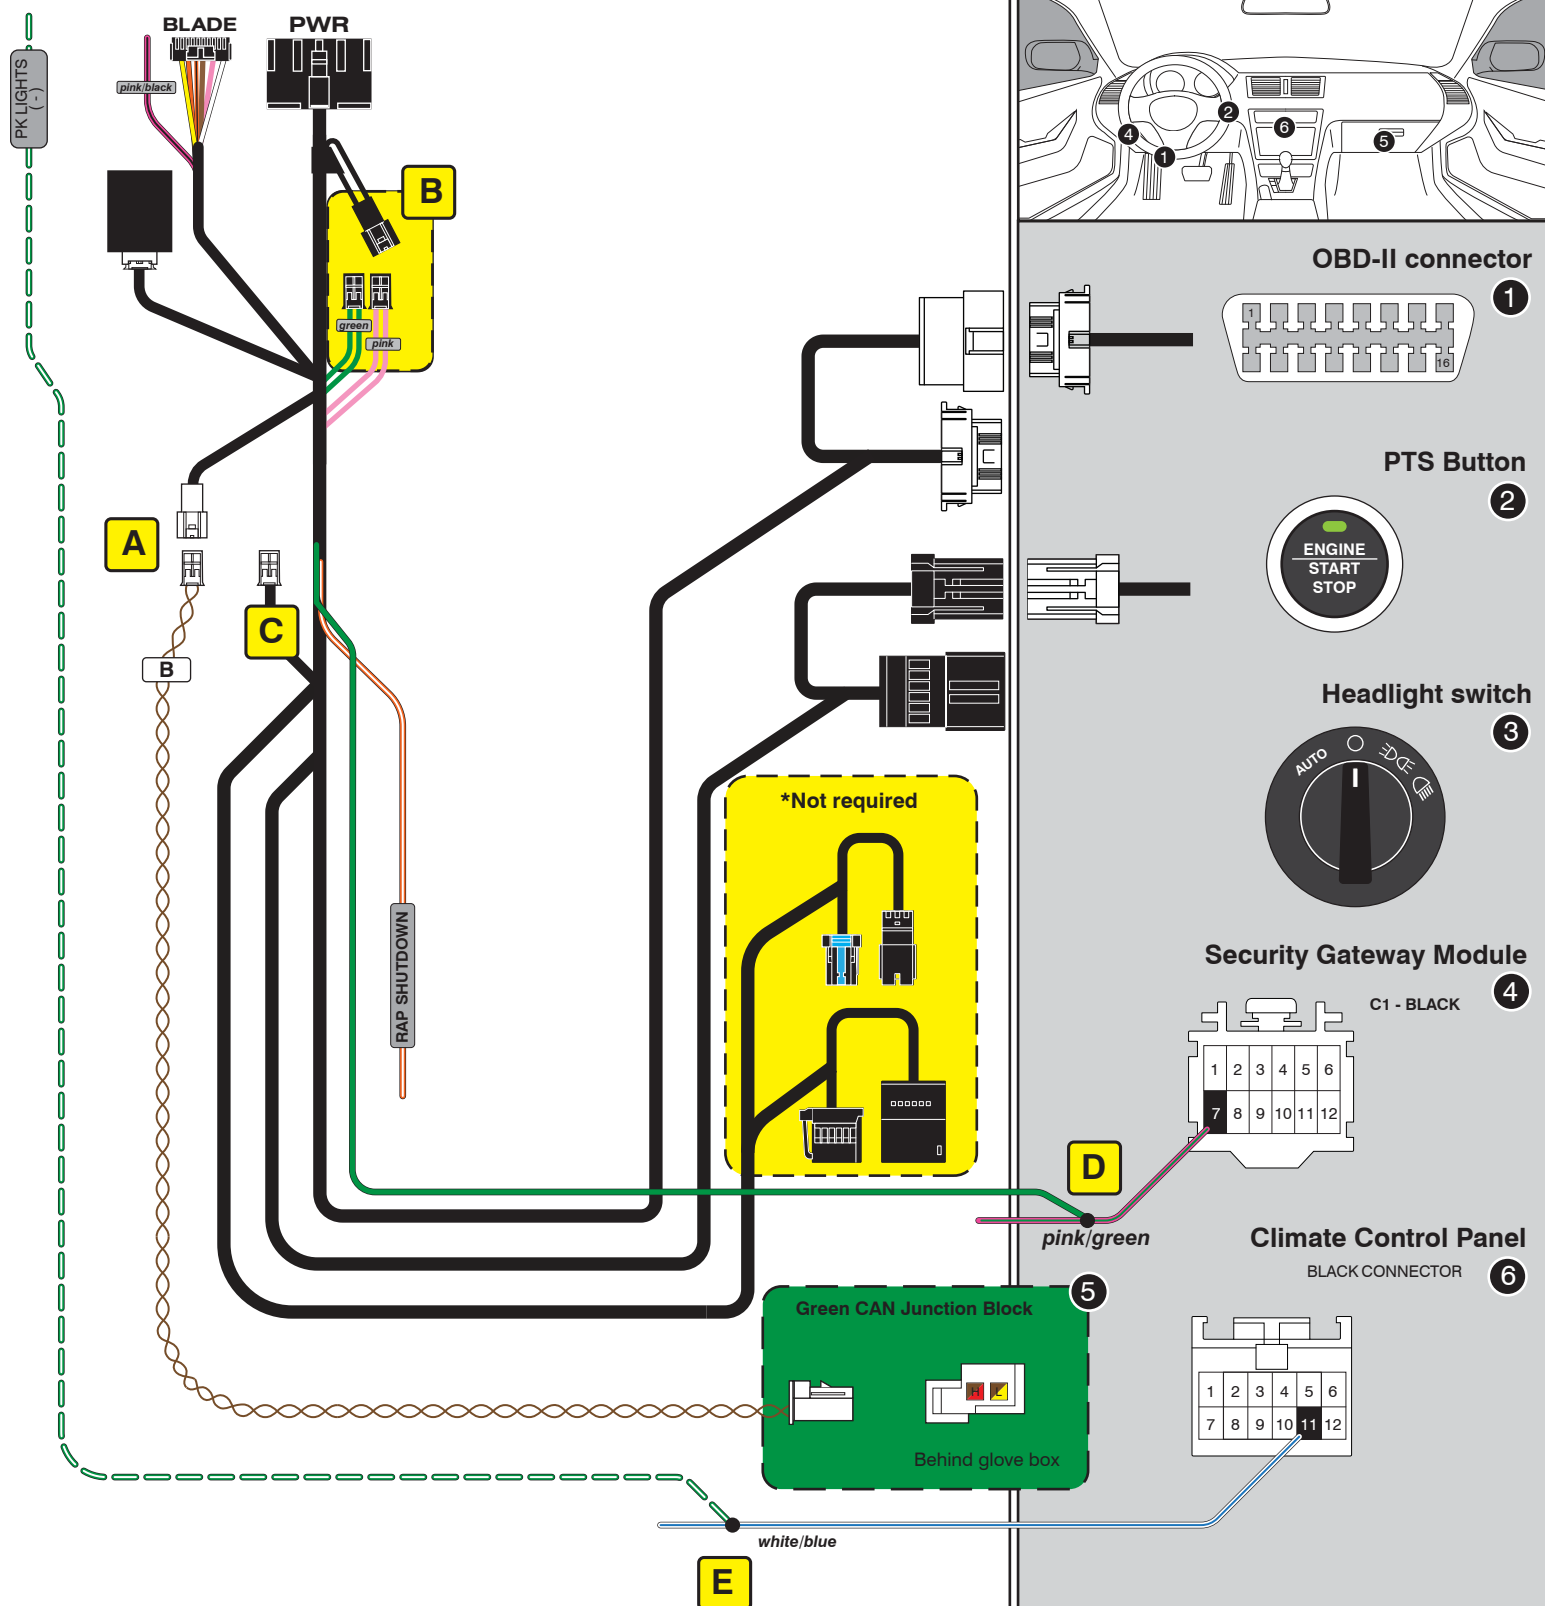
Jumper Setting	
Parking Light	(+)Door Trigger In
Accessory	(-)Door Trigger In (Default)
Ignition (Default)	
Trunk	Starter
Starter	Ignition
Parking Light (Default)	Accessory (Default)

CM7000/7200 Cut loop for A/T

CM900AS/900S Jumper



FEATURE COVERAGE	
IMMOBILIZER DATA	○
ARM OEM ALARM	○
DISARM OEM ALARM	○
DOOR LOCK	○
DOOR UNLOCK	○
PRIORITY UNLOCK	○
TRUNK/HATCH RELEASE	
POWER LIFTGATE	
POWER SLIDING DOOR (L)	
POWER SLIDING DOOR (R)	
SECURE TAKEOVER	○
DOOR STATUS	○
TRUNK STATUS	○
HOOD STATUS	○
E-BRAKE STATUS	○
TACH OUTPUT	○
BRAKE STATUS	○
LOW PLUG STATUS	
PARKING LIGHTS	
HAZARD LIGHTS	○
A/M CONTROL	○



LED Programming Error Codes

Module LED flashing RED during programming

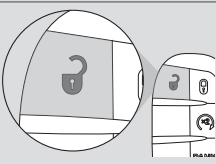
- 1x - CAN Error
- 2x - Key code not learned
- 3x - No IGNITION
- 4x - No immobilizer, check CAN/key
- 5x - VIN error, check CAN wiring
- 6x - See 4x error
- 7x - KLON error
- 8x - No IGNITION, check connection

 
MODULE PROGRAMMING PROCEDURE - PTS

NOTE

I IMPORTANT: The hood must be closed.

 
1  Close driver door.
Re-open driver door to wake up data bus.

2  Press UNLOCK on OEM remote.
(If the vehicle is not equipped with an OEM remote, press on the module programming button.)

3  Wait, LED will flash BLUE once [1x]. If LED does not flash GREEN, repeat step 2.

4  Set ignition to ON position.

 


5  Wait, if LED turns solid RED proceed to step 6.
If LED flashes BLUE rapidly, proceed to step 10.


6  Set ignition to OFF position.



7  Repeat steps 4 to 6, eight times [8x].

8  Set ignition to ON position.




9  Wait, LED will flash BLUE rapidly.


10  Set ignition to OFF position.




11  **WARNING:**
Disconnect power last.
Disconnect module from vehicle.

 
12  Connect module to computer and proceed with extended programming.

13  **WARNING:** Do not press module programming button.
Connect power first.
Connect module to vehicle.

14  Set ignition to ON position.



15  Wait, LED will turn solid BLUE for 2 seconds .

16  Set ignition to OFF position.



17 **Module Programming Procedure completed.**

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PTS - TO THE VEHICLE OWNER

NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.



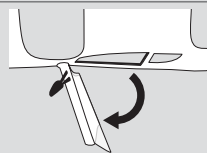
TIME RESTRICTI ⌚ ON COMING UP !

1



Unlock vehicle door using OEM or after-market remote, or door request switch.

2



TIME RESTRICTI ⌚ ON

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.