

FIRSTECH, LLC.
SUPPORT - 1 (888) 820-3690, EXT. 203

El encendido Tipo 4 está disponible en el conector del módulo del remolque (TMC), ubicado a la derecha de la columna de dirección en el conector gris de 10 pines (pin # 10, rosa / verde).

• FT-DAS Required for manual transmission.
 • BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting			
Parking Light			(+)Door Trigger In
Accessory			(-)Door Trigger In
Ignition (Default)			(Default)
Trunk			Starter
Starter			Ignition
Parking Light (Default)			Accessory (Default)

CM7000/7200
 Cut loop for A/T



CM-900S/900AS

CM900AS/900S Jumper

 
START
ACC
IGN1



COBERTURA DE FUNCIONES	
IMMOBILIZER DATA	●
ARM OEM ALARM	●
DISARM OEM ALARM	●
DOOR LOCK	●
DOOR UNLOCK	●
PRIORITY UNLOCK	●
TRUNK/HATCH RELEASE	●
POWER LIFTGATE	
POWER SLIDING DOOR (L)	
POWER SLIDING DOOR (R)	
SECURE TAKEOVER	●
DOOR STATUS	●
TRUNK STATUS	●
HOOD STATUS	●
E-BRAKE STATUS	●
WIPER OUTPUT	●
BRAKE STATUS	●
LEGLOW PLUG STATUS	
PARKING LIGHTS	●
HAZARD LIGHTS	
A/M CONTROL	●

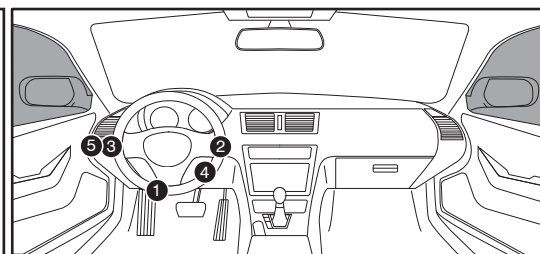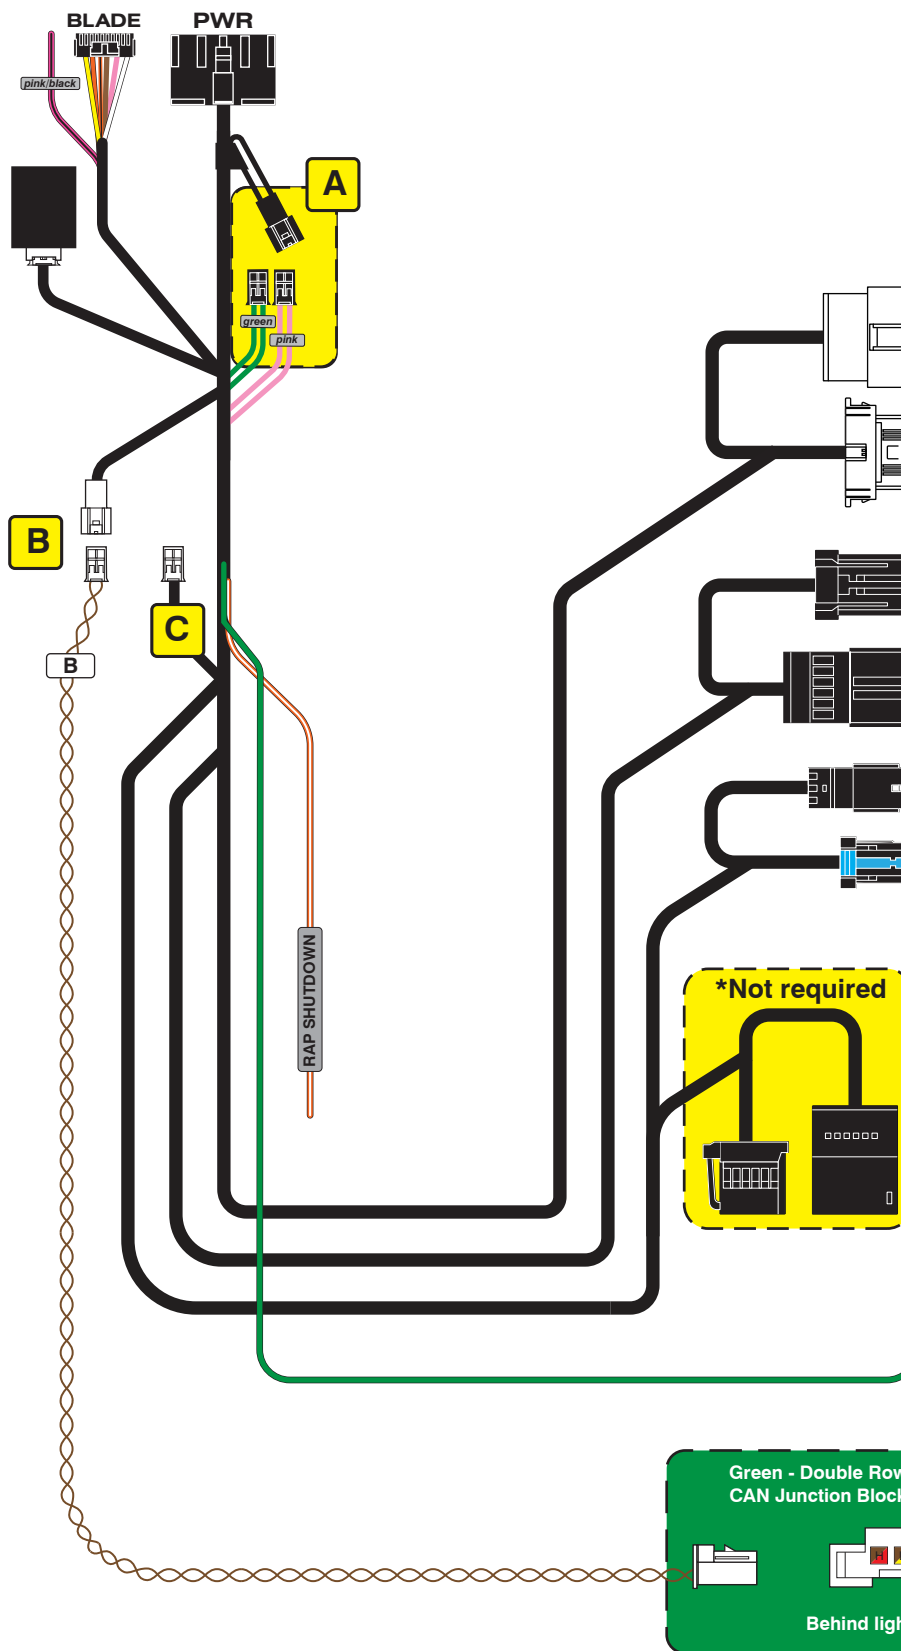


OBD-II connector




PTS Button



Headlight switch

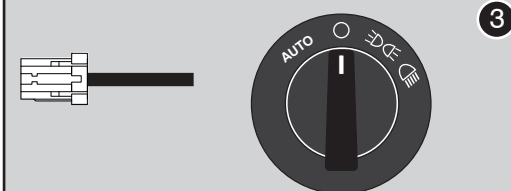


Trailer Module Connector

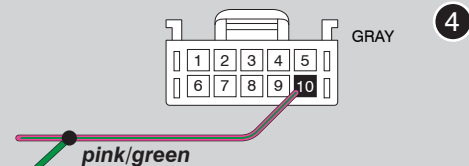

CAN Junction Block (behind light switch)

Green CAN-C Junction Block

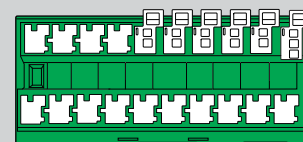

Códigos de error de programación de LED

 
El LED del módulo parpadea en ROJO durante la programación


- 1x - Error de CAN
- 2x - Código clave no aprendido
- 3x - Sin ENCENDIDO
- 4x - Sin inmovilizador, comprobar CAN / llave
- 5x - Error de VIN, verifique el cableado CAN
- 6x - Ver error 4x
- 7x - Error de KLON
- 8x - Sin ENCENDIDO, verifique la conexión

MODULE PROGRAMMING PROCEDURE - PTS

NOTE

I IMPORTANT: The hood must be closed.

1  Close driver door.
Re-open driver door to wake up data bus.

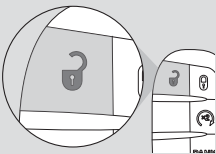2  Press UNLOCK on OEM remote.
(If the vehicle is not equipped with an OEM remote, press on the module programming button.)

3  Wait, LED will flash BLUE once [1x]. If LED does not flash GREEN, repeat step 2.

4  Set ignition to ON position.



5  Wait, if LED turns solid RED proceed to step 6.
If LED flashes BLUE rapidly, proceed to step 10.

 
6  Set ignition to OFF position.



7  Repeat steps 4 to 6, eight times [8x].

 
8  Set ignition to ON position.



 
9  Wait, LED will flash BLUE rapidly.

10  Set ignition to OFF position.



 
11  **WARNING:**
Disconnect power last.
Disconnect module from vehicle.

12  Connect module to computer and proceed with extended programming.

13  **WARNING:** Do not press module programming button.
Connect power first.
Connect module to vehicle.

14  Set ignition to ON position.



15  Wait, LED will turn solid BLUE for 2 seconds .

16  Set ignition to OFF position.



17 Module Programming Procedure completed.

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PTS - TO THE VEHICLE OWNER

NOTE

I All vehicle doors must be closed and locked prior to remote start sequence.




TIME RESTRICTI ⌚ ON COMING UP !

1



Unlock vehicle door using OEM or after-market remote, or door request switch.

2

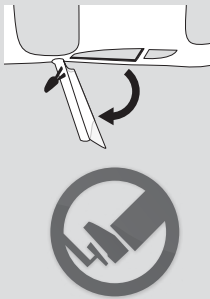

TIME RESTRICTI ⌚ ON

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.