 
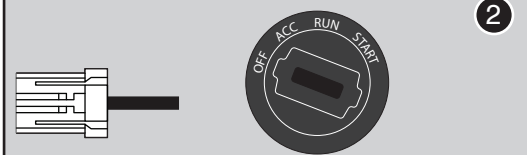



OBD-II connector




TIP Start Cylinder



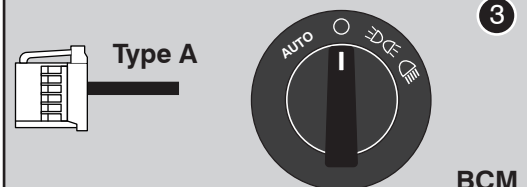
Headlight switch



BCM

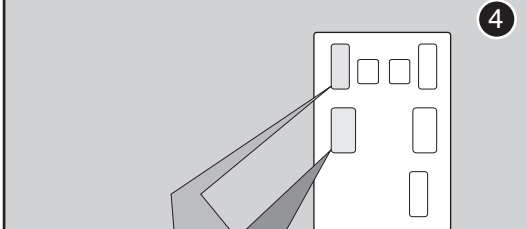


C5 - Ignition

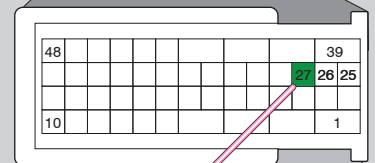

pink/white

violet/blue

 C1 - Hood pin (-)

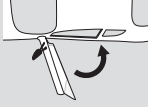
 
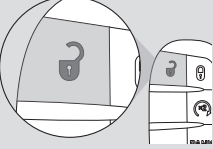
 
 
 
 
 
 
 

 
 
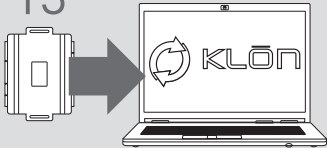

 
 
 
 
 


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - CAN Error, check CAN wiring and voltages
- 2x - Key code not learned, confirm unlock sent, check CAN
- 3x - No immobilizer data, check immo data connection
- 4x - No IGN, check IGN connection
- 5x - VIN not found, check CAN connections
- 6x - No immobilizer data, check immo data connection
- 7x - Not the same key, use only one key for programming
- 8x - No immobilizer data, check immo data connection
- 9x - No immobilizer data 10x - Klon error, redo Klon

MODULE PROGRAMMING PROCEDURE - WITH KLON

- | | | | | | | | | | | | | | | | | | | | |
|--|---|--|--|---|---|---|---|--|---|---|--|---|--|--|---|---|---|---|--|
| <p>1</p>  <p>Close driver door.</p>  <p>Re-open driver door to wake up data bus.</p> | <p>2</p>  <p>Press UNLOCK on OEM remote.
If the vehicle is not equipped with an OEM remote, press the module programming button.</p> | <p>3</p>  <p>Wait, LED will flash BLUE once [1x].</p> | <p>4</p>  <p>Turn key to ON position.</p> | <p>5</p>  <p>Wait, LED will turn solid RED.</p> | <p>6</p>  <p>Turn key to OFF position.</p> | <p>7</p>  <p>Remove key.</p> | <p>8</p>  <p>Insert key into ignition.</p> | <p>9</p>  <p>Turn key to ON position.</p> | <p>10</p>  <p>Wait, LED will flash BLUE.</p> | <p>11</p>  <p>Turn key to OFF position.</p> | <p>12</p>  <p>WARNING:
Disconnect power last.
Disconnect RS from vehicle.</p> | <p>13</p>  <p>Connect RS to computer and proceed with extended programming.</p> | <p>14</p>  <p>WARNING: Do not press RS programming button.
Connect power first.
Connect RS to vehicle.</p> | <p>15</p>  <p>Turn key to ON position.</p> | <p>16</p>  <p>Wait, LED will turn solid BLUE for 2 seconds.</p> | <p>17</p>  <p>Turn key to OFF position.</p> | <p>18</p>  <p>Turn key to START position.</p> | <p>19</p>  <p>Turn key to OFF position.</p> | <p>20</p> <p>Module Programming Procedure completed.</p> |
|--|---|--|--|---|---|---|---|--|---|---|--|---|--|--|---|---|---|---|--|

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

NOTE

- All vehicle doors must be closed and locked prior to remote start sequence.



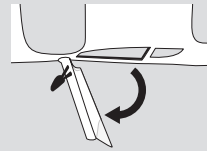
TIME RESTRICTION COMING UP !

1



Press UNLOCK on after-market remote.

2



TIME RESTRICTION

Within 45 SECONDS from previous step:

- Open vehicle door.
- Enter vehicle.
- Close vehicle door.
- Insert key into ignition.
- Turn key to ON position.
- Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure within time restriction will result in vehicle engine shutdown.