 
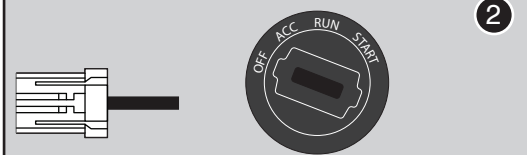



**OBD-II connector**




**TIP Start Cylinder**



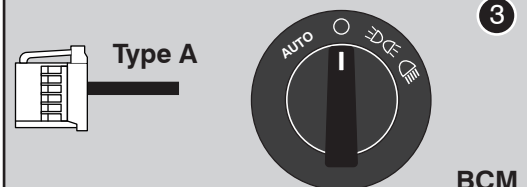
**Headlight switch**




**BCM**

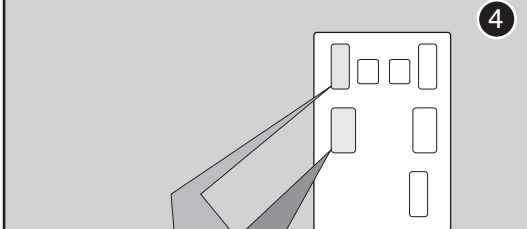

**C5 - Ignition**

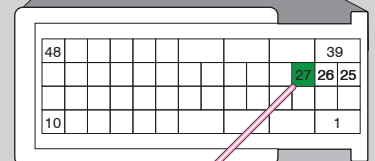

**C1 - Hood pin (-)**

 

*pink/white*

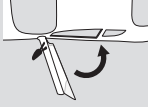
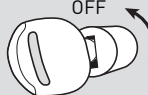
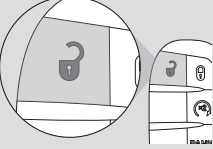
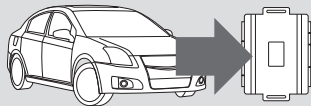
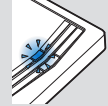
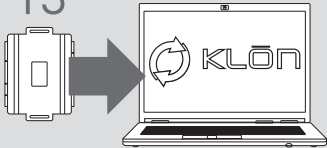
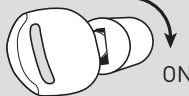

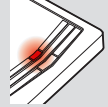
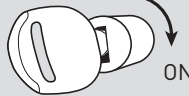
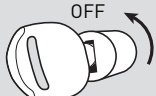
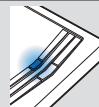
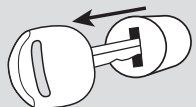
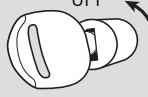
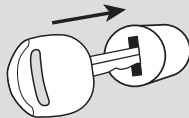




*violet/blue*

**LED Programming Error Codes**

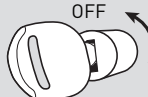Module LED flashing RED during programming

- 1x - CAN Error, check CAN wiring and voltages
- 2x - Key code not learned, confirm unlock sent, check CAN
- 3x - No immobilizer data, check immo data connection
- 4x - No IGN, check IGN connection
- 5x - VIN not found, check CAN connections
- 6x - No immobilizer data, check immo data connection
- 7x - Not the same key, use only one key for programming
- 8x - No immobilizer data, check immo data connection
- 9x - No immobilizer data 10x - Klon error, redo Klon

## MODULE PROGRAMMING PROCEDURE - WITH KLON

- |   |   |  |  |
|---|---|--|--|
| <p>1</p>     | <p>Close driver door.</p>   | <p>11</p>    | <p>Turn key to OFF position.</p>   |
| <p>2</p>     | <p>Re-open driver door to wake up data bus.</p> <p>Press UNLOCK on OEM remote.</p> <p>If the vehicle is not equipped with an OEM remote, press the module programming button.</p> | <p>12</p>    | <p><b>WARNING:</b><br/>Disconnect power last.<br/>Disconnect RS from vehicle.</p>                              |
| <p>3</p>     | <p>Wait, LED will flash BLUE once [1x].</p>   | <p>13</p>    | <p>Connect RS to computer and proceed with extended programming.</p>   |
| <p>4</p>     | <p>Turn key to ON position.</p>   | <p>14</p>   | <p><b>WARNING:</b> Do not press RS programming button.<br/>Connect power first.<br/>Connect RS to vehicle.</p> |
| <p>5</p>    | <p>Wait, LED will turn solid RED.</p>   | <p>15</p>  | <p>Turn key to ON position.</p>  |
| <p>6</p>   | <p>Turn key to OFF position.</p>  | <p>16</p>  | <p>Wait, LED will turn solid BLUE for 2 seconds.</p>   |
| <p>7</p>   | <p>Remove key.</p>  | <p>17</p>  | <p>Turn key to OFF position.</p>   |
| <p>8</p>   | <p>Insert key into ignition.</p>  | <p>18</p>  | <p>Turn key to START position.</p>   |
| <p>9</p>   | <p>Turn key to ON position.</p>   | <p>19</p>  | <p>Turn key to OFF position.</p>   |
| <p>10</p>  | <p>Wait, LED will flash BLUE.</p>   | <p>20</p>  | <p>Module Programming Procedure completed.</p>   |

## WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

### IMPORTANT

- All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

## TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

### NOTE

- All vehicle doors must be closed and locked prior to remote start sequence.



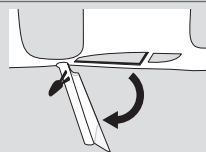
**TIME RESTRICTION COMING UP !**

1



Press UNLOCK on after-market remote.

2



### TIME RESTRICTION

Within 45 SECONDS from previous step:

- Open vehicle door.
- Enter vehicle.
- Close vehicle door.
- Insert key into ignition.
- Turn key to ON position.
- Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure within time restriction will result in vehicle engine shutdown.