

FTI-CDP1 - Vehicle Coverage and Preparation Notes

Make	Model	Year	Install	CAN	Lights	IGN	Hood	I/O Changes
DL-CH8 RAM	1500 TIP Start	2013-17	Type 1	OBD-II	Park / Auto Type B	BCM	BCM	Green White/Blue

Firmware: Covered vehicles use **BLADE-AL(DL)-CH8**, confirm application, flash module, and update the controller firmware before installing.

CAN: **Type 1** vehicles use CAN connections in harness at OBD-II, the included CAN extension is not required for this install type.

Lighting: **Type B** parking lights use the 10-pin connector, please ensure that the unused 6-pin connector is properly secured for safety.

Ignition: Common ignition provisions are listed in the BLADE diagram, ignition is also available at the vehicle BCM (connector C5/E, **pink/white**, pin #27),

FTI-CDP1 - Installation and Configuration Notes

- A** Required CAN connections.
- B** Not required.
- C** Hood pin connection (if required).
- D** Ignition jumper, NO CONNECTION required.
- E** Ignition connection.

•FT-DAS Required for manual transmission.
•BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting

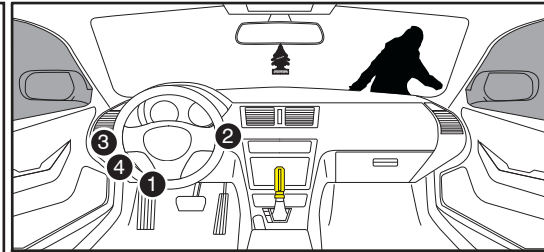
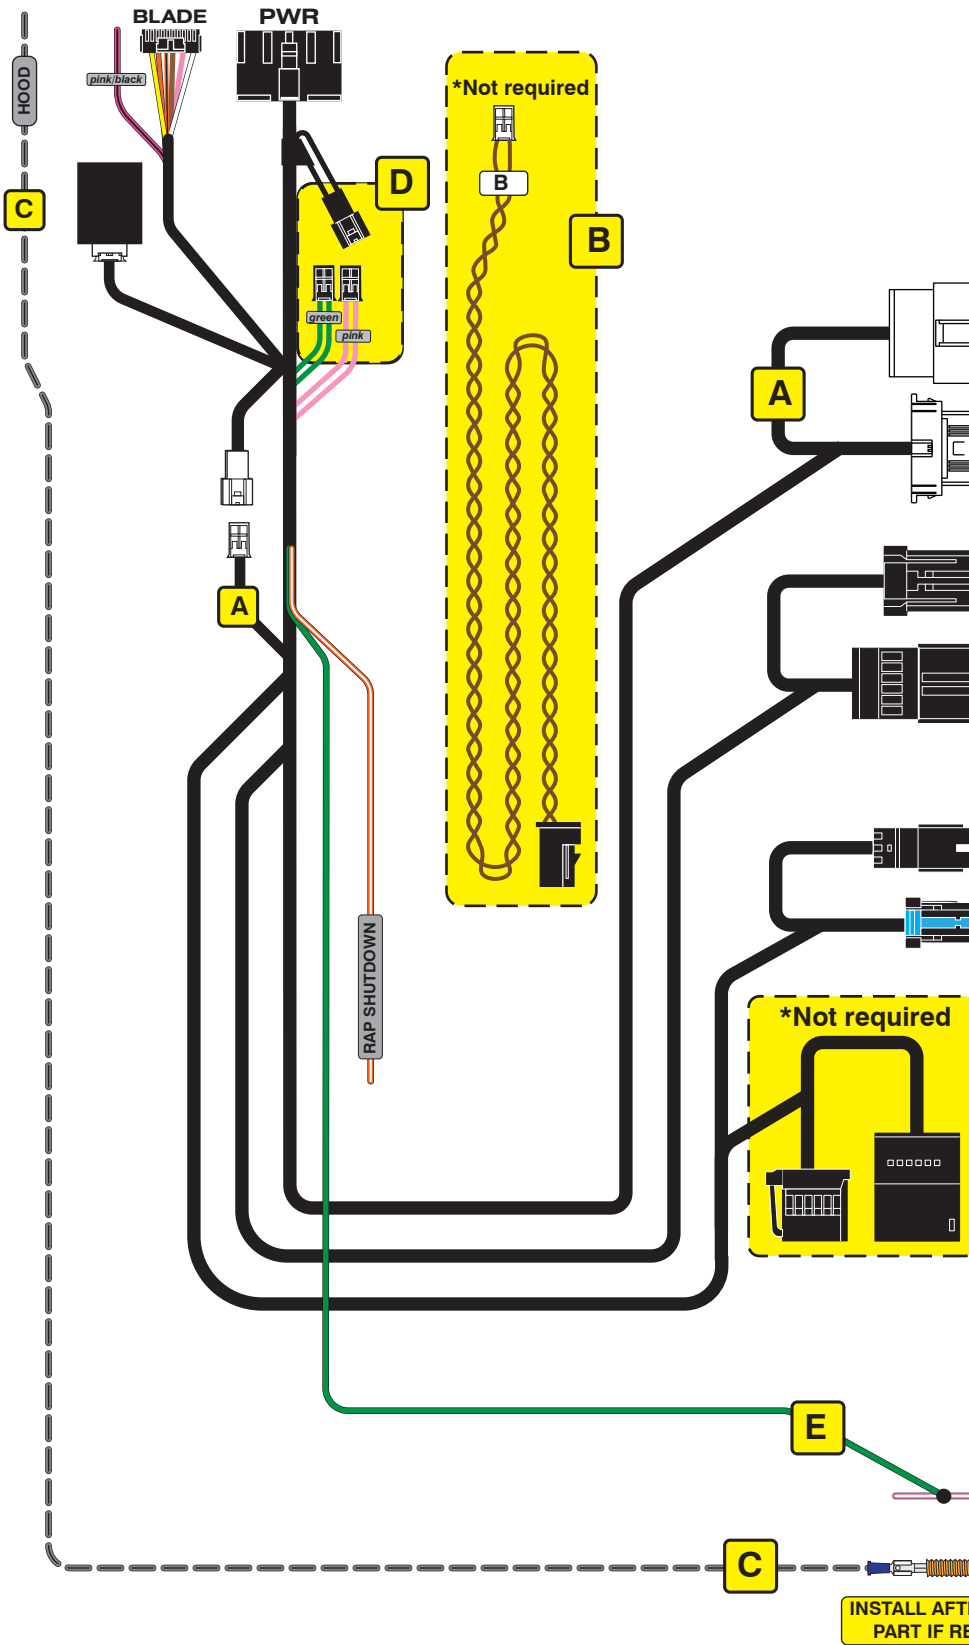
CM7000/7200 Cut loop for A/T

CM-900S/900AS


CM900AS/900S Jumper




BLADE FEATURE COVERAGE																				
IMMOBILIZER DATA	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM					DOOR STATUS	RAP SHUTDOWN	BRAKE STATUS	E-BRAKE STATUS	TACH OUTPUT			SECURE TAKEOVER	PARKING LIGHTS		




OBD-II connector

 


TIP Start Cylinder

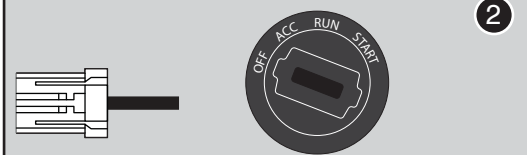

Headlight switch

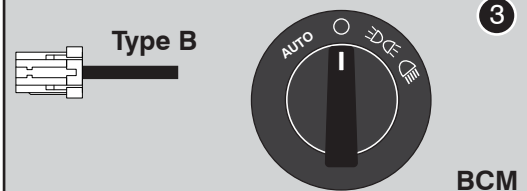

BCM

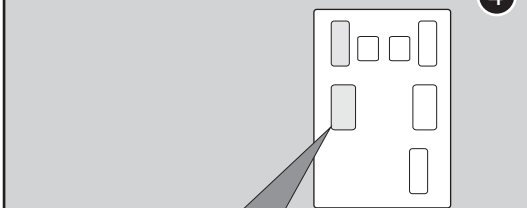

C5 - Ignition

48																				39			
																				27	26	25	
																							1

pink/white

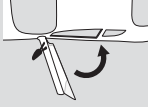
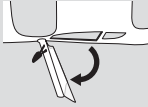
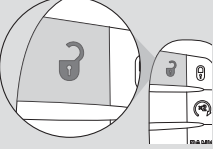
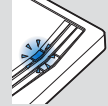
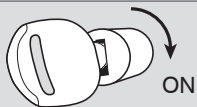
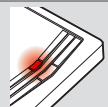
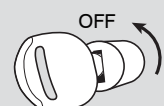
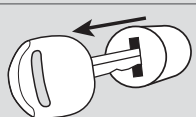
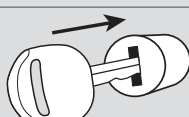
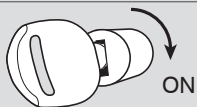

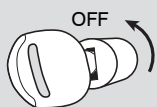
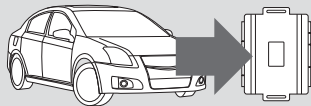
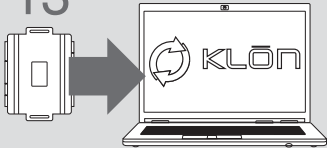

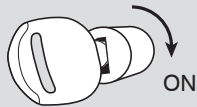

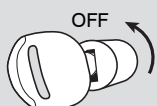
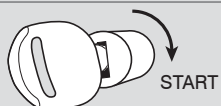
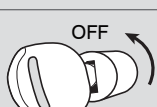
INSTALL AFTERMARKET PART IF REQUIRED

LED Programming Error Codes

Module LED flashing RED during programming

- 1x - CAN Error, check CAN wiring and voltages
- 2x - Key code not learned, confirm unlock sent, check CAN
- 3x - No immobilizer data, check immo data connection
- 4x - No IGN, check IGN connection
- 5x - VIN not found, check CAN connections
- 6x - No immobilizer data, check immo data connection
- 7x - Not the same key, use only one key for programming
- 8x - No immobilizer data, check immo data connection
- 9x - No immobilizer data 10x - Klon error, redo Klon

MODULE PROGRAMMING PROCEDURE - WITH KLON

- | | |
|---|---|
| <p>1</p>  <p>Close driver door.</p>  <p>Re-open driver door to wake up data bus.</p> <p>2</p>  <p>Press UNLOCK on OEM remote.
If the vehicle is not equipped with an OEM remote, press the module programming button.</p> <p>3</p>  <p>Wait, LED will flash BLUE once [1x].</p> <p>4</p>  <p>Turn key to ON position.</p> <p>5</p>  <p>Wait, LED will turn solid RED.</p> <p>6</p>  <p>Turn key to OFF position.</p> <p>7</p>  <p>Remove key.</p> <p>8</p>  <p>Insert key into ignition.</p> <p>9</p>  <p>Turn key to ON position.</p> <p>10</p>  <p>Wait, LED will flash BLUE.</p> | <p>11</p>  <p>Turn key to OFF position.</p> <p>12</p>  <p>WARNING:
Disconnect power last.
Disconnect RS from vehicle.</p> <p>13</p>  <p>Connect RS to computer and proceed with extended programming.</p> <p>14</p>  <p>WARNING: Do not press RS programming button.
Connect power first.
Connect RS to vehicle.</p> <p>15</p>  <p>Turn key to ON position.</p> <p>16</p>  <p>Wait, LED will turn solid BLUE for 2 seconds.</p> <p>17</p>  <p>Turn key to OFF position.</p> <p>18</p>  <p>Turn key to START position.</p> <p>19</p>  <p>Turn key to OFF position.</p> <p>20</p> <p>Module Programming Procedure completed.</p> |
|---|---|

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

NOTE

- All vehicle doors must be closed and locked prior to remote start sequence.



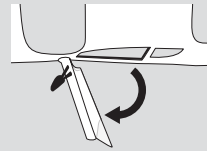
TIME RESTRICTION COMING UP !

1



Press UNLOCK on after-market remote.

2



TIME RESTRICTION

Within 45 SECONDS from previous step:

- Open vehicle door.
- Enter vehicle.
- Close vehicle door.
- Insert key into ignition.
- Turn key to ON position.
- Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure within time restriction will result in vehicle engine shutdown.