

Make	Model	Year	Install	CAN	Lights	IGN	Hood	I/O Changes
DL-CH8 RAM	3500 TIP Start Diesel	2018	Type 2	CJB	Park / Auto Type B	BCM	BCM	Green White/Blue

Firmware:

Los vehículos cubiertos usan **BLADE-AL (DL) -CH8**, confirman la aplicación, el módulo flash y actualizan el controlador de firmware antes de la instalación.

CAN:

Los vehículos **tipo 2** utilizan el cable de extensión CAN incluido para obtener datos CAN del bloque de unión CAN verde (lado izquierdo del tablero) o desde el BCM (pin # 25, CANH, marrón, pin # 26, CANL, amarillo).

Luces:

Las luces de estacionamiento **tipo B** usan el conector de 10 clavijas, aseguran el conector de 6 clavijas sin usar por seguridad.

Ignición:

Las disposiciones comunes de encendido se enumeran en el diagrama de la HOJA, el encendido también está disponible en el BCM (conector C5 / E, pin # 27, rosa / blanco).

*** Los vehículos del año modelo 2019 deben usar la ubicación de encendido ilustrada, para su correcto funcionamiento. Si no se realiza esta conexión específica, se producirá un mal funcionamiento.**

El cable de estado del capó está disponible en el BCM del vehículo, conector C1, pin # 11 (violeta / azul).

FTI-CDP1 - Notas de instalación y configuración

- A** Conexiones CAN necesarias.
- B** No se requiere conexión.
- C** Estado del pin del capó del vehículo (-).
- D** Puente de ignición, **NO SE REQUIERE CONEXIÓN.**
- E** Conexión de ignición.



BLADE FEATURE COVERAGE																			
IMMOBILIZER DATA	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM					DOOR STATUS	RAP SHUTDOWN	BRAKE STATUS	E-BRAKE STATUS	TACH OUTPUT	GLOW PLUG STATUS	SECURE TAKEOVER	PARKING LIGHTS		

•FT-DAS Required for manual transmission.
•BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting

Parking Light	Accessory	Ignition (Default)	(+)Door Trigger In	(-)Door Trigger In (Default)
Trunk	Starter	Parking Light (Default)	Starter	Ignition
			Accessory (Default)	

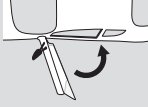
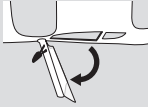
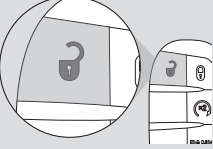
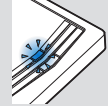
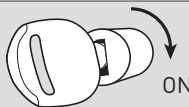
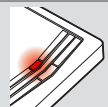
 
 
 
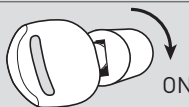

 
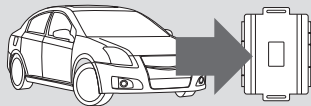
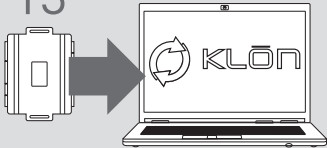

 
 
 
 
 
CM7000/7200 **Cut loop for A/T**

CM-900S/900AS

CM900AS/900S Jumper

START
ACC
IGN1

MODULE PROGRAMMING PROCEDURE - WITH KLON

- | | |
|---|---|
| <p>1</p>  <p>Close driver door.</p>  <p>Re-open driver door to wake up data bus.</p> <p>2</p>  <p>Press UNLOCK on OEM remote.
If the vehicle is not equipped with an OEM remote, press the module programming button.</p> <p>3</p>  <p>Wait, LED will flash BLUE once [1x].</p> <p>4</p>  <p>Turn key to ON position.</p> <p>5</p>  <p>Wait, LED will turn solid RED.</p> <p>6</p>  <p>Turn key to OFF position.</p> <p>7</p>  <p>Remove key.</p> <p>8</p>  <p>Insert key into ignition.</p> <p>9</p>  <p>Turn key to ON position.</p> <p>10</p>  <p>Wait, LED will flash BLUE.</p> | <p>11</p>  <p>Turn key to OFF position.</p> <p>12</p>  <p>WARNING:
Disconnect power last.
Disconnect RS from vehicle.</p> <p>13</p>  <p>Connect RS to computer and proceed with extended programming.</p> <p>14</p>  <p>WARNING: Do not press RS programming button.
Connect power first.
Connect RS to vehicle.</p> <p>15</p>  <p>Turn key to ON position.</p> <p>16</p>  <p>Wait, LED will turn solid BLUE for 2 seconds.</p> <p>17</p>  <p>Turn key to OFF position.</p> <p>18</p>  <p>Turn key to START position.</p> <p>19</p>  <p>Turn key to OFF position.</p> <p>20</p> <p>Module Programming Procedure completed.</p> |
|---|---|

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

NOTE

- All vehicle doors must be closed and locked prior to remote start sequence.



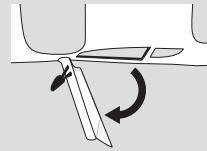
TIME RESTRICTION COMING UP !

1



Press UNLOCK on after-market remote.

2



TIME RESTRICTION

Within 45 SECONDS from previous step:

- Open vehicle door.
- Enter vehicle.
- Close vehicle door.
- Insert key into ignition.
- Turn key to ON position.
- Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure within time restriction will result in vehicle engine shutdown.