



Códigos de error de programación de LED
 El LED del módulo parpadea en ROJO durante la programación
 1x - Sin actividad CAN, confirme el conector BLADE 1 o BLADE 2
 2x - Sin encendido, confirme el conector BLADE 1 o BLADE 2
 3x - Sin comunicación con BCM, confirme compatibilidad
 4x - No se puede activar OEM RS, confirme la compatibilidad
 5x - No se puede activar OEM RS, el firmware no funcionará
 Parpadeo rápido: conexión CAN, conector BLADE 1/2 inverso

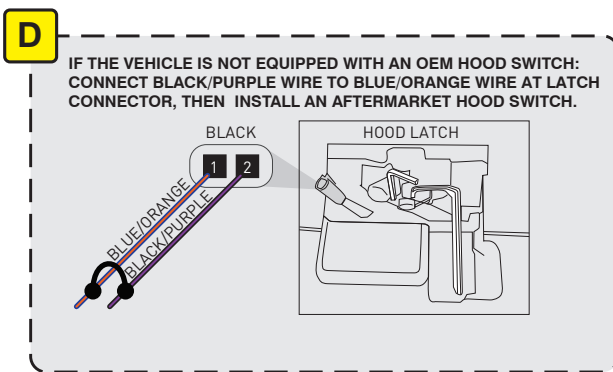

CARTRIDGE INSTALLATION

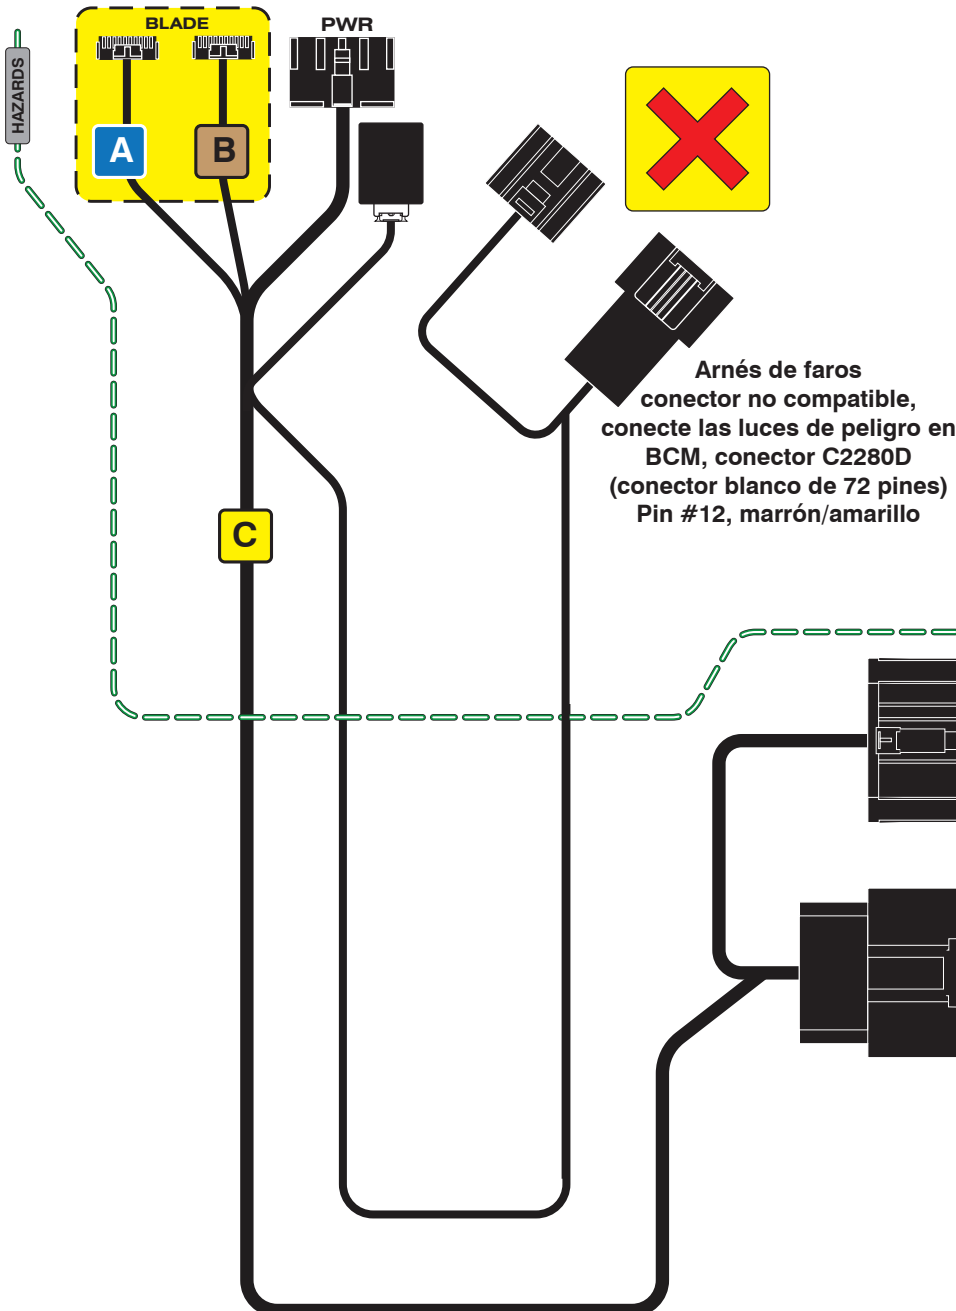

1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE



1 CONNECT BLADE connector 'A', proceed with Step 1 programming



2 Set ignition to ON position.



3 Wait, LED 1 will turn solid RED.



4 Wait, LED 1 will flash BLUE once [1x].




5 Wait, LED 1 will turn solid RED.




6 Set ignition to OFF position.



7 DISCONNECT BLADE connector 'A', CONNECT BLADE connector 'B', proceed with Step 2 programming

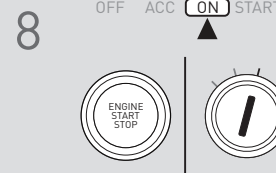

8 Set ignition to ON position.

 


9 Wait, LED 1 will turn solid RED.



10 Wait, LED 1 will flash BLUE rapidly.



11 Wait, LED 1 will turn solid BLUE for 2 seconds.

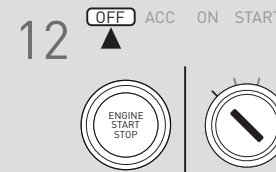

12 Set ignition to OFF position.

13

Module Programming Procedure completed.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.

1



Press unlock on OEM or aftermarket remote or request switch.

2



DO NOT PRESS BRAKE PEDAL. Set ignition to ON position. Wait 2 seconds for key validation.

3



Press and release BRAKE pedal.

4

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.