

FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

Cerraduras: El conector de cerradura CM es obligatorio para este tipo de instalación. El conjunto del arnés está precableado para proporcionar los control analógico.

FTI-GMT3 - Notas de instalación y configuración

-

COBERTURA DE FUNCIONES					
IMMOBILIZER DATA					
MAX LOCK START					
DOOR STATUS					
BRAKE SHUTDOWN					
BRAKE STATUS					
E-BRAKE STATUS					
HATCH OUTPUT					
DATA/MUX IGN/ST					
HOOD STATUS					
SECURE TAKEOVER					
PARKING LIGHTS					
HAZARD LIGHTS					

• FT-DAS Required for manual transmission.
 • BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting			
Parking Light			(+)Door Trigger In
Accessory			(-)Door Trigger In (Default)
Ignition (Default)			
Trunk			Starter
Starter			Ignition
Parking Light (Default)			Accessory (Default)




CM7000/7200

Cut loop for A/T

CM-900S/900AS

CM900AS/900S Jumper

START
ACC
IGN1

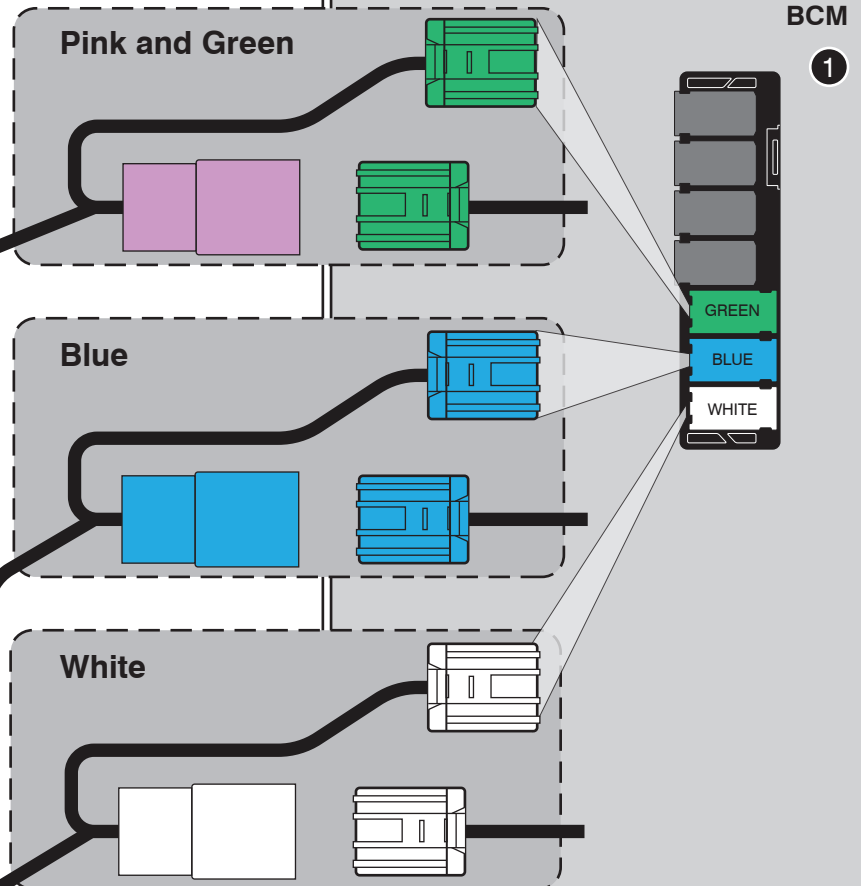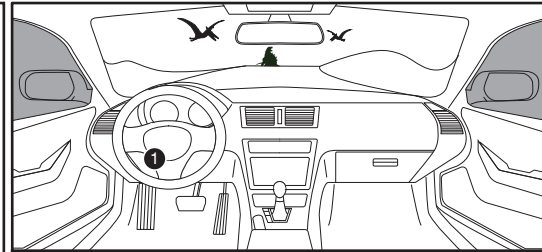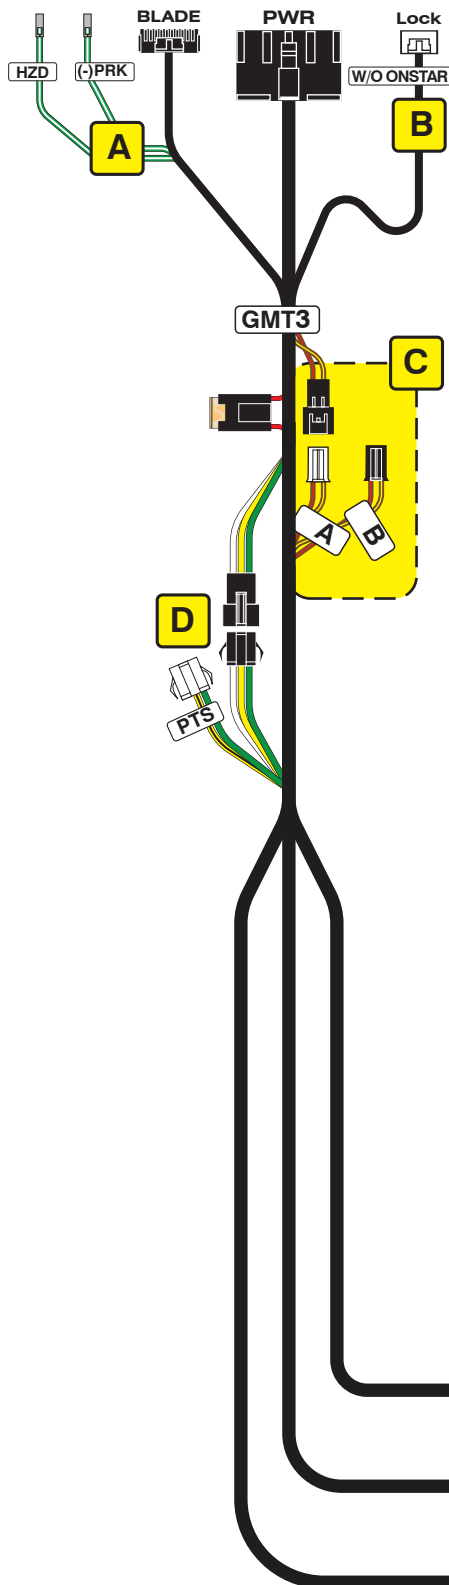


Códigos de error de programación de LED

El LED del módulo parpadea en ROJO durante la programación

- 1x - Sin alimentación ACC, verifique el conector VERDE
- 2x - Estado MUX no detectado, verificar conector VERDE
- 3x - Sin IGN, verifique el conector VERDE
- 4x - Sin actividad HSCAN, verifique el conector AZUL
- 5x - Sin actividad SWC, verifique el conector AZUL
- 6x - mensaje SWC incorrecto, se ha eliminado la clave de confirmación
- 7x - Sin alimentación ACC, verifique el conector VERDE
- 8x - Sin datos del inmovilizador, verifique los conectores VERDE Y BLADE
- 9x - IGN ENCENDIDO, la clave de confirmación ha sido eliminada
- 10x - Keysense activo, confirmar clave ha sido eliminada
- 11x - Sin ACC, la tecla de confirmación está activada
- 12x - Sin IGN, la tecla de confirmación está activada
- 13x - VIN no coincide con los datos del enlace web, póngase en contacto con el departamento de ingeniería

CARTRIDGE INSTALLATION

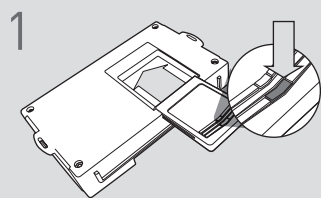


Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.

 MODULE PROGRAMMING PROCEDURE - WITH KLON



 
Close driver door. Re-open driver door to wake up data bus.



Insert key into ignition.



 
Turn key to ON position.



Wait, LED will turn solid RED.



 
Turn key to OFF position.




Remove key.



 LED will turn OFF.



Insert key into ignition.

 


Turn key to ON position.




Wait, LED will flash BLUE rapidly.




Turn key to OFF position.

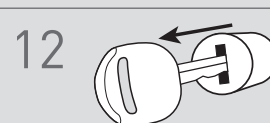


Remove key.

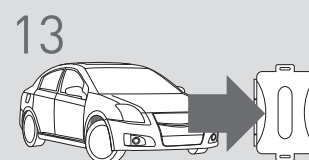


WARNING:
Disconnect power last.
Disconnect module from vehicle.

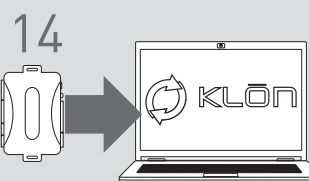

Connect module to computer and proceed with extended programming.

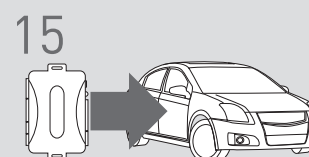

 
WARNING: Do not press module programming button.
Connect power first.
Connect module to vehicle.




Close driver door. Re-open driver door to wake up data bus.



 Turn key to ON position.



 Wait, LED will turn solid BLUE for 2 seconds.



Turn key to OFF position.

20

Module Programming Procedure completed.