

FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

Cerraduras: el conector de cerradura CM no es necesario para este tipo de instalación. Asegure según sea necesario.

• FT-DAS Required for manual transmission.
 • BOTH Red & Red/White MUST be connected with high current application.

Jumper		Setting	
Parking Light		(+)Door Trigger In	
Accessory		(-)Door Trigger In (Default)	
Ignition (Default)			
Trunk		Starter	
Starter		Ignition	
Parking Light (Default)		Accessory (Default)	

CM7000/7200

Cut loop for A/T




CM-900S/900AS

CM900AS/900S Jumper

START
ACC
IGN1




COBERTURA DE FUNCIONES					
IMMOBILIZER DATA					
PRIORITY UNLOCK					
DOOR LOCK					
DOOR UNLOCK					
ARM OEM ALARM					
DISARM OEM ALARM					
TRUNK/HATCH RELEASE					
DOOR STATUS					
TRUNK STATUS					
RAP SHUTDOWN					
BRAKE STATUS					
E-BRAKE STATUS					
TACH OUTPUT					
DATA/MUX IGN/ST					
HOOD STATUS					
SECURE TAKEOVER					
PARKING LIGHTS					
HAZARD LIGHTS					

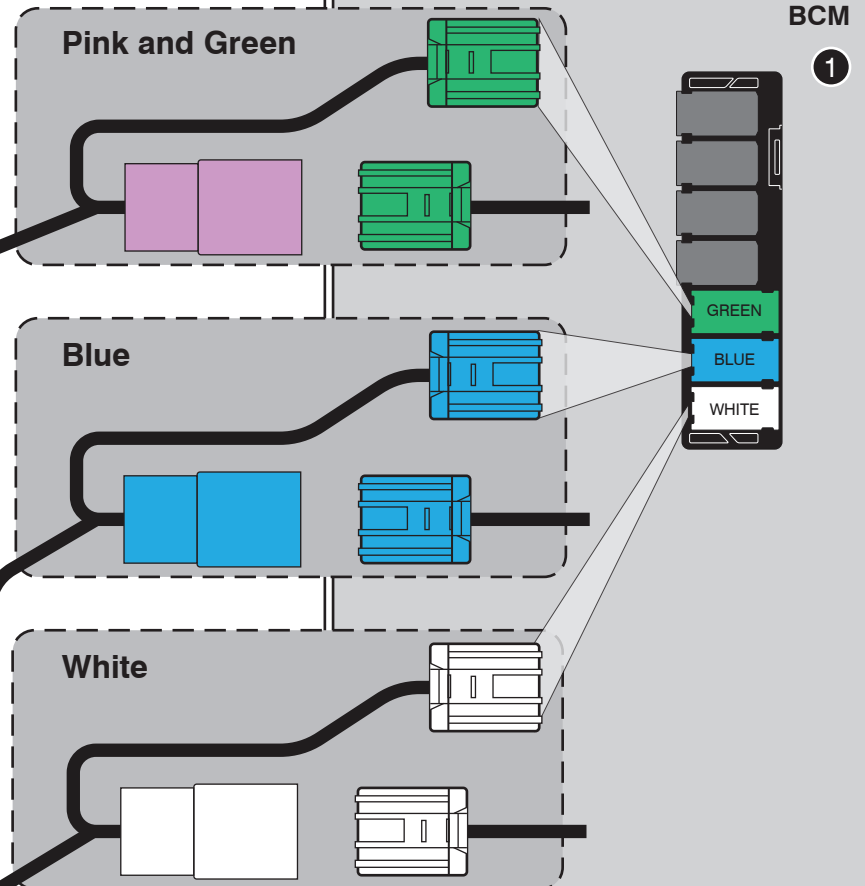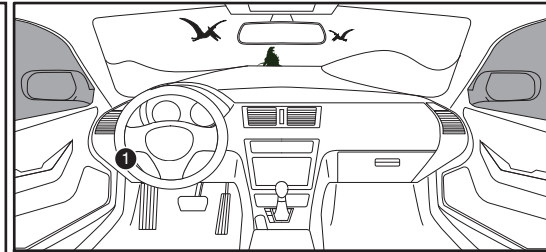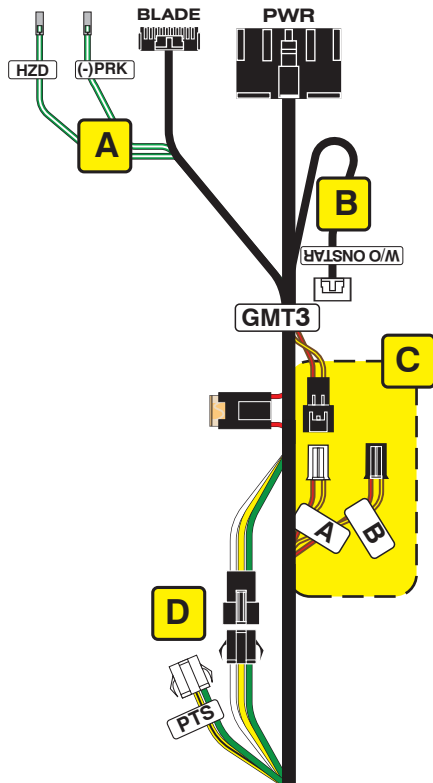

Códigos de error de programación de LED

El LED del módulo parpadea en ROJO durante la programación

CARTRIDGE INSTALLATION

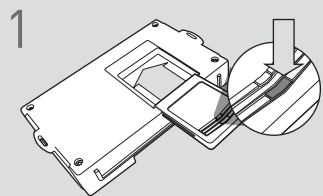

Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

 
MODULE PROGRAMMING PROCEDURE



Insert key into ignition.




Turn key to ON position.




Wait, LED will flash BLUE rapidly.



 
Turn key to OFF position.



Remove key.

 

LED will turn solid RED.

 


Insert key into ignition.




Turn key to ON position.



 
LED will turn OFF.



Turn key to OFF position.

 

Remove key.

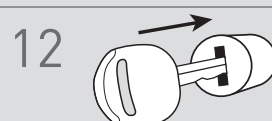

Insert key into ignition.



Turn key to ON position.



Wait, LED will turn solid BLUE for 2 seconds.



Turn key to OFF position.

16

Module Programming Procedure completed.