


Códigos de error de programación de LED

El LED del módulo parpadea en ROJO durante la programación

CARTRIDGE INSTALLATION

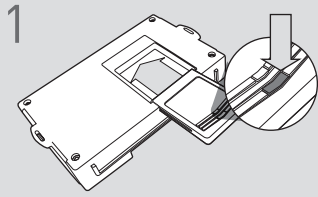


1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

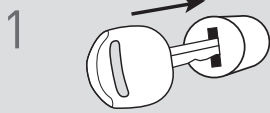


1 Insert key into ignition.




2 Turn key to ON position.



 
3 Wait, LED will flash BLUE rapidly.




4 Turn key to OFF position.

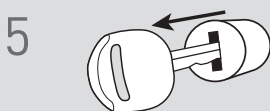

5 Remove key.

 

6 LED will turn solid RED.

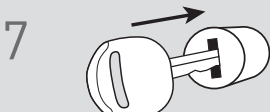

7 Insert key into ignition.




8 Turn key to ON position.




9 LED will turn OFF.



10 Turn key to OFF position.

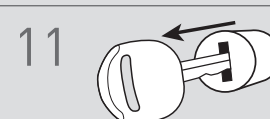


11 Remove key.

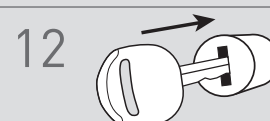


12 Insert key into ignition.



13 Turn key to ON position.

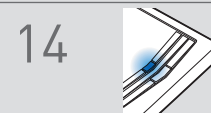

14 Wait, LED will turn solid BLUE for 2 seconds.

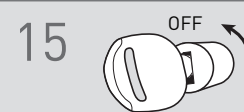

15 Turn key to OFF position.

16

Module Programming Procedure completed.