

FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

• FT-DAS Required for manual transmission.
 • BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting			
Parking Light			(+)Door Trigger In
Accessory			(-)Door Trigger In (Default)
Ignition (Default)			
Trunk			Starter
Starter			Ignition
Parking Light (Default)			Accessory (Default)

CM7000/7200
 Cut loop for A/T




CM-900S/900AS



CM900AS/900S Jumper



START

ACC

IGN1

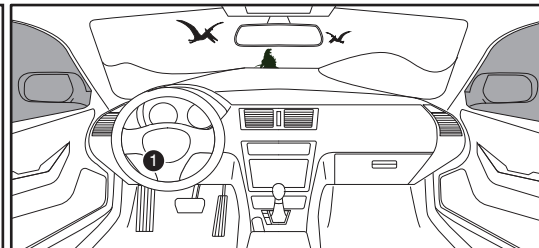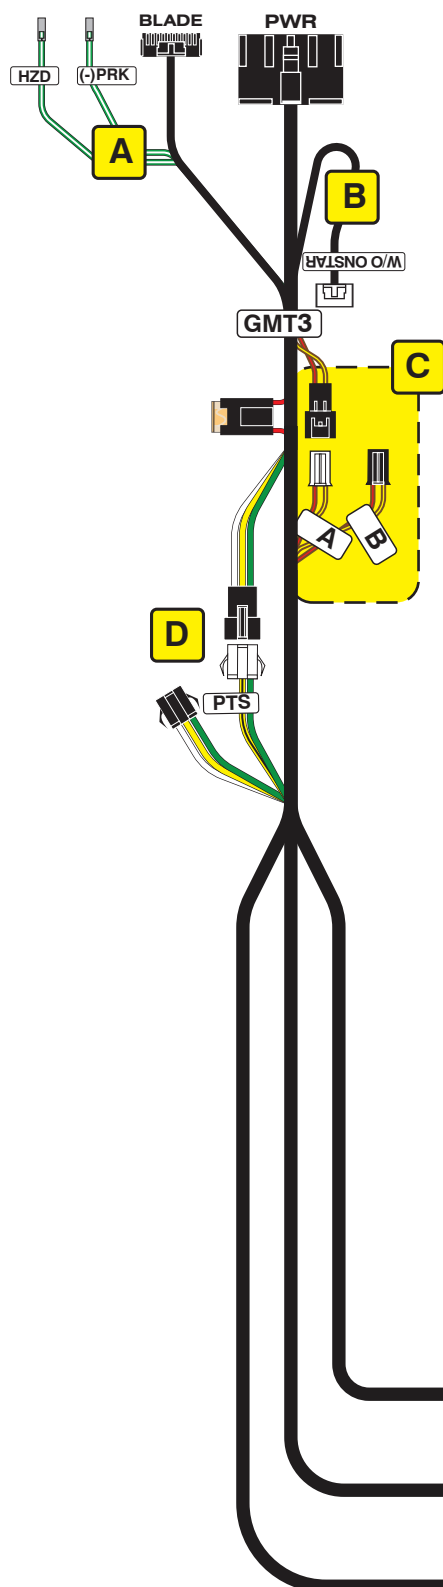

BCM

1

Pink and Green

Blue


White

Códigos de error de programación de LED

El LED del módulo parpadea en ROJO durante la programación

- 1x - Sin datos SWC, verifique el conector AZUL y la selección CAN
- 2x - Sin datos del inmovilizador, confirme los conectores VERDE y BLADE
- 3x - Sin HS CAN
- 4x - Sin encendido, verifique el conector AZUL y la selección CAN
- 5x - el VIN no coincide con los datos del enlace web
- 6x - Sin datos del inmovilizador, verifique el conector VERDE o mantenga IGN
- 7x - error de datos del inmovilizador, confirme solo con una tecla
- 8x - Sin datos del inmovilizador, verifique los conectores VERDE y BLADE
- 9x - Error de datos del inmovilizador, ver arriba
- 10x - Error de datos de Klon, restablecer módulo y repetir programación
- 11x - Sin encendido, verifique el conector AZUL y la selección CAN

CARTRIDGE INSTALLATION

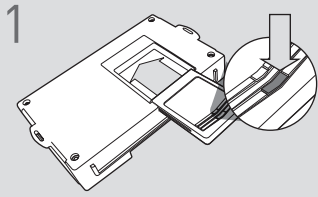

Slide cartridge into unit. Notice button under LED.

 
2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE


NOTE

- 1 When programming, only one key fob will be used. The other one must be located at least 10 feet away from the vehicle.




Remove battery from key fob.

Place key fob on key reader in armrest or center console.

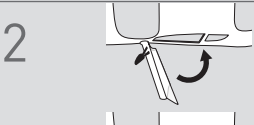


Close driver door.

 


Re-open driver door to wake up data bus.



 Push start button twice [2x] (or press start button 5 seconds) to ON position.




Wait, LED will turn solid RED.

 


Push start button once [1x] to OFF position.




Wait, LED will flash BLUE rapidly.

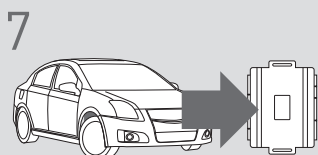

WARNING:
Disconnect power last.
Disconnect RS from vehicle.

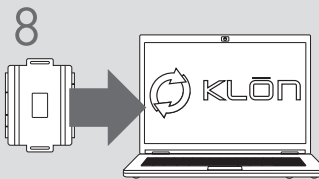

Connect RS to computer and proceed with extended programming.

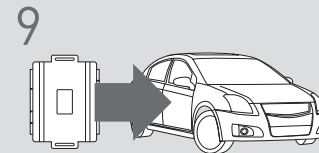

WARNING: Do not press RS programming button.
Connect power first.
Connect RS to vehicle.



Push start button twice [2x] (or press start button 5 seconds) to ON position.



Wait, LED will turn solid BLUE for 2 seconds.



Push start button once [1x] to OFF position.



Remove key fob from key reader.

Insert battery in key fob.

! If the vehicle is equipped with a power liftgate:
Open and close the power liftgate with the OEM keyfob.

14

Module Programming Procedure completed.

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - TO THE VEHICLE OWNER

NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.




TIME RESTRICTION COMING UP !

1



Press unlock on OEM or aftermarket remote or request switch.

2

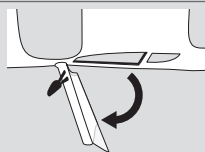

TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure within time restriction will result in vehicle engine shutdown.