

FTI-HDK1: Vehicle Coverage and Preparation Notes

Make	Model	Year	Install	Locks	Lights	IGN	POC	I/O Changes
DL-HA1 Acura	EL 1.7 STD Key with OEM Alarm	2001-05	Type 2	DATA	Park / Auto Blue	N/A	N/A	Green White/Blue N/A

This installation requires **BLADE-AL(DL)-HA1**, flash module and update the controller firmware before beginning the installation.

Lights: +12V parking light harness provision (**green/white**) connects directly to the vehicle at pin #5 of the 16-pin connector (**black/white**) at the keyless module, located above the driver kick panel.

Tach: **Blue** (pin #5, green 13-pin connector) front of fuse box, connect as illustrated.

Brake: **White/black** (pin #2, green 13-pin connector) front of fuse box, connect as illustrated.

Door Locks: Door locks are covered via data in vehicles equipped with a factory alarm. Connect harness **orange** wire to vehicle **blue/orange** wire (pin #2, lt.green 17-pin connector), located at the rear of fuse box.

FTI-HDK1 - Installation and Configuration Notes

- A** CUT REQUIRED
- B** NOT REQUIRED
- C** CONNECTION REQUIRED
- D** NOT REQUIRED



FEATURE COVERAGE														
IMMOBILIZER DATA														
DOOR LOCK														
DOOR UNLOCK														
ARM OEM ALARM														
DISARM OEM ALARM														
TRUNK/HATCH RELEASE														
BRAKE STATUS														
TACH OUTPUT														
PARKING LIGHTS														

•FT-DAS Required for manual transmission.
•BOTH Red & Red/White MUST be connected with high current application.

Jumper Setting



Parking Light	Accessory	Ignition (Default)	(+)Door Trigger In (Default)	(-)Door Trigger In (Default)
Trunk	Starter	Parking Light (Default)	Starter	Ignition
			Accessory (Default)	

CM7000/7200 Cut loop for A/T


CM-900S/900AS

CM900AS/900S Jumper


START
ACC
IGN1

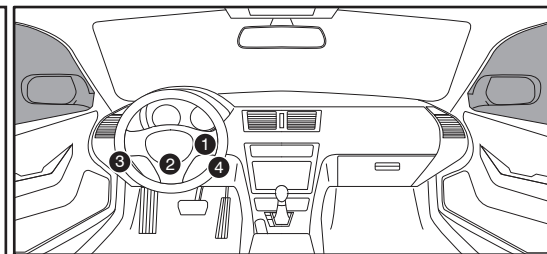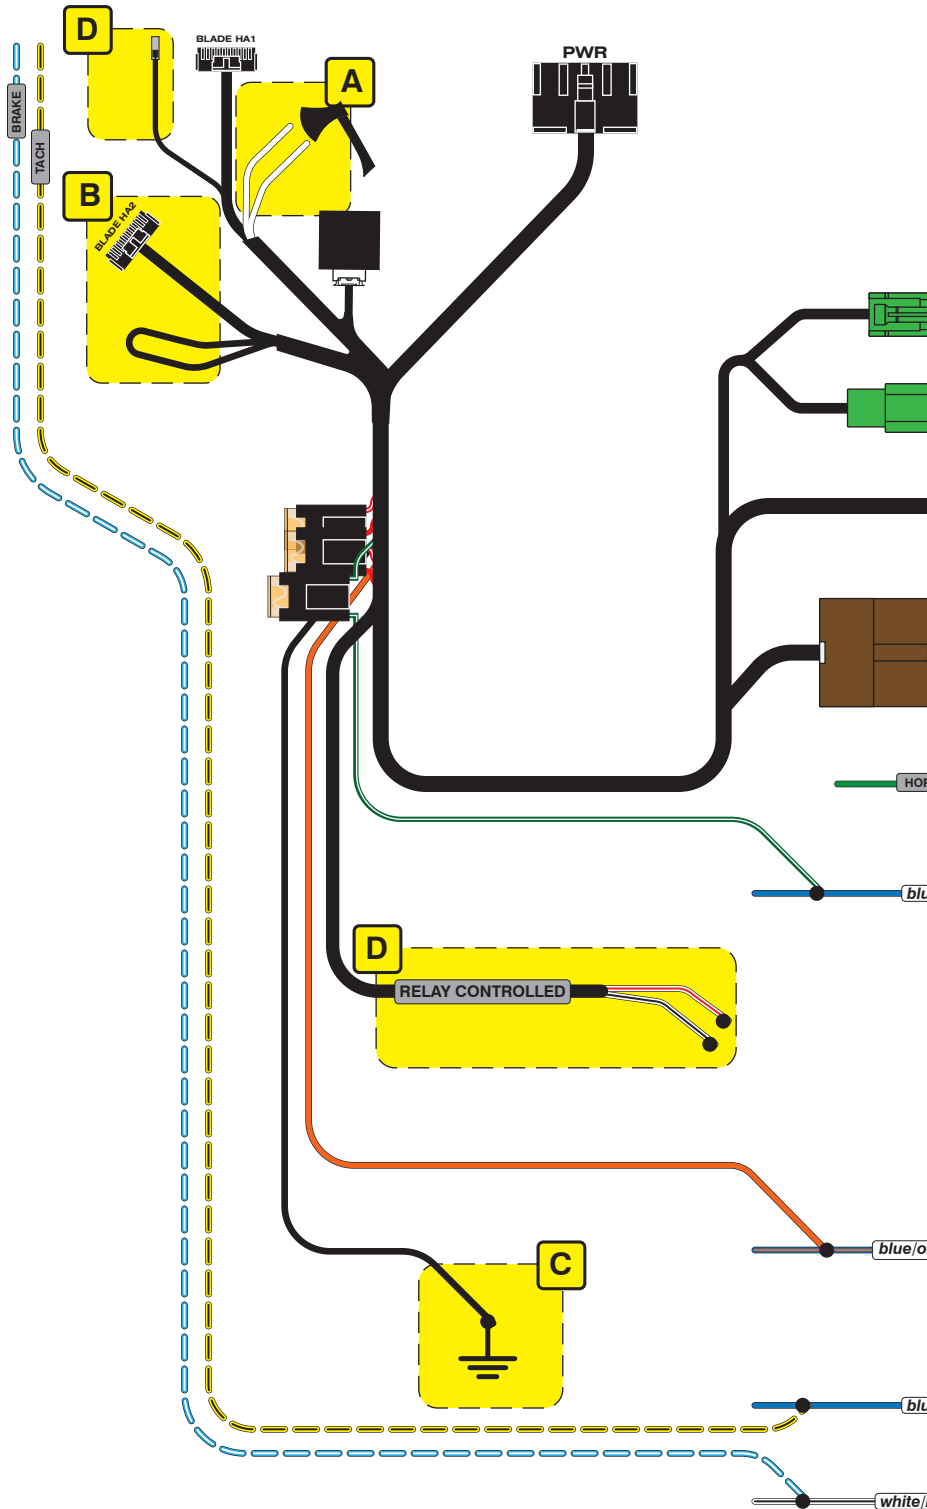


Immobilizer/Key Cylinder 1

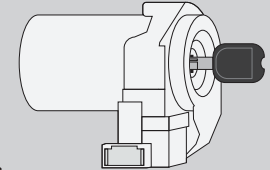


Ignition Switch Harness 2

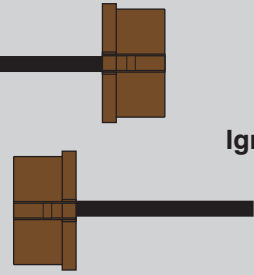

Keyless Module 3

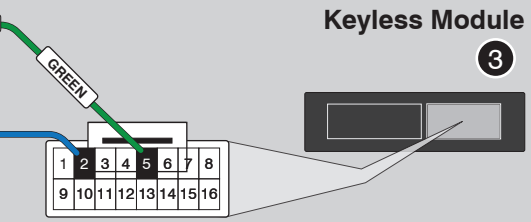


Fuse Box 4

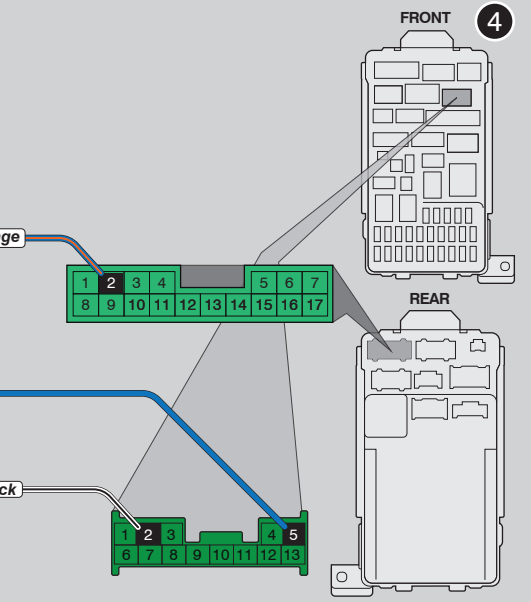

LED Programming Error Codes

- Module LED flashing RED during programming
- 1x - No SWC (doorlock) activity, check orange wire connection
 - 2x - IMMO error, check connection and harness configuration (jumpers)
 - 3x - Generic error, come on... it's a T-harness :)

CARTRIDGE INSTALLATION

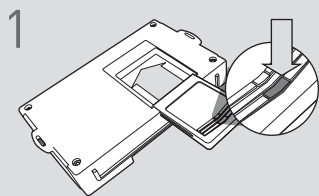


1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

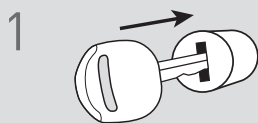


1 Insert key into ignition.




2 Turn key to ON position.

3

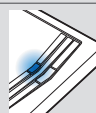

3 Wait, LED will turn solid BLUE for 2 seconds.

4

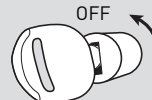

4 Turn key to OFF position.

5

5 Module Programming Procedure completed.