# FTI-HDK1: Vehicle Coverage and Preparation Notes



Make	Model	Year	Install	Locks	Lights	IGN	POC	I/O Changes	
DL-HA1 Acura	TL STD Key	2004-08	Type 5	DATA	Park / Auto Red/Blk	Type B	N/A	Green White/Blue N/A	

This installation requires **BLADE-AL(DL)-HA1**, flash module and update the controller firmware before beginning the installation.

**Lights:** +12V parking light harness provision (**green/white**) connects to the vehicle at pin #31 of the white 45-pin connector, located at the front of fuse box, as illustrated.


**3X Lock Remote Start Control:** The HDK1 harness includes a relay to provide 3X lock control of the remote starter. The black wire labeled [STATUS] provides control of the harness relay connected to the white/red & white/black wires, which are used to interrupt the vehicle yellow keyless ignition wire during remote start. Select any POC in the CM 7/9 I/O connector, remove the original pin and replace it with the harness [STATUS] wire, set POC to STATUS (5) in the POC options.

### Door Locks:


**Door locks are covered via data, no additional connections required.** Connect harness *orange* wire to *brown/black* (pin #4, green 21-pin connector) front of fuse box, as illustrated.

# FTI-HDK1 - Installation and Configuration Notes

- A CUT REQUIRED
- **B** NOT REQUIRED
- C REQUIRED CONNECTION
- P REQUIRED CONNECTION FOR 3X LOCK START
- E REQUIRED CONNECTION FOR 3X LOCK START

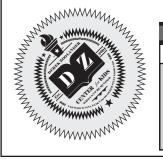

	FEATURE COVERAGE																		
0		0	0	0	0	0				0	0	0	0	0	0	0	0	0	
IMMOBILIZER DATA		DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	TRUNK/HATCH RELEASE				DOOR STATUS	TRUNK STATUS	HOOD STATUS	BRAKE STATUS	E-BRAKE STATUS	тасн оитрит	A/M CONTROL	AUTOLIGHT CTRL	PARKING LIGHTS	

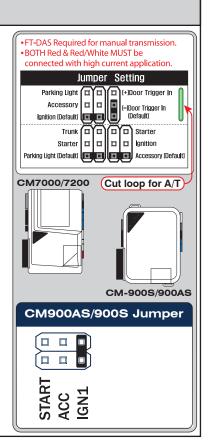




ALL IN ONE HONDA/ACURA

Patent No. US 8,856,780 CA 2759622

Page 10 of 11 BLADE-AL(DL)-HA1-EN Doc. No.: ##45588## 20171107

## CARTRIDGE INSTALLATION

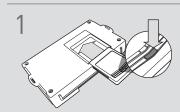

Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

## MODULE PROGRAMMING PROCEDURE

1

Insert key into ignition.

Turn key to ON position.

3



Wait, LED will turn solid BLUE for 2 seconds.

4



Turn key to OFF position.

5

Module Programming Procedure completed.