

Make	Model	Year	Install	CAN	Lights	Locks	Brake	I/O Changes
DL-HA2 Honda	Civic Hybrid STD Key AT	2006-11	Type 1	N/A	Park / Auto gray/org	DATA	lt.green	Green White/Blue N/A

This installation requires **BLADE-AL(DL)-HA2** firmware, flash module and update the controller firmware, before beginning the installation.

**Lights:** Parking light & Light off connections are located at the headlight switch connectors. Additional wiring from the CM I/O connector is required, providing a negative parking light wire, and a status wire to provide lighting and light off control. You are required to select the appropriate POCs and configuration accordingly.

**Parking Light:** **Gray** (pin #8, 12-pin connector) at headlight switch harness.  
**Light Off:** **Orange** (pin #10, 12-pin connector) at headlight switch harness.

**Brake:** Brake status is not provided over data, additional wiring is required to properly monitor brake status. The vehicle brake wire (**lt.green**) is at the 2-pin brake switch connector, located at the top of the brake pedal assembly.

**Door Locks:** Door locks are covered via data, no additional connections required.


## FTI-HDK1: Installation and Configuration Notes

- A** CUT REQUIRED
- B** NOT REQUIRED
- C** REQUIRED CONNECTION
- D** REQUIRED CONNECTIONS
- E** NOT REQUIRED


- FT-DAS Required for manual transmission.
- BOTH Red & Red/White MUST be connected with high current application.

**Jumper Setting**

Parking Light	(+)-Door Trigger In	
Accessory	(-)-Door Trigger In	
Ignition (Default)		
Trunk	Starter	
Starter	Ignition	
Parking Light (Default)	Accessory (Default)	

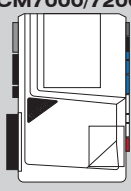


**CM7000/7200**

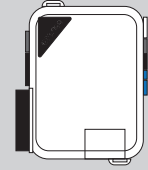

**CM-900S/900AS**

Cut loop for A/T



**CM900AS/900S Jumper**



START

ACC


IGN1



FEATURE COVERAGE																				
IMMOBILIZER DATA	AM CONTROL	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	TRUNK/HATCH RELEASE					DOOR STATUS	TRUNK STATUS	AUTOLIGHT CTRL	BRAKE STATUS	HOOD STATUS					PARKING LIGHTS
○	○	○	○	○	○	○					○	○	○	●	○					●

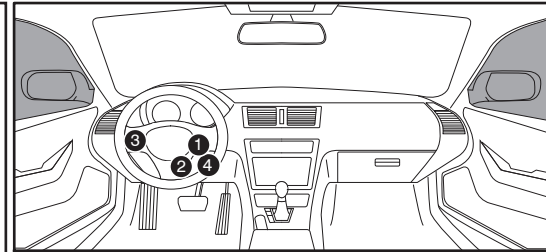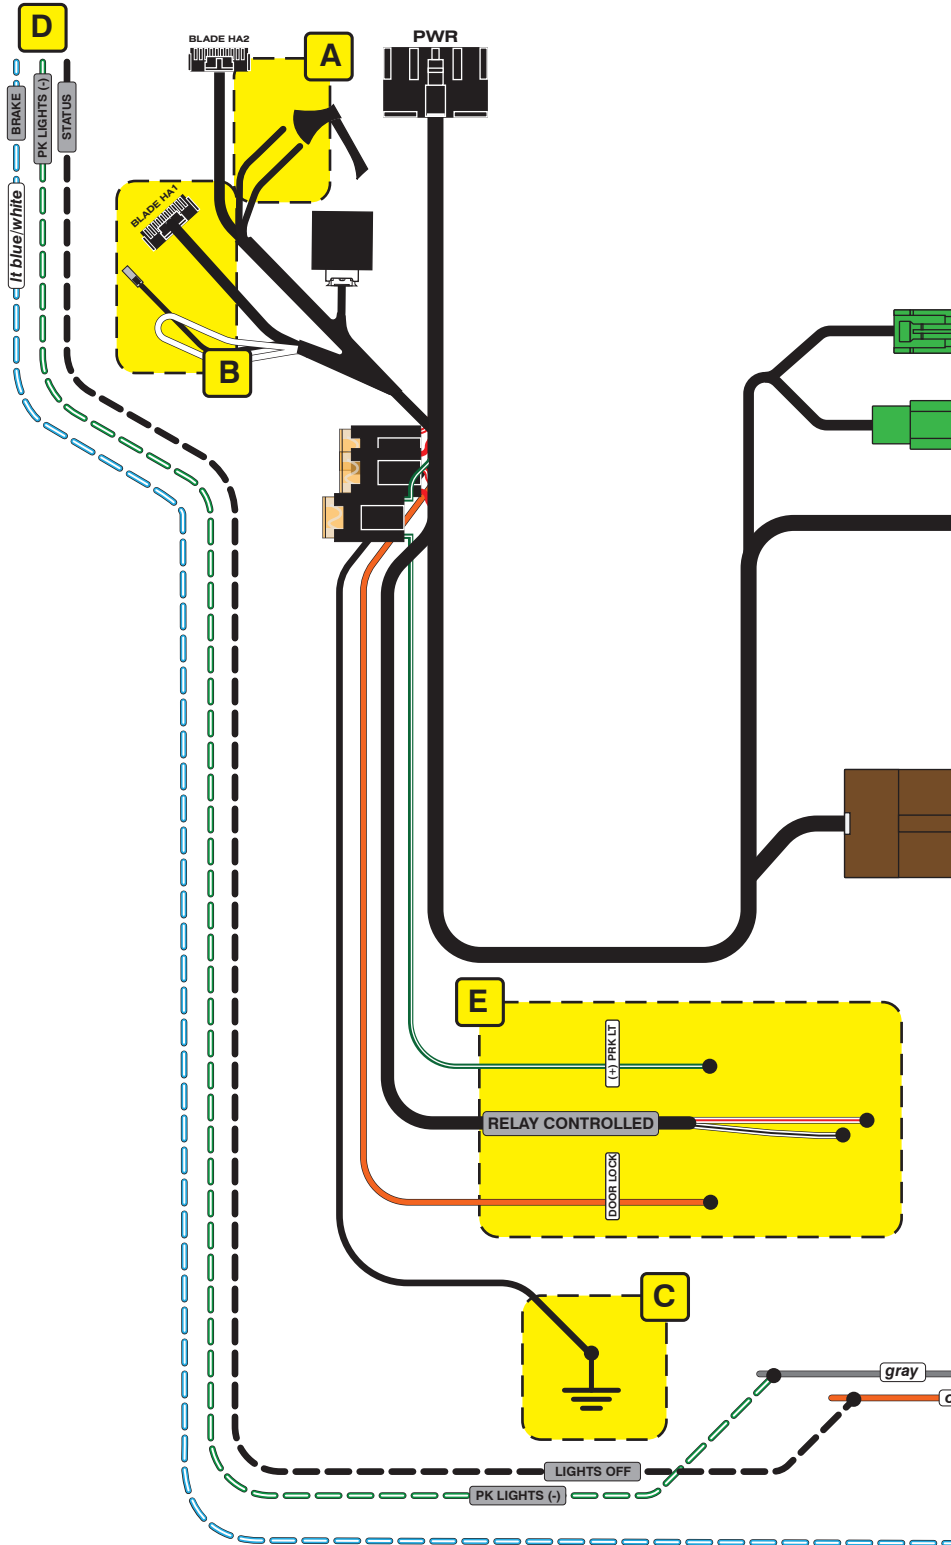

**Immobilizer/Key Cylinder**

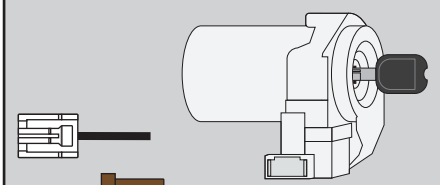


**Ignition Switch Harness**



**Headlight Switch Connector**



**Brake Switch**

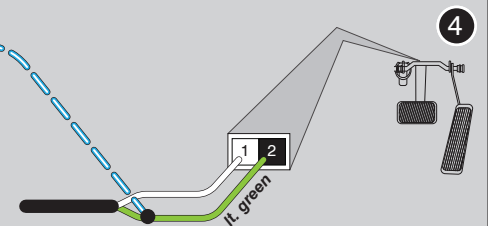

**M/T Applications**  
Clutch Bypass Wiring




**LED Programming Error Codes**

Module LED flashing RED during programming

- 1x - No SWC (doorlock) activity, check orange wire connection
- 2x - IMMO error, check connection and harness configuration (jumpers)
- 3x - Generic error, come on... it's a T-harness :)

## CARTRIDGE INSTALLATION

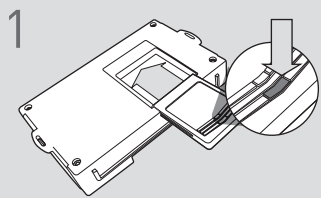


1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

## MODULE PROGRAMMING PROCEDURE

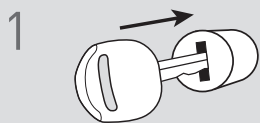


1 Insert key into ignition.




2 Turn key to ON position.

 3



3 Wait, LED will turn solid BLUE for 2 seconds.

 4



4 Turn key to OFF position.

5

5 Module Programming Procedure completed.