




Immobilizer Connector

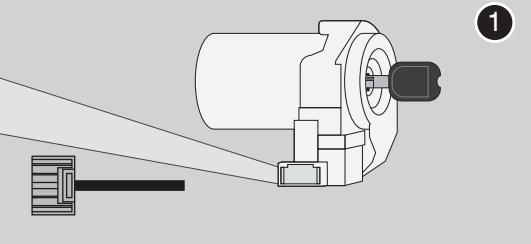

Ignition Switch

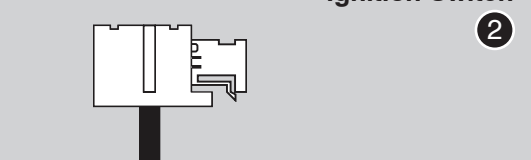

Headlight Switch Connector

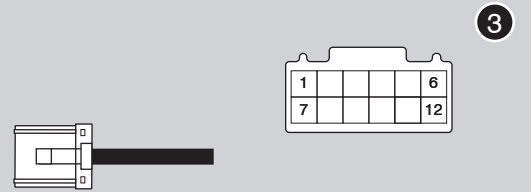


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - CAN error, confirm harness connections
 - 2x - Klon data is wrong, redo programming from the beginning
 - 3x - No S-net data, check connections
 - 4x - No VIN data, check connections, confirm vehicle entry
- After Klon:
- If module LED stays RED, redo programming from the beginning of the process, remember to close/open door.
 - 2x - Klon failure, redo programming, see note above.

CARTRIDGE INSTALLATION

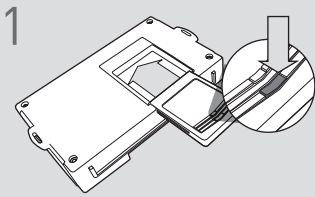


1 Slide cartridge into unit. Notice button under LED.

2


Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

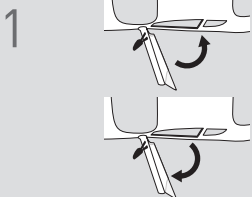


1 Close driver door.


Re-open driver door to wake up data bus.

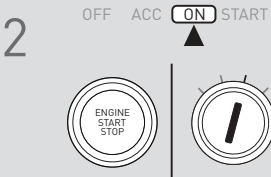


2 Turn ignition to ON position.

 


3 Wait, LED will flash BLUE rapidly.

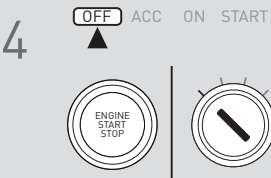


4 Turn ignition to OFF position.

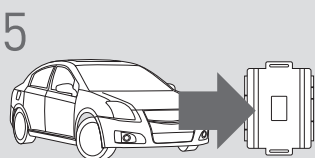


5 **WARNING:**
Disconnect power last.
Disconnect RS from vehicle.

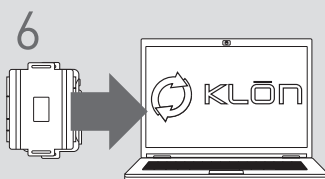


6 Connect RS to computer and proceed with extended programming.

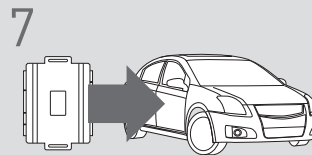


7 **WARNING:** Do not press RS programming button.
Connect power first.
Connect RS to vehicle.

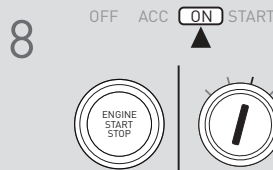

8 Turn ignition to ON position.

 

9 Wait, LED will turn solid BLUE for 2 seconds.

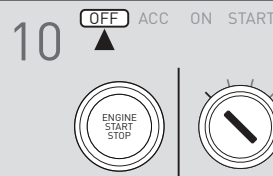

10 Turn ignition to OFF position.



11 Press UNLOCK on the OEM remote.

! If the vehicle is equipped with a power liftgate: Open and close the power liftgate with the OEM keyfob.

12

Module Programming Procedure completed.