



Immobilizer Connector

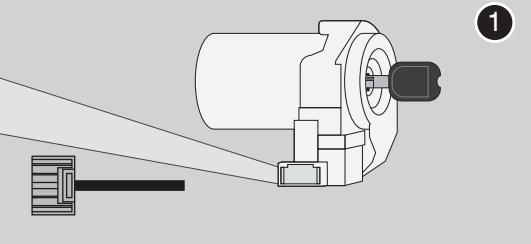

Ignition Switch

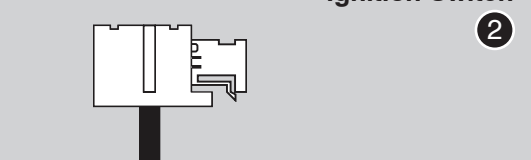

Headlight Switch Connector

1			6
7			12

Códigos de error de programación de LED


El LED del módulo parpadea en ROJO durante la programación

- 1x - Error de CAN, confirmar las conexiones del arnés
- 2x - Los datos de Klon son incorrectos, rehaga la programación desde el principio
- 3x - No hay datos de S-net, verifique las conexiones
- 4x - No hay datos de VIN, verifique las conexiones, confirme la entrada del vehículo

Después de Klon:

- Si el LED del módulo permanece ROJO, rehaga la programación desde el comienzo del proceso, recuerde cerrar/abrir la puerta.
- 2x - Fallo de Klon, rehaga la programación, consulte la nota anterior.

CARTRIDGE INSTALLATION

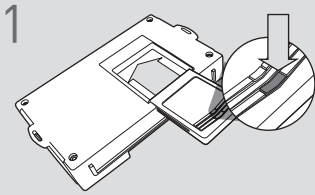


1 Slide cartridge into unit. Notice button under LED.

2


Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

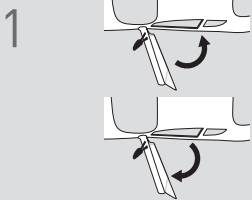

1 Close driver door.


Re-open driver door to wake up data bus.

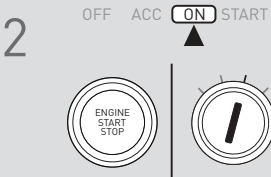


2 Turn ignition to ON position.




3 Wait, LED will flash BLUE rapidly.

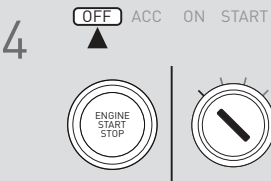


4 Turn ignition to OFF position.

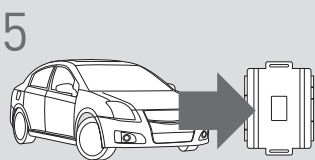


5 **WARNING:**
Disconnect power last.
Disconnect RS from vehicle.

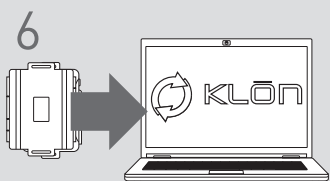


6 Connect RS to computer and proceed with extended programming.

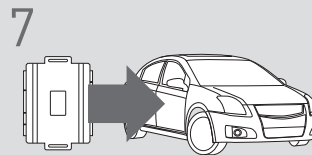


7 **WARNING:** Do not press RS programming button.
Connect power first.
Connect RS to vehicle.

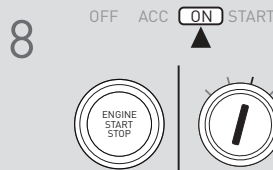

8 Turn ignition to ON position.

 

9 Wait, LED will turn solid BLUE for 2 seconds.

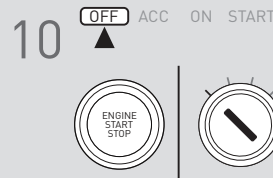

10 Turn ignition to OFF position.



11 Press UNLOCK on the OEM remote.

! If the vehicle is equipped with a power liftgate: Open and close the power liftgate with the OEM keyfob.

12

Module Programming Procedure completed.