

Make	Model	Year	Install	BCM	Lights	Locks	POC 1	I/O Changes
DL-NI4 Infiniti	QX56 Intelli-Key AT	2008-10	Type 3	DKP	Park / Auto NI-LOCK	DATA	Hazard1/2	Green White/Blue START2/ACC

Intstall **Type 1** requires **BLADE-AL(DL)-NI4**, flash module and update the controller firmware before beginning the installation.

**I/O Changes:** Each vehicle in this installation group have different configuration requirements for proper handling of ACC and START circuit handling. Please ensure that the appropriate changes have been made before testing. **The required changes are listed below.**

**Intelli-Key Wiring:** Additional wiring and relay are required. See page 3 of this document for additional location and interface requirements.

**CM7000/7200 I/O Changes:**

**START2:** Move CM jumper 3 to Starter, connect CN1 GREEN/WHITE wire to yellow 2nd START wire at configuration point [C]

**ACC:** Move CM jumper 2 to Accessory, connect the CN1 BLUE wire to blue ACC wire at configuration point [C]

**Optional Hazard Light Control:**

**NI-LOCK** harness **green/white** is pre-wired for hazards, connect harness wire to the controller POC1 (**blue/white**), additional configuration required. Vehicles equipped with a **MOMENTARY** activation switch require that POC1 be configured for **Hazard light** (POC option #30), if the switch is **LATCHING** type you will use **Hazard light 2** (POC option #23).


**Auto-Light OFF:**

**NI-LOCK** harness **orange** is pre-wired for Auto-light shut off, if the vehicle is equipped with auto-lights connect CM REARM output (**orange**) to **orange** wire in harness.

**D** **NI-LOCK harness configuration:** Configure Double Pulse Unlock (**feature 1-04, option 2**) Vehicle lock functions are handled through data, additional harness configuration is not required.

**FTI-NSK1: Installation and Configuration Notes**

- A** CUTS REQUIRED - INSULATE AFTER CUTTING
- B** REQUIRED CONNECTION - USE JUMPER IF NO IMMOBILIZER
- C** CONNECT AS ILLUSTRATED
- D** CONNECT AS ILLUSTRATED
- E** CONNECT AS ILLUSTRATED

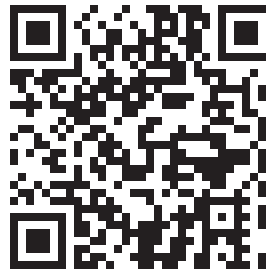

FEATURE COVERAGE																		
IMMOBILIZER DATA	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	TRUNK/HATCH RELEASE	A/M ALARM CTRL	A/M RS CONTROL	HOOD STATUS	DOOR STATUS	TRUNK STATUS	RAP SHUTDOWN	BRAKE STATUS	E-BRAKE STATUS	TACH OUTPUT	SECURE TAKEOVER	PARKING LIGHTS	HAZARD LIGHTS

•FT-DAS Required for manual transmission.  
•BOTH Red & Red/White MUST be connected with high current application.

**Jumper Setting**


Parking Light	Accessory	Ignition (Default)	(+)Door Trigger In (Default)	(-)Door Trigger In (Default)
Trunk	Starter	Parking Light (Default)	Starter	Ignition
			Accessory (Default)	

**CM7000/7200** Cut loop for A/T

**CM-900S/900AS**


**CM900AS/900S Jumper**

START  
ACC  
IGN1

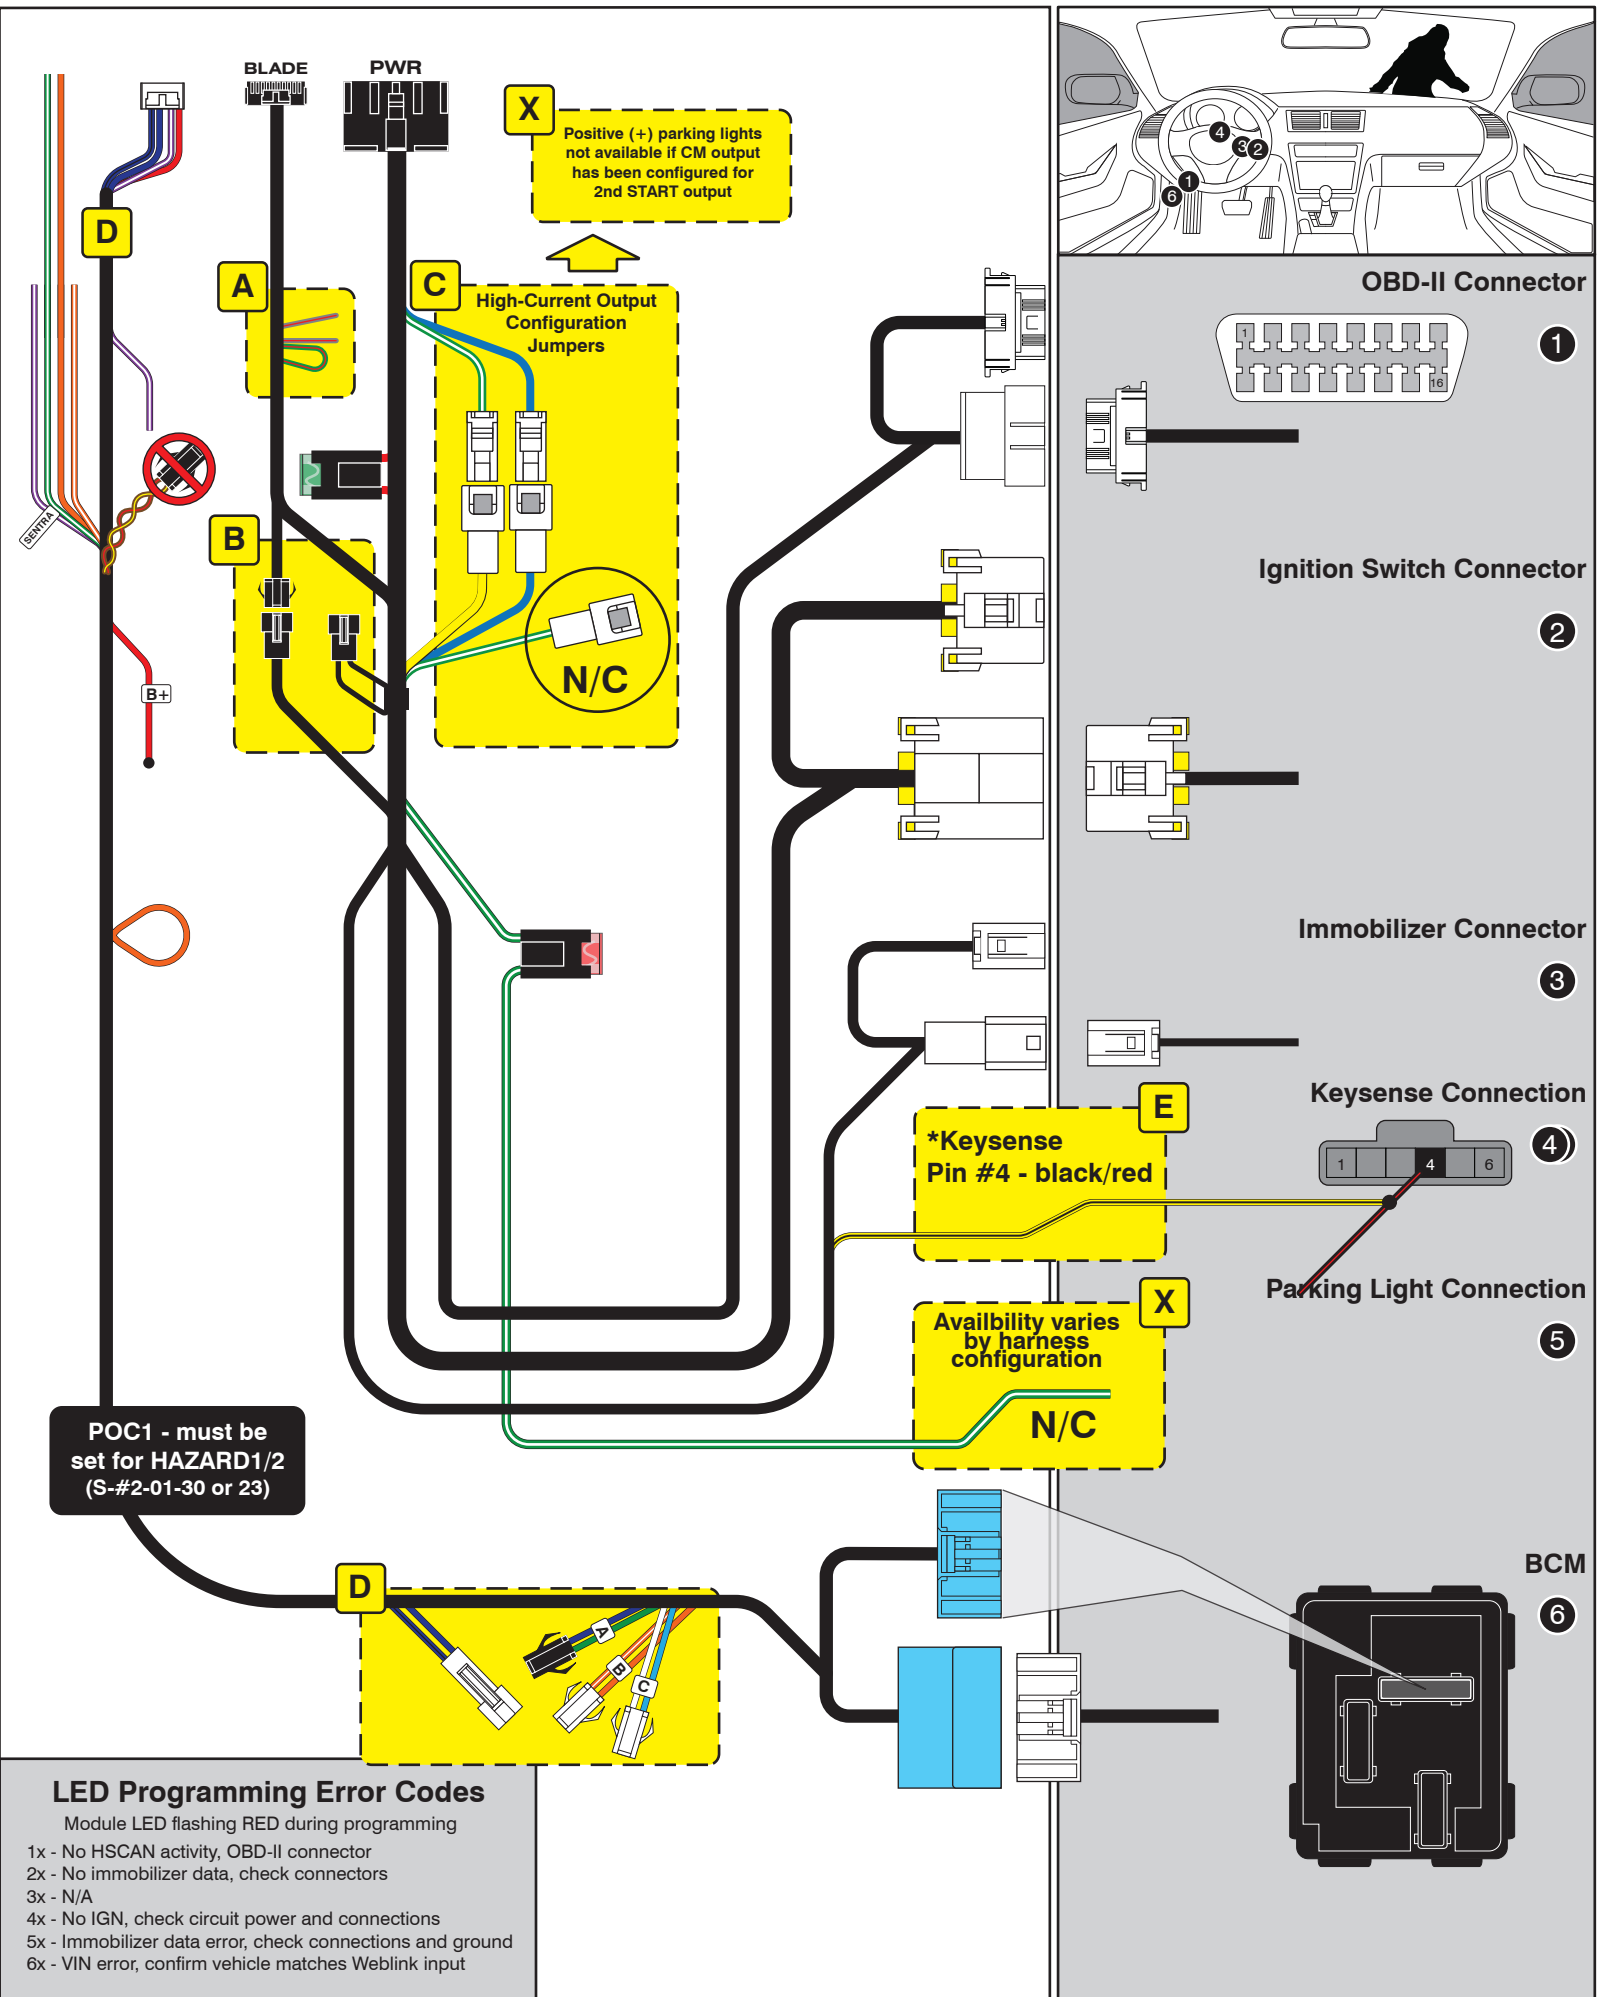

**POC1 - must be set for HAZARD1/2 (S-#2-01-30 or 23)**


- LED Programming Error Codes**  
Module LED flashing RED during programming
- 1x - No HSCAN activity, OBD-II connector
  - 2x - No immobilizer data, check connectors
  - 3x - N/A
  - 4x - No IGN, check circuit power and connections
  - 5x - Immobilizer data error, check connections and ground
  - 6x - VIN error, confirm vehicle matches Weblink input

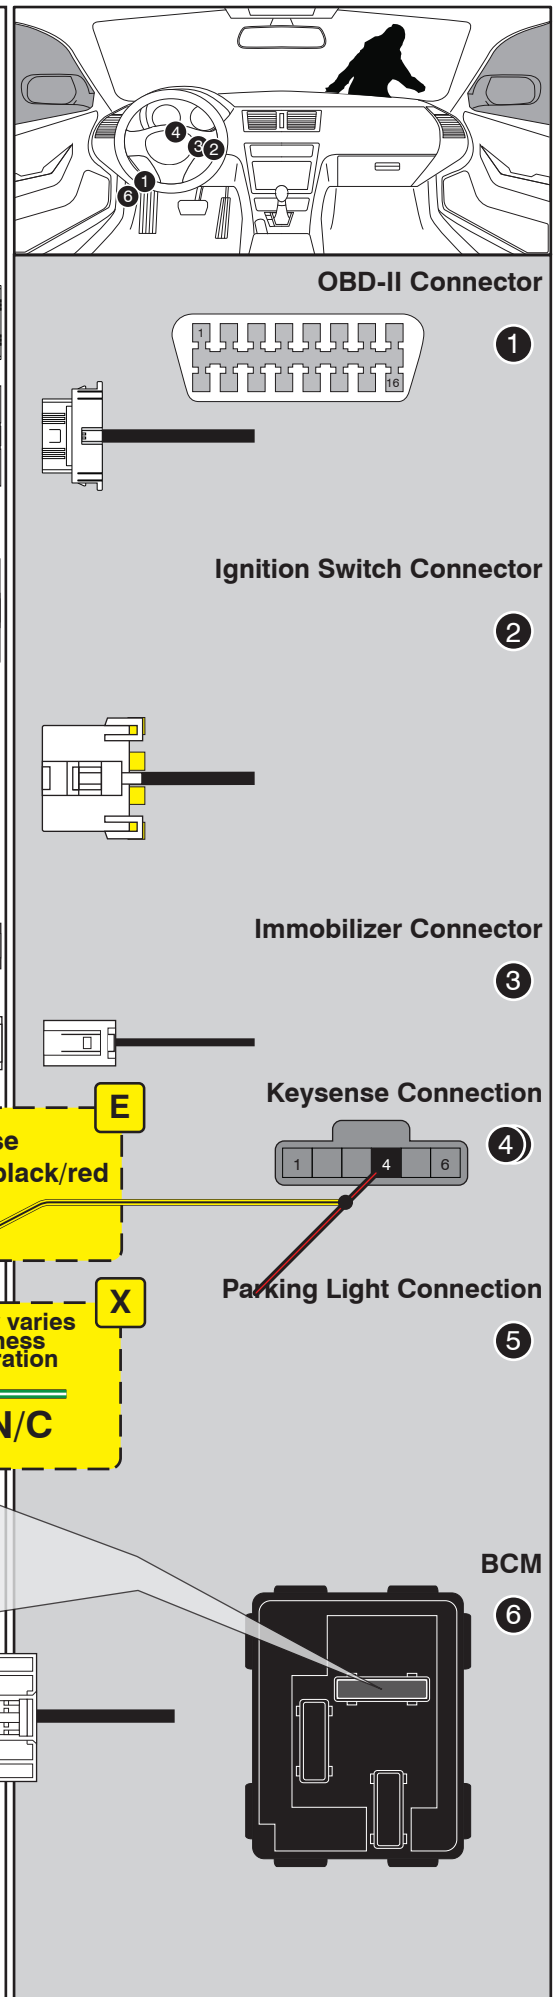

# FTI-NSK1-NI4 Type 3: Supplemental Intelli-Key Wiring Diagram



**A** Connector illustrations depict the wire-side view of the connector at the Intelli-Key module, position is accurate to this view.

**B** FT-RLY-10A is a compact, pre-wired relay accessory, wire as illustrated if available. If you are using a standard Bosch type relay, the illustrations utilize consistent color coding for the required connections.

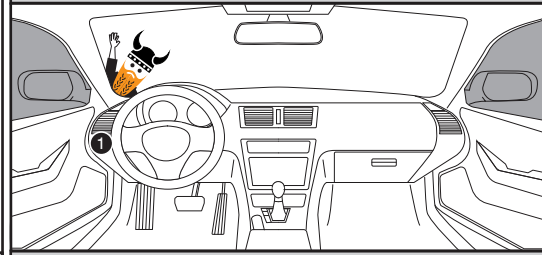


Make	Model	Year	Intelli-Key Module Location
Infiniti	QX56 Intelli-Key	2008-10	(1) A-Pillar, behind dash <b>Pin #6 - green/red</b>

## \*Tic-Tac-Toe

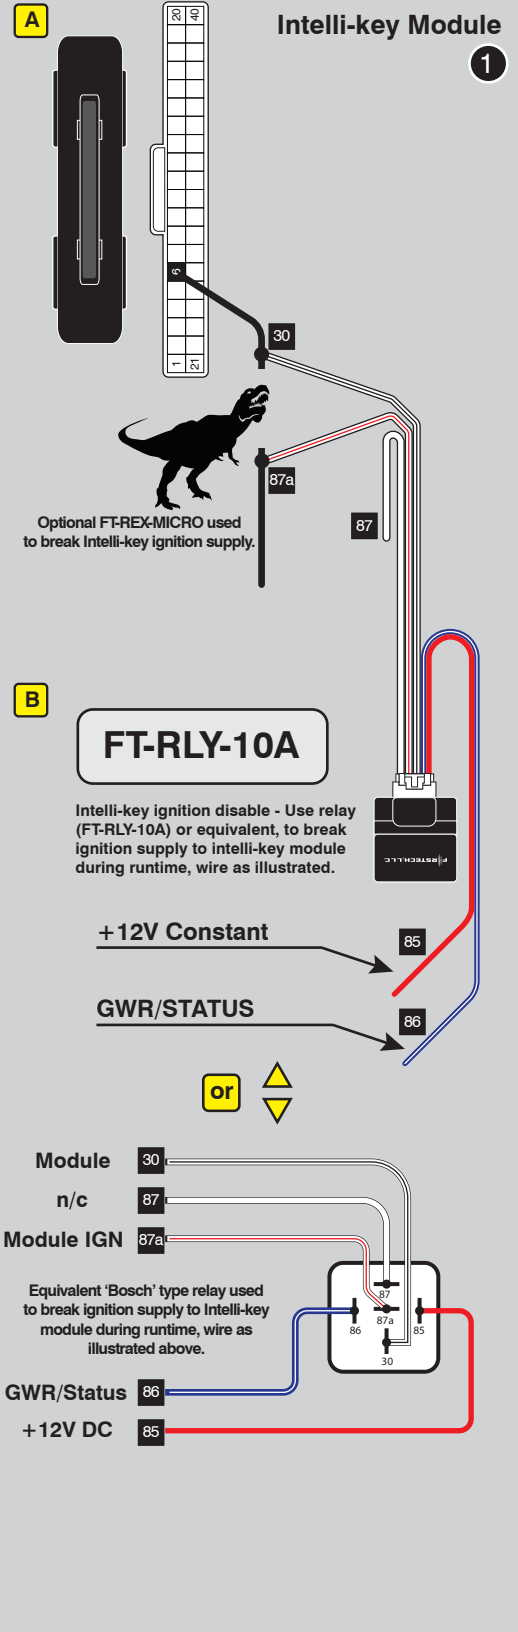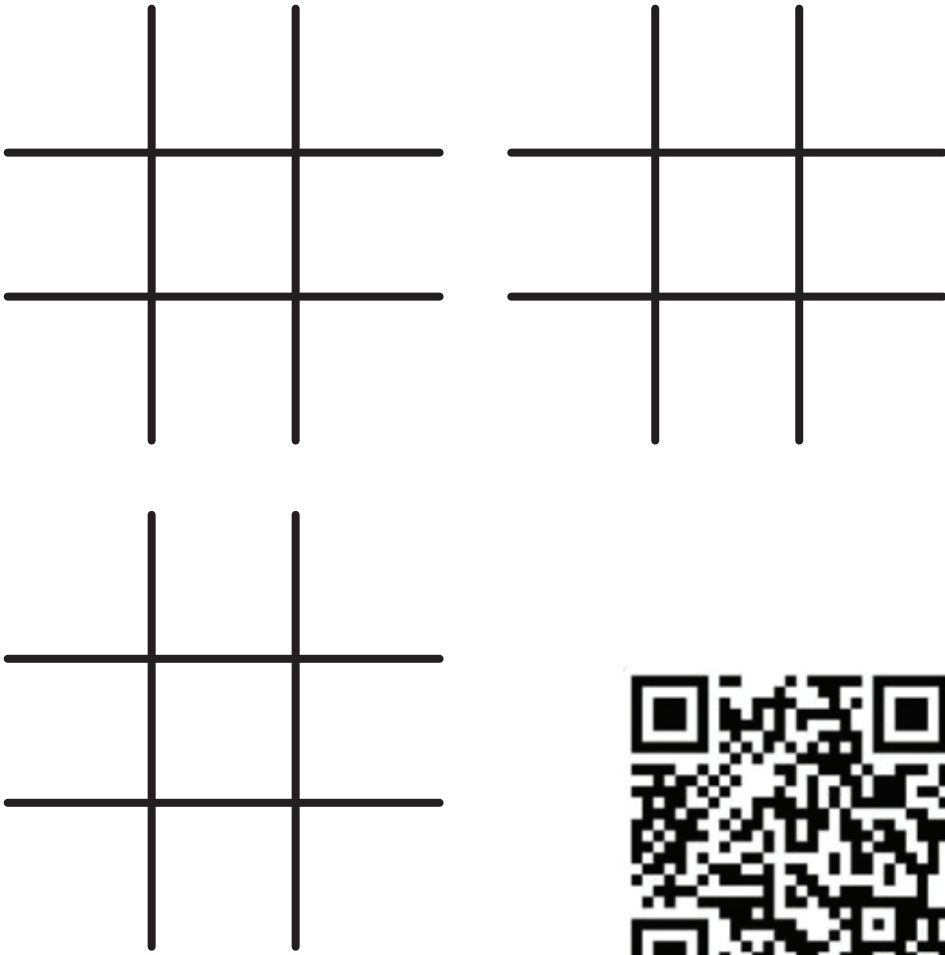

## CARTRIDGE INSTALLATION

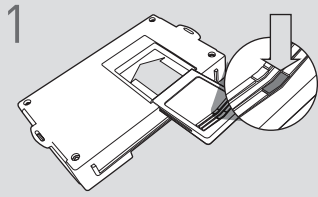

1 Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.



## MODULE PROGRAMMING PROCEDURE
 
### NOTE

I To complete this procedure, use one regular key or one valet key.




  II When programming, all key fobs must be located at least 10 feet away from the vehicle.




1 Insert key into ignition.

 2




Turn key to ON position.

 3



Wait, LED will turn solid BLUE for 2 seconds.

 4



Turn key to OFF position.

5

Module Programming Procedure completed.