# 

F	RSTECH, LLC. SUPPORT - 1(888) 820-3690, EXT. 203
	SUPPORT - 1(888) 820-3690, EXT. 20

Make	Model	Year Install		ВСМ	Lights Locks		POC 1	I/O Changes	
DL-NI4 Nissan A	rmada Intelli-Key AT	2008-15	Type 3	RSC	Park / Auto NI-LOCK	DATA		Green White/Blue START2/ACC	

Intstall Type 1 requires BLADE-AL(DL)-NI4, flash module and update the controller firmware before beginning the installation.

I/O Changes: Each vehicle in this installation group have different configuration requirements for proper handling of ACC and START circuit handling. Please ensure that the appropritate changes have been made before testing. The required changes are listed below. Intelli-Key Wiring: Additional wiring and relay are required. See page 3 of this document for additional location and interface requirements.

#### CM7000/7200 I/O Changes:

START2: Move CM jumper 3 to Starter, connect CN1 GREEN/WHITE wire to yellow 2nd START wire at configuration point [C]

ACC: Move CM jumper 2 to Accessory, connect the CN1 BLUE wire to blue ACC wire at configuration point [C]

#### **Optional Hazard Light Control:**

NI-LOCK harness green/white is pre-wired for hazards, connect harness wire to the controller POC1 (blue/white), additional configuration required. Vehicles equipped with a MOMENTARY activation switch require that POC1 be configured for Hazard light (POC option #30), if the switch is LATCHING type you will use Hazard light 2 (POC option #23).

#### Auto-Light OFF:


NI-LOCK harness orange is pre-wired for Auto-light shut off, if the vehicle is equipped with auto-lights connect CM REARM output (orange) to orange wire in harness.

NI-LOCK harness configuration: Configure Double Pulse Unlock (feature 1-04, option 2) Vehicle lock functions are handled through data, additional harness configuration is not required.


# FTI-NSK1: Installation and Configuration Notes


- CUTS REQUIRED INSULATE AFTER CUTTING
- REQUIRED CONNECTION USE JUMPER IF NO IMMOBILIZER
- CONNECT AS ILLUSTRATED
- CONNECT AS ILLUSTRATED
- CONNECT AS ILLUSTRATED




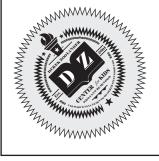

	FEATURE COVERAGE																			
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		0	0	0	
IMMOBILIZER DATA	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	TRUNK/HATCH RELEASE	A/M ALARM CTRL	A/M RS CONTROL	HOOD STATUS	DOOR STATUS	TRUNK STATUS	RAP SHUTDOWN	BRAKE STATUS	E-BRAKE STATUS	тасн оптрит		SECURE TAKEOVER	PARKING LIGHTS	HAZARD LIGHTS	

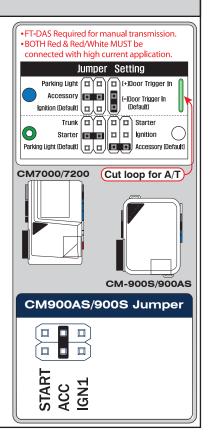

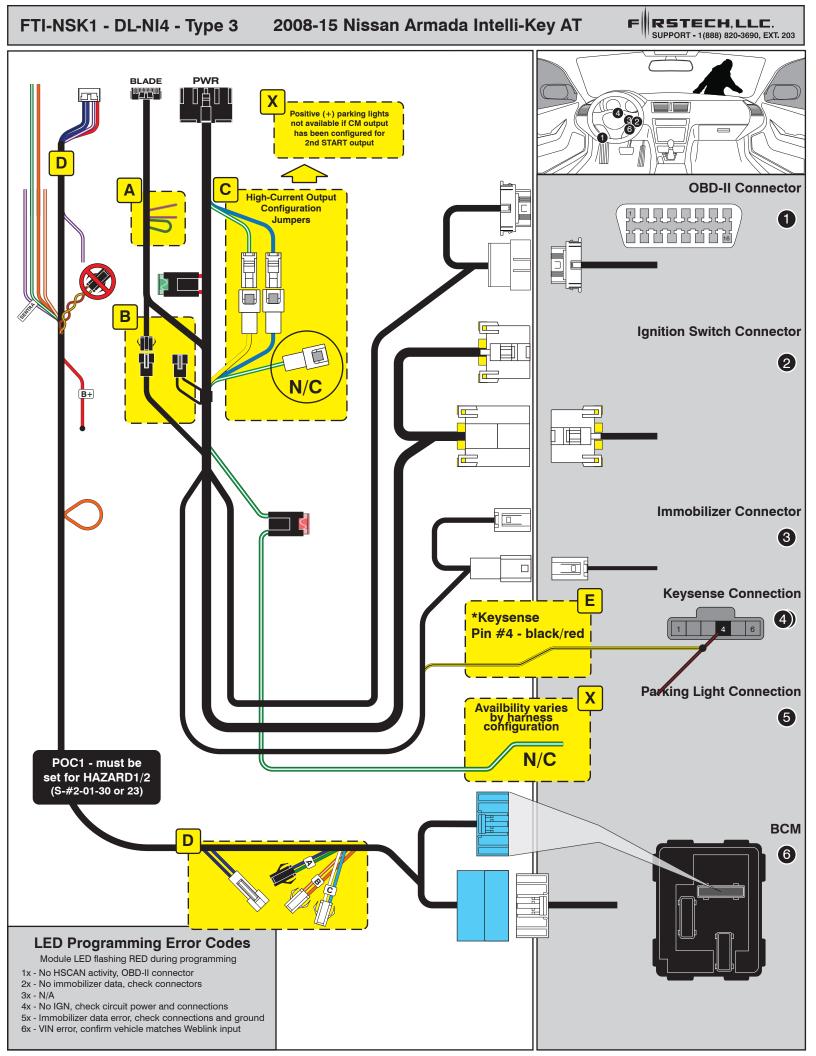

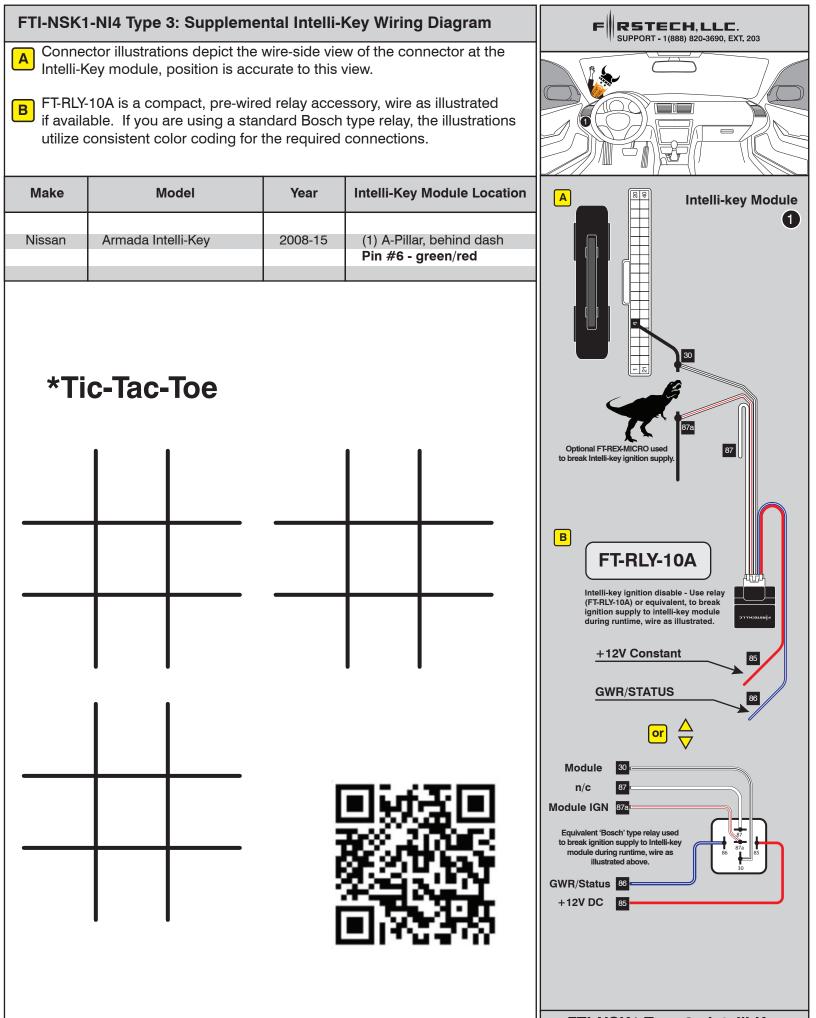

FTI-NSK1 Type 3 - Intelli-Key SUPPORT - 1 (888) 820-3690, EXT. 203




# DOORLOCK INTERFACE NISSAN/INFINITI

 Patent No. US 8,856,780 CA 2759622

Page 20 of 21 COM-BLADE-AL(DL)-NI4-EN Doc. No.: ##75307## 20210414

## CARTRIDGE INSTALLATION



Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.

## MODULE PROGRAMMING PROCEDURE
 
### NOTE


I To complete this procedure, use one regular key or one valet key



When programming, all key fobs must be located at least 10 feet away from the vehicle.



 1



Insert key into ignition.

2 ON ON

Turn key to ON position.

3

Wait, LED will turn solid BLUE for 2 seconds.

OFF OFF

Turn key to OFF position.

5

Module Programming Procedure completed.