

LED Programming Error Codes

Module LED flashing RED during programming

- 1x - No HSCAN activity, OBD-II connector
- 2x - No immobilizer data, check connectors
- 3x - N/A
- 4x - No IGN, check circuit power and connections
- 5x - Immobilizer data error, check connections and ground
- 6x - VIN error, confirm vehicle matches Weblink input

Frontier Clutch - (+) 12V during crank
Blue, pin #2 of clutch switch, located at the top of the clutch bracket assembly

CARTRIDGE INSTALLATION



1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

 
MODULE PROGRAMMING PROCEDURE

NOTE

I To complete this procedure, use one regular key or one valet key.




II When programming, all key fobs must be located at least 10 feet away from the vehicle.




1 Insert key into ignition.

 2



Turn key to ON position.

 3



Wait, LED will turn solid BLUE for 2 seconds.

4



Turn key to OFF position.

5

Module Programming Procedure completed.