

Make	Model	Year	Install	BCM	Lights	Locks	POC 1	I/O Changes
DL-NI4 Nissan	Frontier STD Key MT	2005-19	Type 1	RSC	Park / Auto NI-LOCK	DATA	Hazard1/2	Green White/Blue START2/ACC

Installation **Type 1** requires **BLADE-AL(DL)-NI4**, flash module and update the controller firmware before beginning the installation.

I/O Changes: Each vehicle in this installation group have different configuration requirements for proper handling of ACC and START circuit handling. Please ensure that the appropriate changes have been made before testing.

The required, controller specific, changes are listed below.

CM7000/7200 I/O Changes:

START2: Move CM jumper 3 to Starter, connect CN1 GREEN/WHITE wire to yellow 2nd START wire at configuration point [C]

ACC: Move CM jumper 2 to Accessory, connect the CN1 BLUE wire to blue ACC wire at configuration point [C]

Optional Hazard Light Control:

NI-LOCK harness **green/white** is pre-wired for hazards, connect harness wire to the controller POC1 (**blue/white**), additional configuration required. Vehicles equipped with a **MOMENTARY** activation switch require that POC1 be configured for **Hazard light** (POC option #30), if the switch is **LATCHING** type you will use **Hazard light 2** (POC option #23).

Clutch Bypass: M/T equipped Frontier requires additional wiring and a relay to provide the clutch signal bypass. A relay, activated by the CM **red/black** (neg start) output will be used to provide +12V during start, to the **blue** wire at the clutch switch.

Auto-Light OFF:

NI-LOCK harness **orange** is pre-wired for Auto-light shut off, if the vehicle is equipped with auto-lights connect CM REARM output (**orange**) to **orange** wire in harness.

D **NI-LOCK harness configuration:** Configure Double Pulse Unlock (**feature 1-04, option 2**) Vehicle lock functions are handled through data, additional harness configuration is not required.

FTI-NSK1: Installation and Configuration Notes

- A** CUTS REQUIRED - INSULATE AFTER CUTTING
- B** REQUIRED CONNECTION - USE JUMPER IF NO IMMOBILIZER
- C** CONNECT AS ILLUSTRATED
- D** CONNECT AS ILLUSTRATED
- E** CONNECT AS ILLUSTRATED



FEATURE COVERAGE																	
IMMOBILIZER DATA	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	TRUNK/HATCH RELEASE	A/M ALARM CTRL	A/M RS CONTROL	HOOD STATUS	DOOR STATUS	TRUNK STATUS	BRAKE STATUS	E-BRAKE STATUS	TACH OUTPUT	SECURE TAKEOVER	PARKING LIGHTS	HAZARD LIGHTS
○	○	○	○							○			○	○			○

•FT-DAS Required for manual transmission.
•BOTH Red & Red/White MUST be connected with high current application.


Jumper Setting

CM7000/7200 **Cut loop for A/T**

CM-900S/900AS


CM900AS/900S Jumper

START
ACC
IGN1

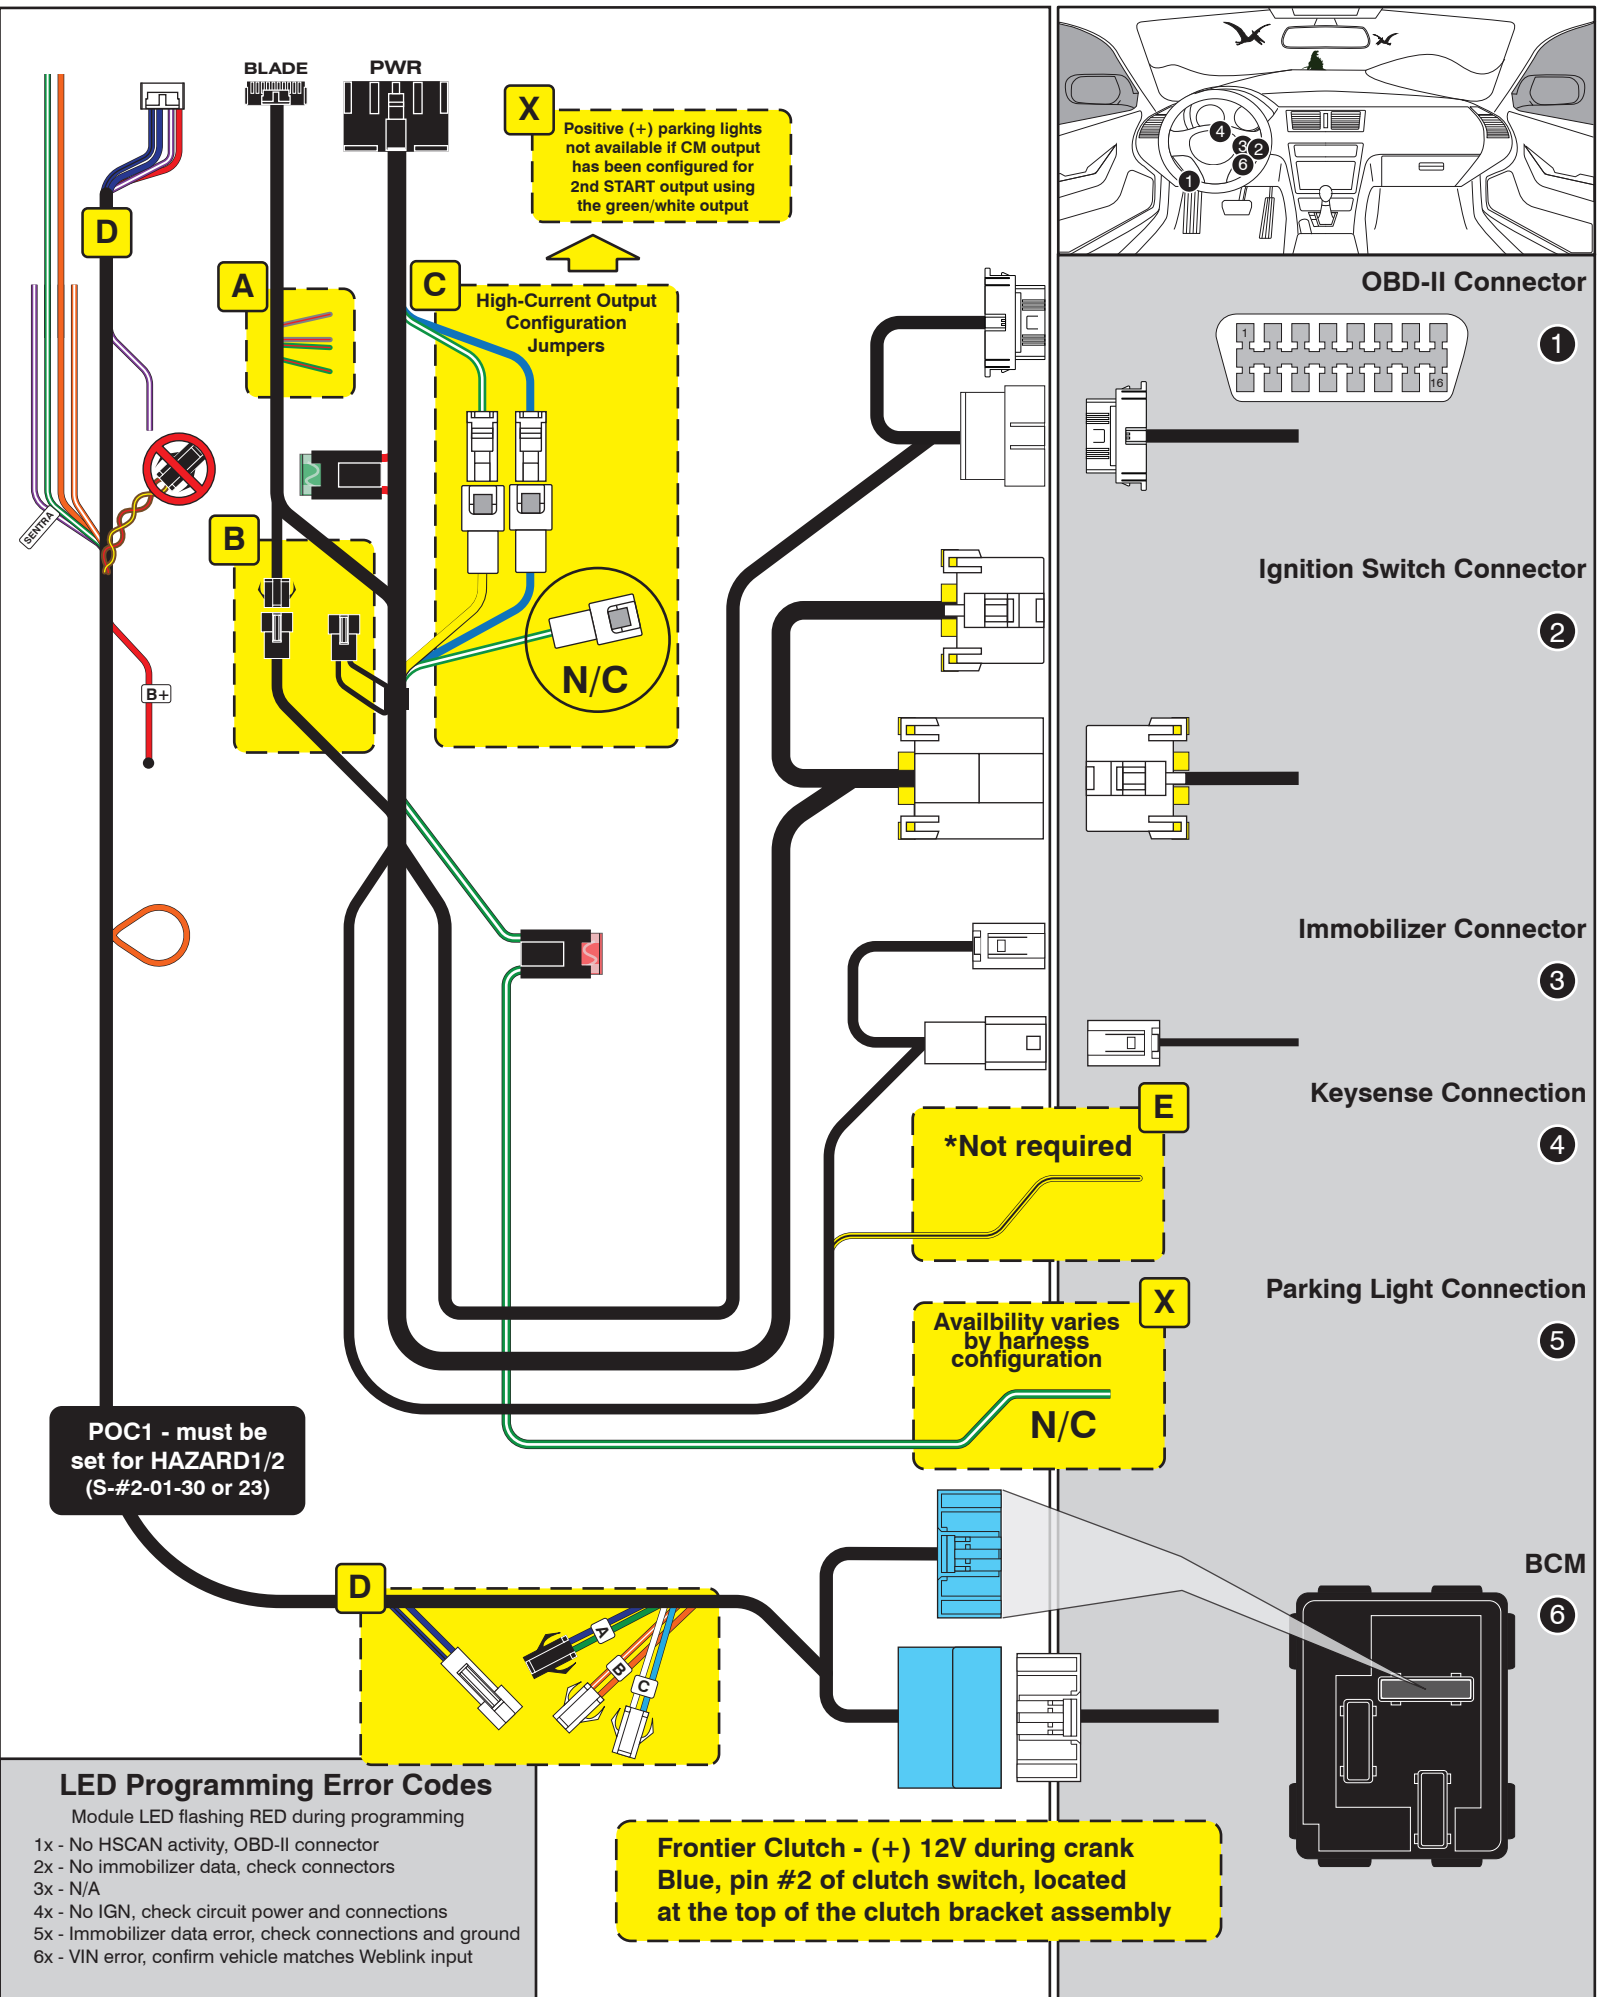

CARTRIDGE INSTALLATION

1

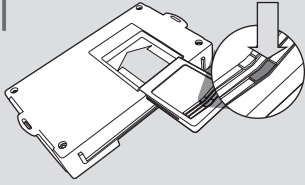

Slide cartridge into unit. Notice button under LED.

 
2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE

NOTE


I To complete this procedure, use one regular key or one valet key.



 II When programming, all key fobs must be located at least 10 feet away from the vehicle.




1

 


Insert key into ignition.

 2




Turn key to ON position.

 3



Wait, LED will turn solid BLUE for 2 seconds.

 4



Turn key to OFF position.

5

Module Programming Procedure completed.