

POC1 - must be set for HAZARD1/2 (S-#2-01-30 or 23)

X Positive (+) parking lights not available if CM output has been configured for 2nd START output using the green/white output

High-Current Output Configuration Jumpers

N/C

X Availability varies by harness configuration

N/C


LED Programming Error Codes

Module LED flashing RED during programming

- 1x - No HSCAN activity, OBD-II connector
- 2x - No immobilizer data, check connectors
- 3x - N/A
- 4x - No IGN, check circuit power and connections
- 5x - Immobilizer data error, check connections and ground
- 6x - VIN error, confirm vehicle matches Weblink input

CARTRIDGE INSTALLATION

1

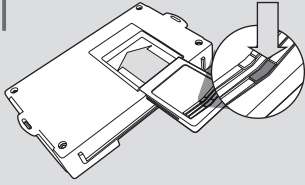

Slide cartridge into unit. Notice button under LED.

 
2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE

NOTE


I To complete this procedure, use one regular key or one valet key.



 II When programming, all key fobs must be located at least 10 feet away from the vehicle.




1

 


Insert key into ignition.

 2




Turn key to ON position.

 3



Wait, LED will turn solid BLUE for 2 seconds.

 4



Turn key to OFF position.

5

Module Programming Procedure completed.