


X Positive (+) parking lights not available if CM output has been configured for 2nd START output using the green/white output

C High-Current Output Configuration Jumpers



N/C

X Availability varies by harness configuration
N/C

POC1 - must be set for HAZARD1/2 (S-#2-01-30 or 23)

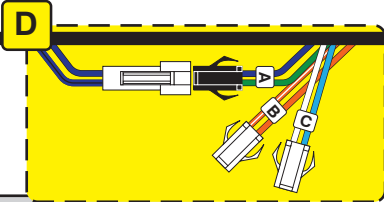

- LED Programming Error Codes**
- Module LED flashing RED during programming
- 1x - No HSCAN activity, OBD-II connector
 - 2x - No immobilizer data, check connectors
 - 3x - N/A
 - 4x - No IGN, check circuit power and connections
 - 5x - Immobilizer data error, check connections and ground
 - 6x - VIN error, confirm vehicle matches Weblink input

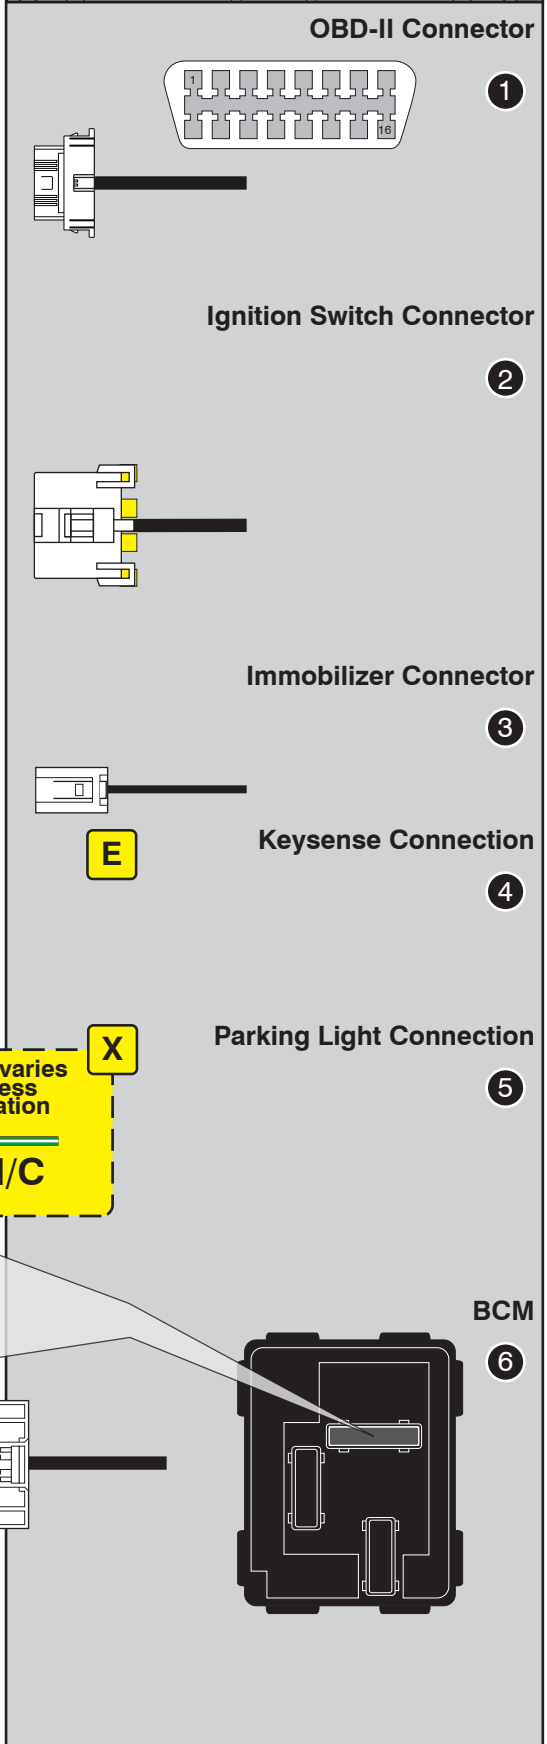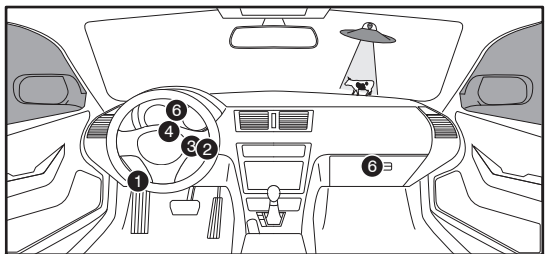

CARTRIDGE INSTALLATION



1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

 
MODULE PROGRAMMING PROCEDURE

NOTE

I To complete this procedure, use one regular key or one valet key.




II When programming, all key fobs must be located at least 10 feet away from the vehicle.




1 Insert key into ignition.

 2




Turn key to ON position.

 3



Wait, LED will turn solid BLUE for 2 seconds.

 4



Turn key to OFF position.

5

Module Programming Procedure completed.