


**Códigos de error de programación de LED**

El LED del módulo parpadea en ROJO durante la programación

- 1x - Sin actividad HSCAN, conector OBD-II
- 2x - Sin datos del inmovilizador, verifique los conectores
- 3x - N / A
- 4x - Sin IGN, verifique la alimentación y las conexiones del circuito
- 5x - Error de datos del inmovilizador, verificar conexiones y tierra
- 6x: error VIN, confirma que el vehículo coincide con la entrada del enlace web

**Frontier Clutch - (+) 12V during crank**  
Blue, pin #2 of clutch switch, located at the top of the clutch bracket assembly

## CARTRIDGE INSTALLATION

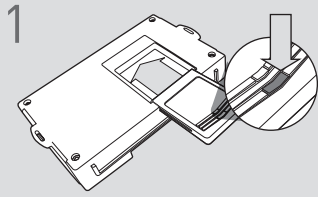

1 Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.



## MODULE PROGRAMMING PROCEDURE
 
### NOTE

I To complete this procedure, use one regular key or one valet key.




  II When programming, all key fobs must be located at least 10 feet away from the vehicle.




1 Insert key into ignition.

 2




Turn key to ON position.

 3



Wait, LED will turn solid BLUE for 2 seconds.

 4



Turn key to OFF position.

5

Module Programming Procedure completed.