FTI-NSP2: Vehicle Coverage and Preparation Notes

	RSTECH, LLC. SUPPORT - 1(888) 820-3690, EXT. 203
- 11	SUPPORT - 1(888) 820-3690, EXT. 203

Make	Model	Year	Install	CAN	Lights	всм	POC	I/O Changes
DL-NI8 Nissan	Qashqai PTS	2017-21	Type A	ВСМ	(Hazard) POC 1	DSD	Hazard1/2	Green White/Blue NONE/NONE

Type A install requires BLADE-AL(DL)-NI8, flash module and update the controller firmware before installing.

CAN: CAN data is acquired from the BCM using the green harness cable. Secure against main harness body, and route safely.

POC1: Visual status confirmations and diagnostic information are provided by hazard light connections in the harness assembly, POC1 must be configured for either **Hazard1** (POC option #30 (momentary switch) **or Hazard2** (POC option #23 (latching switch).

Type A Door Locks: Connect female white 2-pin door lock connector to male white 2-pin (A) BCM jumper.

CM Unlock Configuration: Proper unlock control requires configuring the controller disarm output to double-pulse disarm. Set feature option 1-13 to setting 2 (Double Pulse).

Vehicle Damage Warning:


Caution should be taken to avoid mixing up the BCM connectors, vehicle damage will result if the connectors are positioned improperly. It is advised that you make the BCM connections one at a time, confirming that each T-harness connection is at the correct BCM position before proceeding to the next connection, attempting to program, or attempting to remote start.


FTI-NSP2: Installation and Configuration Notes

- A REQUIRED CONNECTIONS SECURE UNUSED I/O CONNECTORS
- B REQUIRED CONNECTIONS SEE WARNING ABOVE
- **C** REQUIRED CONNECTIONS
- D REQUIRED CONNECTION REQUIRES CONFIGURATION (Option 1-13 to 2)
- E NOT REQUIRED

A TANK THE T	
MMMMM,	

	FEATURE COVERAGE																	
0	0	0	0	0	0	0	0	0	0	0								
IMMOBILIZER DATA	SECURE TAKEOVER	A/M ALARM CONTROL FROM OEM REMOTES	A/M RS CONTROL FROM OEM REMOTES	PTS CONTROL	DOOR STATUS	TRUNK STATUS	BRAKE STATUS	тасн оитрит	E-BRAKE OUTPUT	HAZARD LIGHTS								

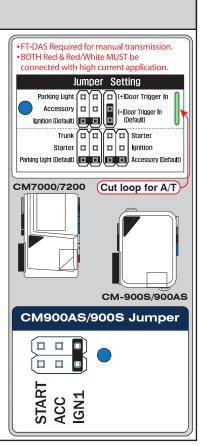

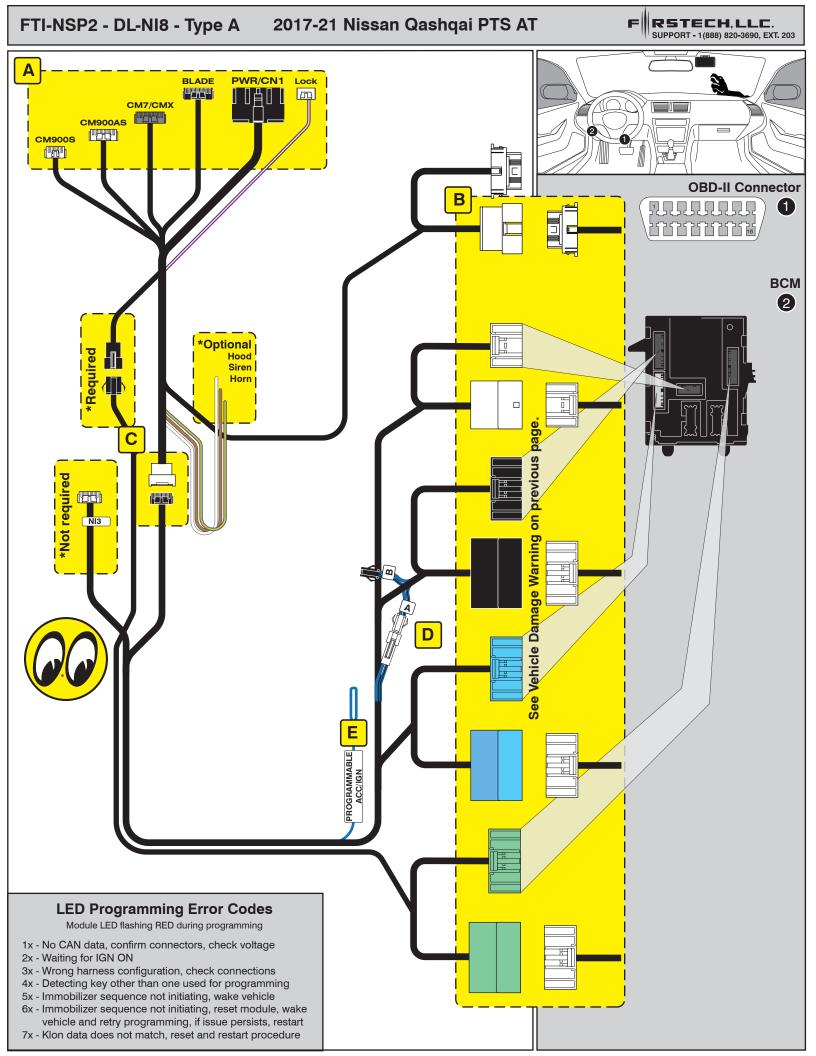




DOORLOCK INTERFACE INFINITI/NISSAN

Patent No. US 8,856,780 CA 2759622

Page 14 of 16 COM-BLADE-AL(DL)-NI8-EN Doc. No.: ##75332## 20210414

 CARTRIDGE INSTALLATION



Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

 
MODULE PROGRAMMING PROCEDURE

OFF ACC ON START

Set ignition to ON position.



Wait. LED will turn solid RED.



then solid BLUE for 1 second, then solid RED.

3 OFF ACC ON START

Set ignition to OFF position.



4

Wait, LED will turn OFF.

5 OFF ACC ON START

Set ignition to ON position.



If LED flashes BLUE rapidly, proceed with step 7. If LED turns solid BLUE for 2 seconds, proceed with step 13.

7 OFF ACC ON START

Set ignition to OFF position.



8

WARNING: Disconnect power last. Disconnect module from vehicle.



Connect module to computer and proceed with extended programming.

10

WARNING: Connect power first. Connect module to vehicle.

11 OFF ACC ON START

Set ignition to ON position.



Wait, LED will turn solid BLUE for 2 seconds.

13 OFF ACC ON START

Set ignition to OFF position.



Module Programming Procedure completed.

14



DOORLOCK INTERFACE INFINITI/NISSAN

Patent No. US 8,856,780 CA 2759622

Page 16 of 16 COM-BLADE-AL(DL)-NI8-EN Doc. No.: ##75332## 20210414

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PUSH TO START - TO THE VEHICLE OWNER

NOTE

All vehicle doors must be closed and locked prior to remote start sequence.



TIME RESTRICTION COMING UP!

1



Unlock vehicle door using OEM or after-market remote, or door request switch.



TIME RESTRICTI ON

Within 45 SECONDS from previous step:

Open vehicle door. Enter vehicle. Close vehicle door.

Press and release BRAKE pedal.

2

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.

WWW.IDATALINK.COM