
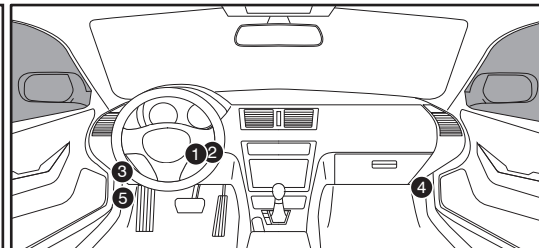



FIRSTECH, LLC.
SUPPORT - 1 (888) 820-3690, EXT. 203

Cambios de E / S: no se requieren cambios.

[illegible]

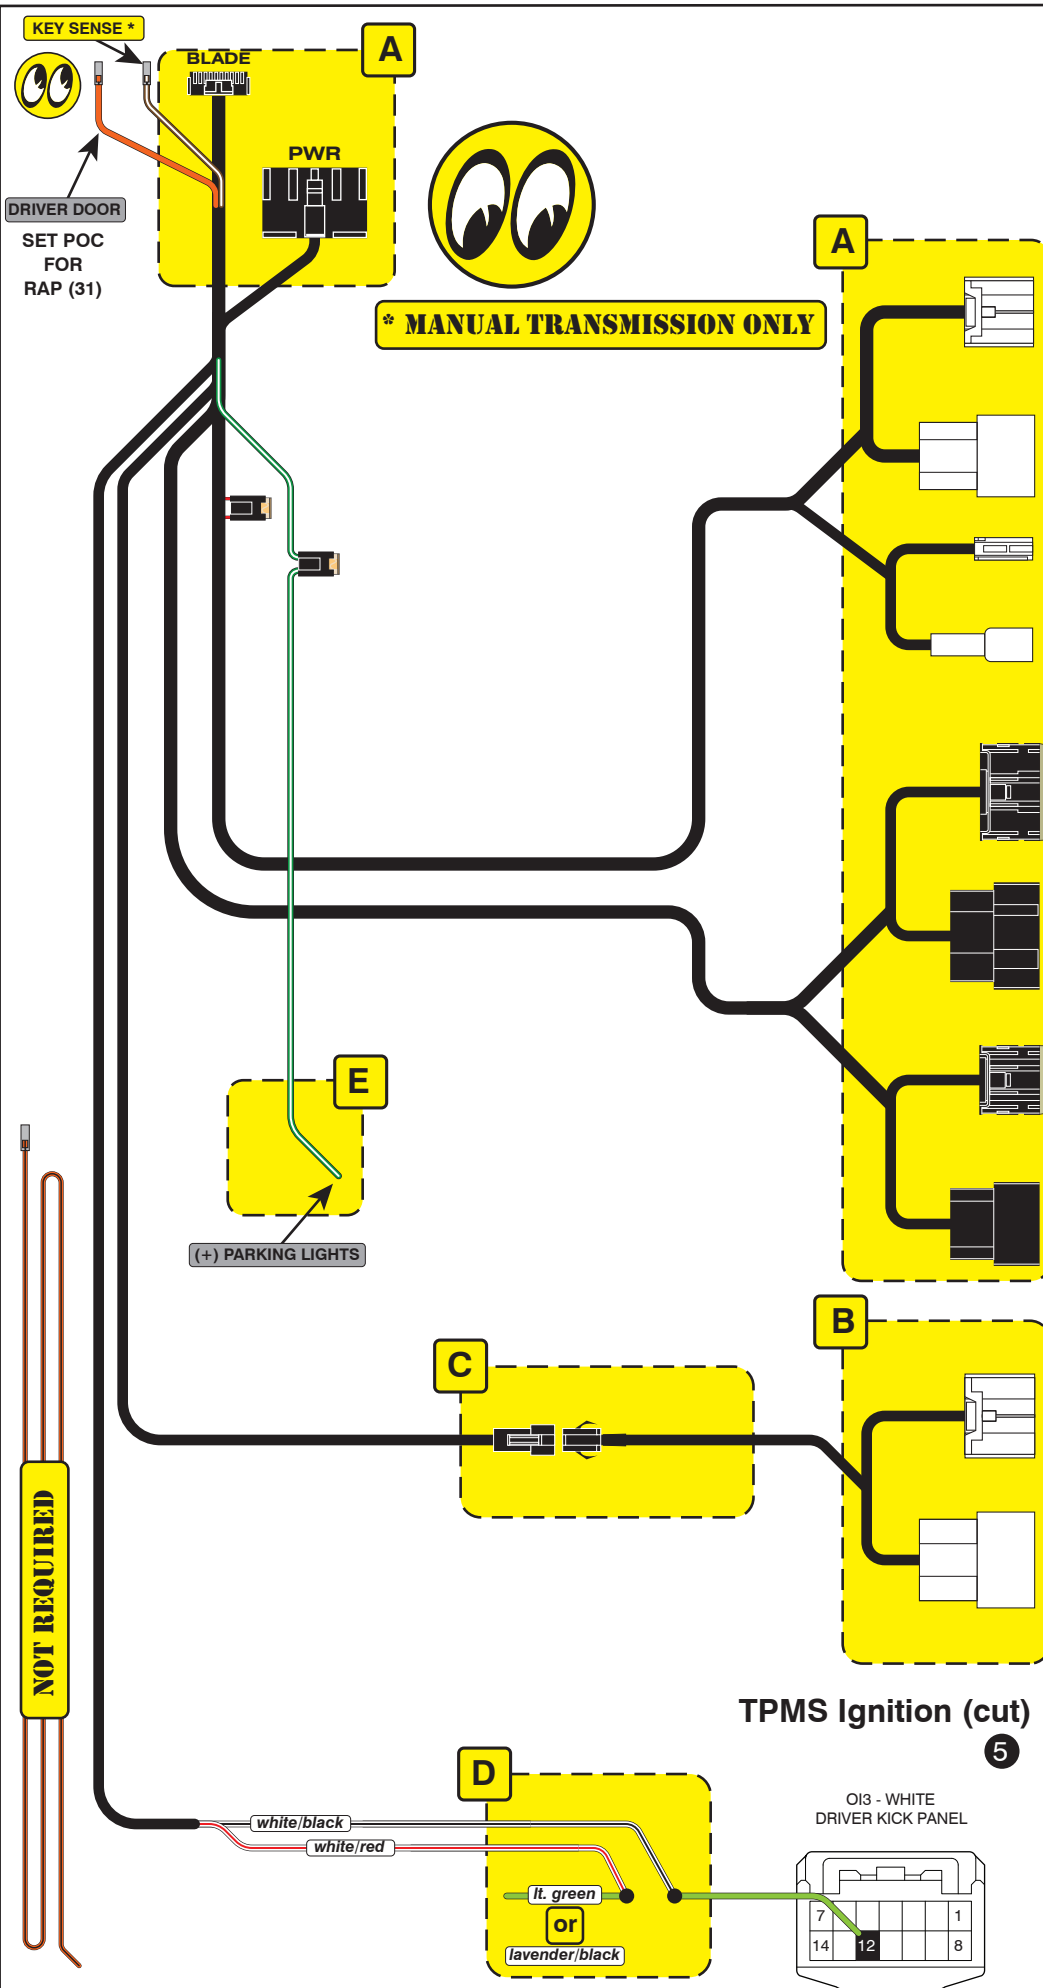


Ignition Connector ①

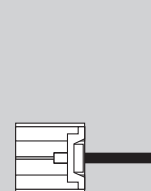


Keysense ②



 
Main Body ECU ③



Junction Connector (IMI/IMO) ④

 


PASSENGER KICK PANEL
GRAY

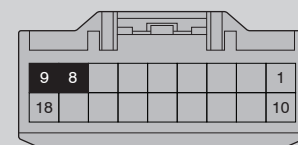

Códigos de error de programación de LED TL10

- El LED del módulo parpadea en ROJO durante la programación
- 1x - No hay actividad CAN, verifique las conexiones del arnés.
 - 2x - No hay encendido analógico, verifique las conexiones del mazo de cables.
 - 3x - VIN recibido pero no en la tabla, comuníquese con iDatalink.
 - 4x - No hay datos del inmovilizador (IMI), verifique la configuración del adaptador.
 - 5x - No hay datos del inmovilizador (IMO), verifique la configuración del adaptador.
 - 6x - Problema con el registro de Klon.
 - 7x: CryptKey no coincide, vuelve a flashear y rehace Klon.

CARTRIDGE INSTALLATION

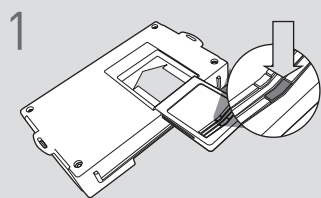

Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

NOTE

 
! IMPORTANT: The hood must be closed.

1 OFF ACC **ON** START

Set ignition to ON position.



2



Wait, LED will turn solid RED to confirm that the ignition is ON.

3



 
Wait, LED will flash BLUE rapidly.

4 OFF ACC ON START

Set ignition to OFF position.




5




WARNING:
Disconnect power last.
Disconnect module from vehicle.

6

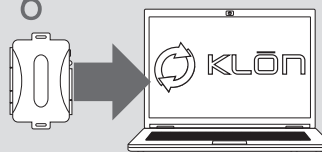

Connect module to computer and proceed with extended programming.

 7



WARNING:
Connect power first.
Connect module to vehicle.

 
8

OFF ACC **ON** START

Set ignition to ON position.




9



Wait, LED will turn solid RED to confirm that the ignition is ON.

 10



Wait, LED will turn solid BLUE for 2 seconds.

11

OFF ACC ON START

Set ignition to OFF position.



12

Module Programming Procedure completed.