
















FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

• FT-DAS Required for manual transmission.
• BOTH Red & Red/White MUST be connected with high current application.


Jumper		Setting	
 Parking Light Accessory Ignition (Default)	  	  	(+)Door Trigger In (-)Door Trigger In (Default)
 Trunk Starter Parking Light (Default)	  	  	Starter Ignition Accessory (Default)

CM7000/7200



Do not cut for M/T

CMX

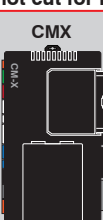

CMX High Current Programmable (+) Output Channels

HCP #1 - Parking Light



HCP #2 - Accessory

HCP #3 - Ignition


[2] 2ND START

[3] 2ND IGNITION

[4] 2ND ACCESSORY

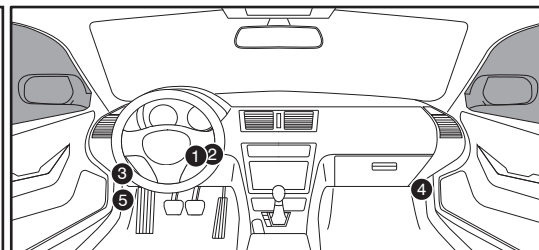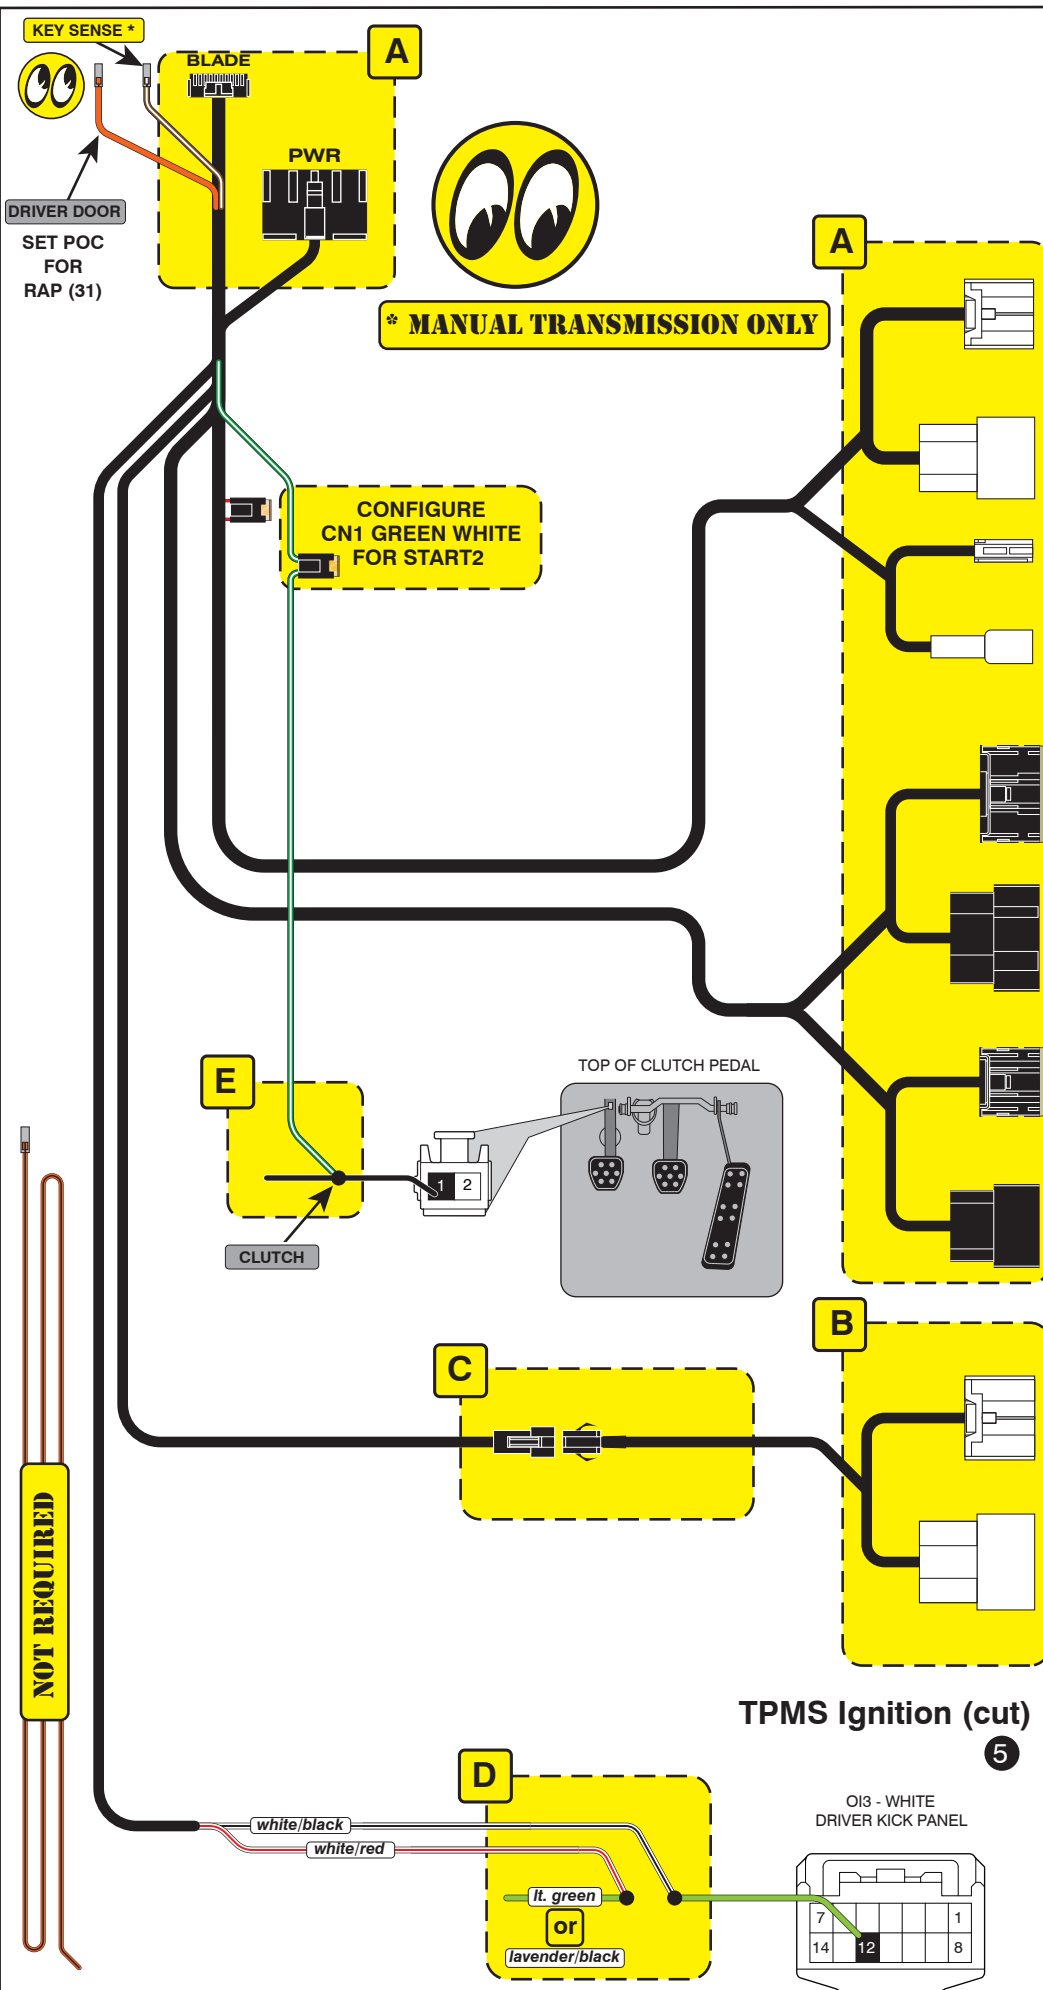


Ignition Connector ①

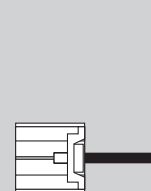


Keysense ②



 
Main Body ECU ③



Junction Connector (IMI/IMO) ④

 

PASSENGER KICK PANEL GRAY

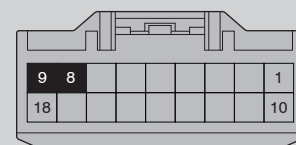


TL10 LED Programming Error Codes

Module LED flashing RED during programming

- 1x - No CAN activity, check harness connections.
- 2x - No analog Ignition, check harness connections.
- 3x - VIN received but not in table, contact iDataLink.
- 4x - No Immobilizer data (IMI), check adapter configuration.
- 5x - No Immobilizer data (IMO), check adapter configuration.
- 6x - Problem with Klon log, retry programming from step 1.
- 7x - CryptKey doesn't match, reflash and redo Klon.

CARTRIDGE INSTALLATION

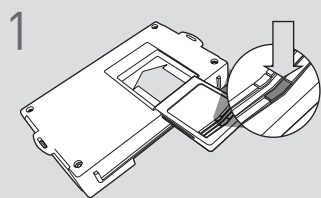

Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

NOTE

 
! IMPORTANT: The hood must be closed.

1 OFF ACC **ON** START

Set ignition to ON position.



2



Wait, LED will turn solid RED to confirm that the ignition is ON.

3



 
Wait, LED will flash BLUE rapidly.

4 OFF ACC ON START

Set ignition to OFF position.




5



WARNING:
Disconnect power last.
Disconnect module from vehicle.

6

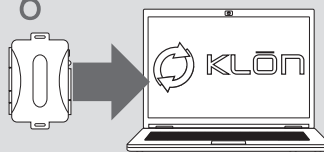

Connect module to computer and proceed with extended programming.

7



WARNING:
Connect power first.
Connect module to vehicle.

 
8

OFF ACC **ON** START

Set ignition to ON position.




9



Wait, LED will turn solid RED to confirm that the ignition is ON.

 10



Wait, LED will turn solid BLUE for 2 seconds.

11

OFF ACC ON START

Set ignition to OFF position.



12

Module Programming Procedure completed.