




Ignition Connector ①

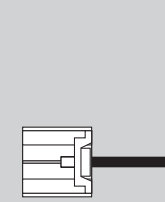


Keysense ②

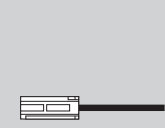


Main Body ECU ③

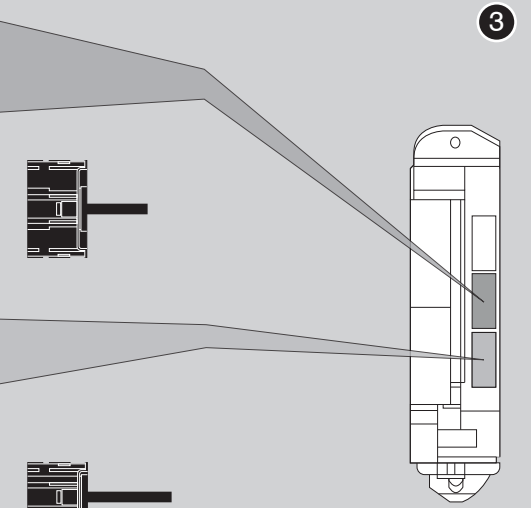


Junction Connector (IMI/IMO) ④

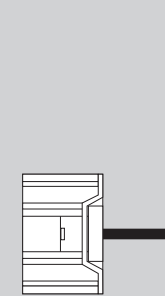

AG4 - WHITE
LEFT SIDE OF BODY ECU

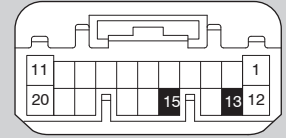


TPMS Ignition (cut) ⑤

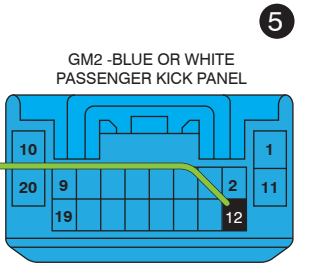

Códigos de error de programación de LED TL10

- El LED del módulo parpadea en ROJO durante la programación
- 1x - No hay actividad CAN, verifique las conexiones del arnés.
 - 2x - No hay encendido analógico, verifique las conexiones del mazo de cables.
 - 3x - VIN recibido pero no en la tabla, comuníquese con iDatalink.
 - 4x - No hay datos del inmovilizador (IMI), verifique la configuración del adaptador.
 - 5x - No hay datos del inmovilizador (IMO), verifique la configuración del adaptador.
 - 6x - Problema con el registro de Klon.
 - 7x: CryptKey no coincide, vuelve a flashear y rehace Klon.

CARTRIDGE INSTALLATION

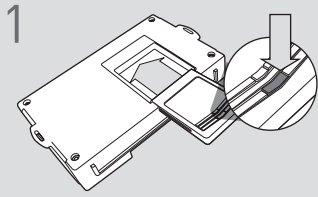

1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

NOTE

! IMPORTANT: The hood must be closed.

 
1 OFF ACC **ON** START

Set ignition to ON position.




2

Wait, LED will turn solid RED to confirm that the ignition is ON.




3

 Wait, LED will flash BLUE rapidly.




4 OFF ACC ON START

Set ignition to OFF position.

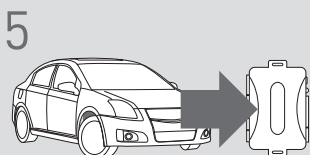


5 **WARNING:**
Disconnect power last.
Disconnect module from vehicle.

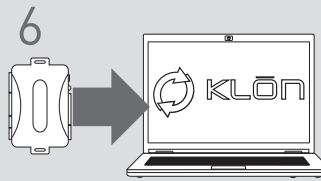

6 Connect module to computer and proceed with extended programming.

7

 WARNING:
Connect power first.
Connect module to vehicle.




8 OFF ACC **ON** START

Set ignition to ON position.




9

 Wait, LED will turn solid RED to confirm that the ignition is ON.



10

 Wait, LED will turn solid BLUE for 2 seconds.



11 OFF ACC ON START

Set ignition to OFF position.



12

Module Programming Procedure completed.