FTI-TLK2: Vehicle Coverage and Preparation Notes

F RSTECH, LLC.

FT-DAS Required for manual transmission.

Parking Light () (+)Door Trigger In

Trunk

Starter 🔲 🗖 🗖 Ignition

Parking Light (Default)

(–)Door Trigger In

Cut loop for A/T

CMX

(Default)

 BOTH Red & Red/White MUST be connected with high current application. Jumper Setting

Accessory 🗉 🗉 🗐

(O)

CM7000/7200

Make	Model	Year	Install	CAN	Lights	IMI/IMO	TPMS	I/O Changes	
DL-TL9 Toyota	Camry STD Key (H)	2018-20	Type 5	ECU	Park / Auto DATA	SIL* OBD 7/16	Type 3	Green White/Blue N/A	

This install requires **BLADE-AL(DL)-TL9** firmware, flash module and update the controller before beginnning the installation.

CAN: CAN data connections are handled through connections at the ECU, no other connections are required.

SIL (immobilizer)/RDA: SIL data connection is made at the OBD-II connector, using the pre-terminated orange/black wire included with this kit. Additional modification of the harness BLADE connector is required:

Step 1.) Remove the existing orange/black wire from the harness BLADE connector, replace it with the pre-terminated wire, then connect to the **blue** SIL data wire located at pin #7 of the vehicle OBD-II connector.

Step 2.) The Camry RDA connection uses the **orange** /**black** wire that was removed in Step 1, by removing the **green**/**red** wire in the BLADE connector, and replacing it with the **orange**/**black**. See illustration on next page.

TPMS Ignition: The TPMS ignition wire, located in the 36-pin connector of the Main Body ECU, must be interrupted if 3X Lock control is required. If the feature is not required, and aftermarket remotes are being used, no connection is necessary.

Parking Lights: TL9 firmware handles parking lights through data, if issues arise the + parking light (green/white) can be used.

Keysense & RAP: The TLK2 harness includes pre-terminated connections for Keysense and RAP circuits.

Keysense (brown/white) is only required in manual transmission applications, insert CM I/O connector keysense position. **RAP (orange)** connects to the driver door circuit, insert in any POC position and configure for RAP in the feature options.

I/O Changes: No changes are required.


FTI-TLK2: Installation and Configuration Notes

- A CONNECTIONS REQUIRED
- **B** CONNECTION REQUIRED
- C NOT REQUIRED

The Munner of the second secon

- D OPTIONAL CONNECTION
- E OPTIONAL CONNECTION

MMMMM		 available only when ignition is off ** if equipped with factory hood pin switch 																				
**************************************		FEATURE COVERAGE																CM9	00AS/9	00S Jumper		
	0	0	0	0	0	0	0		0	0	0	0	0	0	0	00]			
With Market	MMOBILIZER DATA	RIORITY UNLOCK	RM OEM ALARM	DISARM OEM ALARM	OOR LOCK	DOR UNLOCK	ARKING LIGHT	DWER LIFTGATE	SUNK/HATCH	DOR STATUS	RUNK STATUS	IOOD STATUS **	СН ОИТРИТ	RAKE STATUS	BRAKE STATUS	M ALARM CTRL ROM OEM REMOTE M RS CONTROL ROM OEM REMOTE				START	ACC	CM-9005/900AS

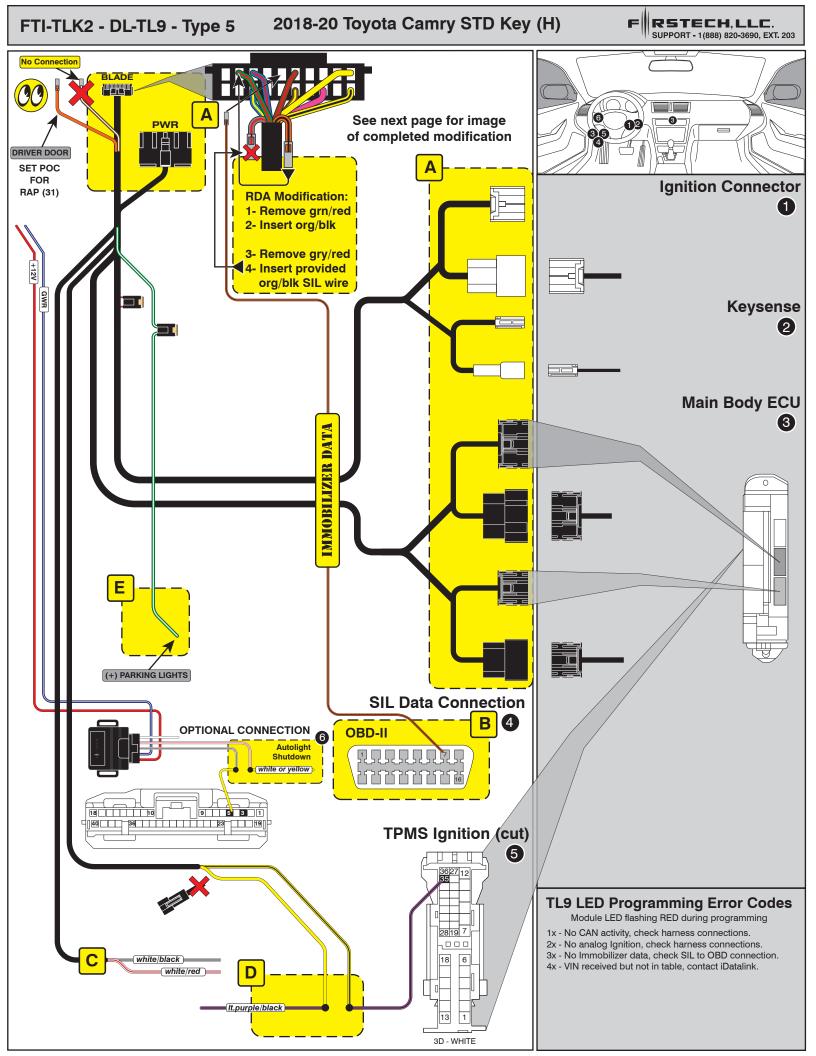

INSTALL GUIDE




ALL IN ONE SCION/TOYOTA

Page 58 of 59

COM-BLADE-AL(DL)-TL9-EN


Doc. No.: ##76832## 20210806

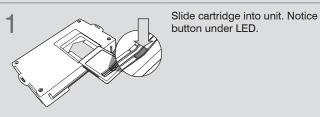


CARTRIDGE INSTALLATION

2

Ready for Module Programming Procedure.

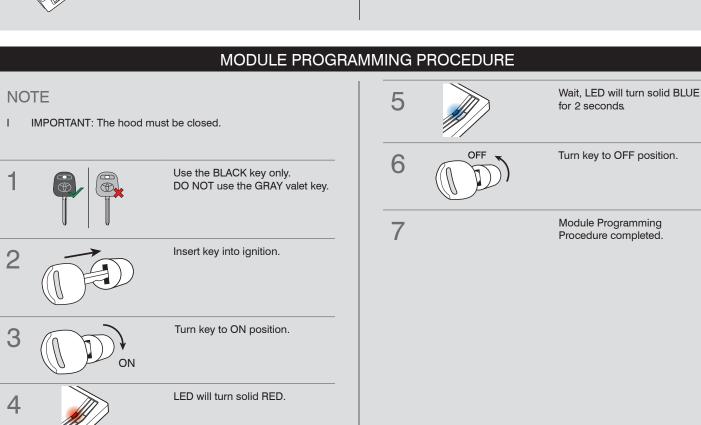

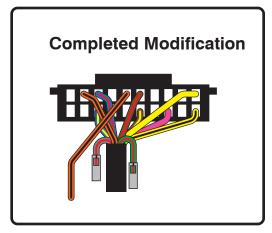

WWW.IDATALINK.COM