




See next page for image of completed modification

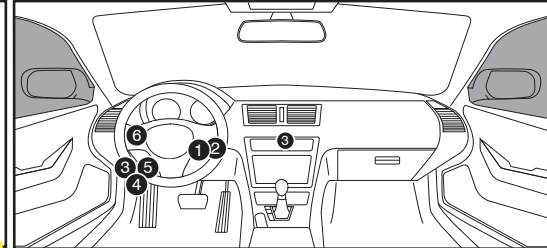


**Ignition Connector 1**

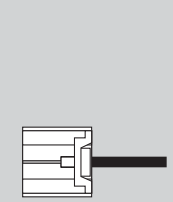


**Keysense 2**

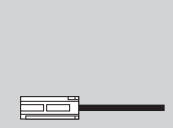


**Main Body ECU 3**

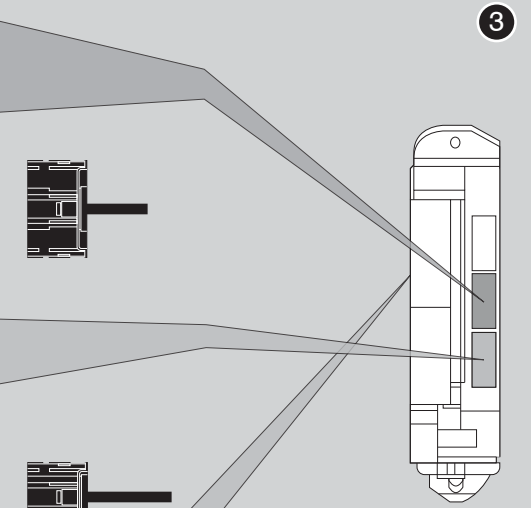

**SIL Data Connection**

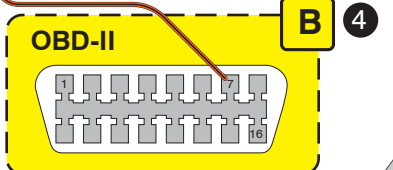


**TPMS Ignition (cut) 5**

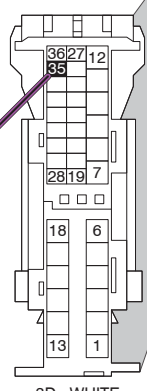

**Códigos de error de programación de LED TL9**

- El LED del módulo parpadea en ROJO durante la programación
- 1x - No hay actividad CAN, verifique las conexiones del arnés.
  - 2x - No hay encendido analógico, verifique las conexiones del mazo de cables.
  - 3x - No hay datos del inmovilizador, verifique la conexión de SIL a OBD.
  - 4x - VIN recibido pero no en la tabla, comuníquese con iDataLink.

## CARTRIDGE INSTALLATION

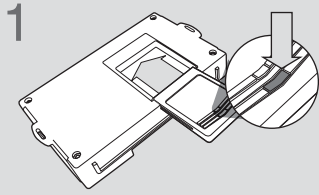

1 Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.


## MODULE PROGRAMMING PROCEDURE

### NOTE

1 **IMPORTANT:** The hood must be closed.

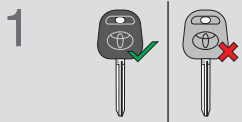


1 Use the **BLACK** key only. **DO NOT** use the **GRAY** valet key.

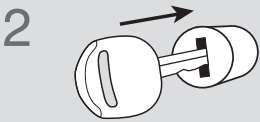

2 Insert key into ignition.




 3 Turn key to ON position.




4 LED will turn solid RED.

 5



5 Wait, LED will turn solid BLUE for 2 seconds.

 6



6 Turn key to OFF position.

7

7 Module Programming Procedure completed.

### Completed Modification

