



**FIRSTECH, LLC.**  
SUPPORT • 1(888) 820-3690, EXT. 203

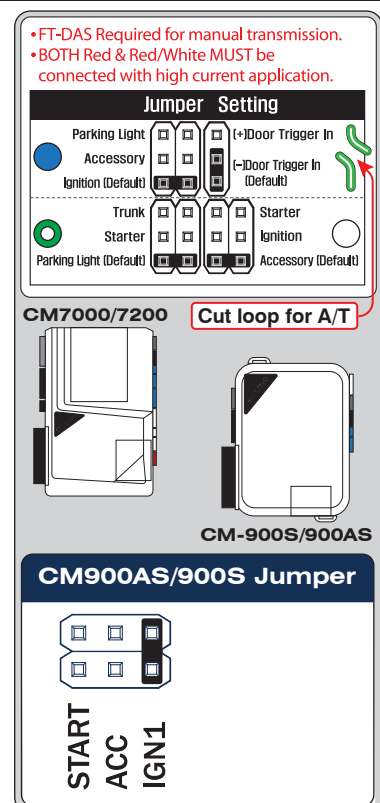

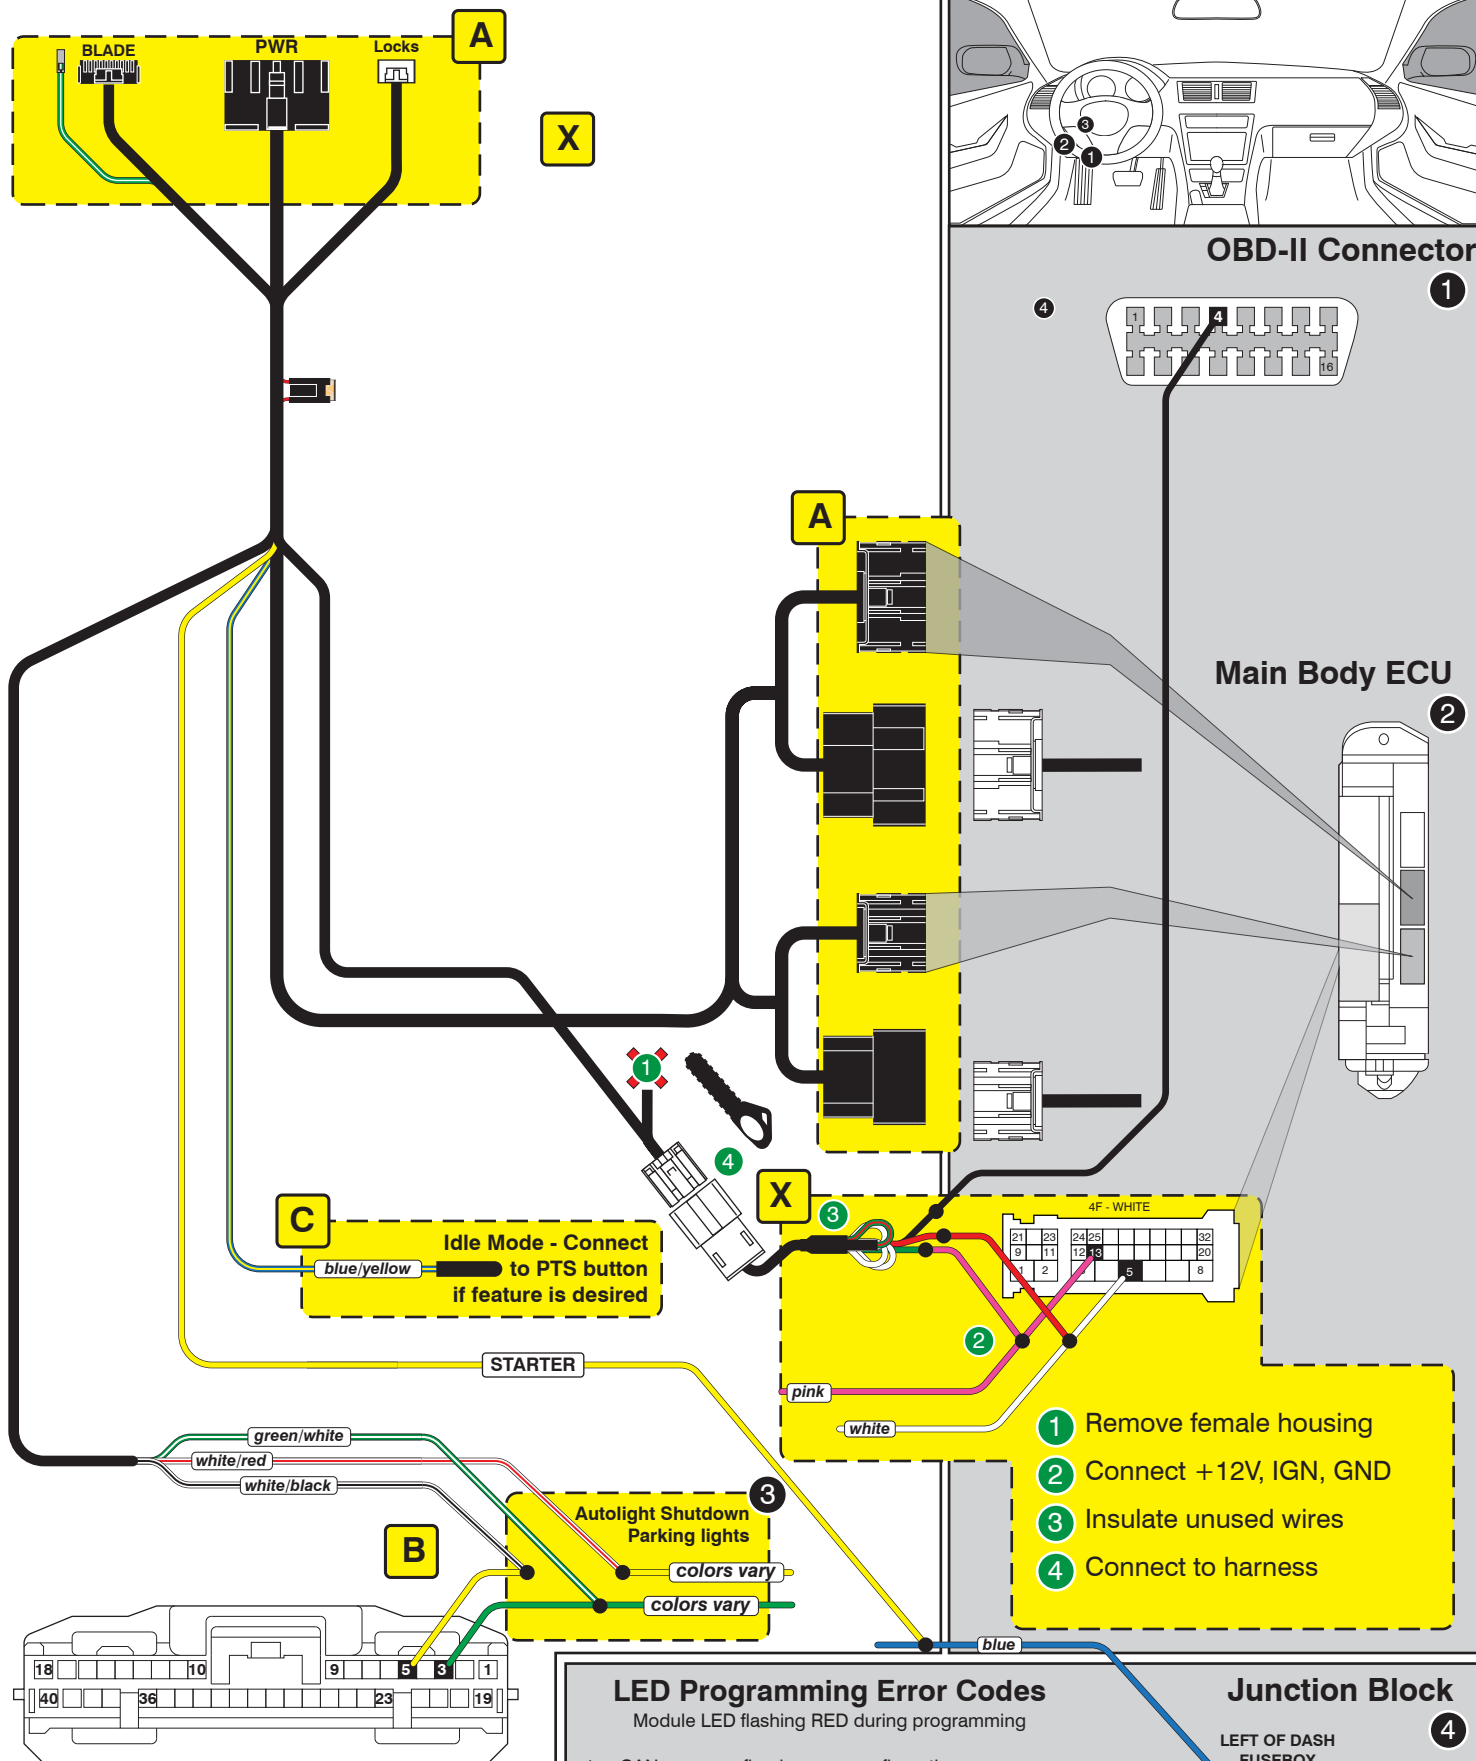


### LED Programming Error Codes


Module LED flashing RED during programming

- 1x - CAN error, confirm harness configuration
- 2x - No IGN, confirm IGN power and harness configuration
- 3x - IMMO/CAN error, confirm harness configuration
- 4x - No VIN, module may default to base platform #2
- 5x - Unknown VIN, module may default to base platform #2
- 6x - OEM starter detected, cycle IGN, if issue persists, remove and reprogram


### Junction Block

LEFT OF DASH  
FUSEBOX

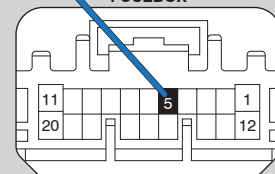

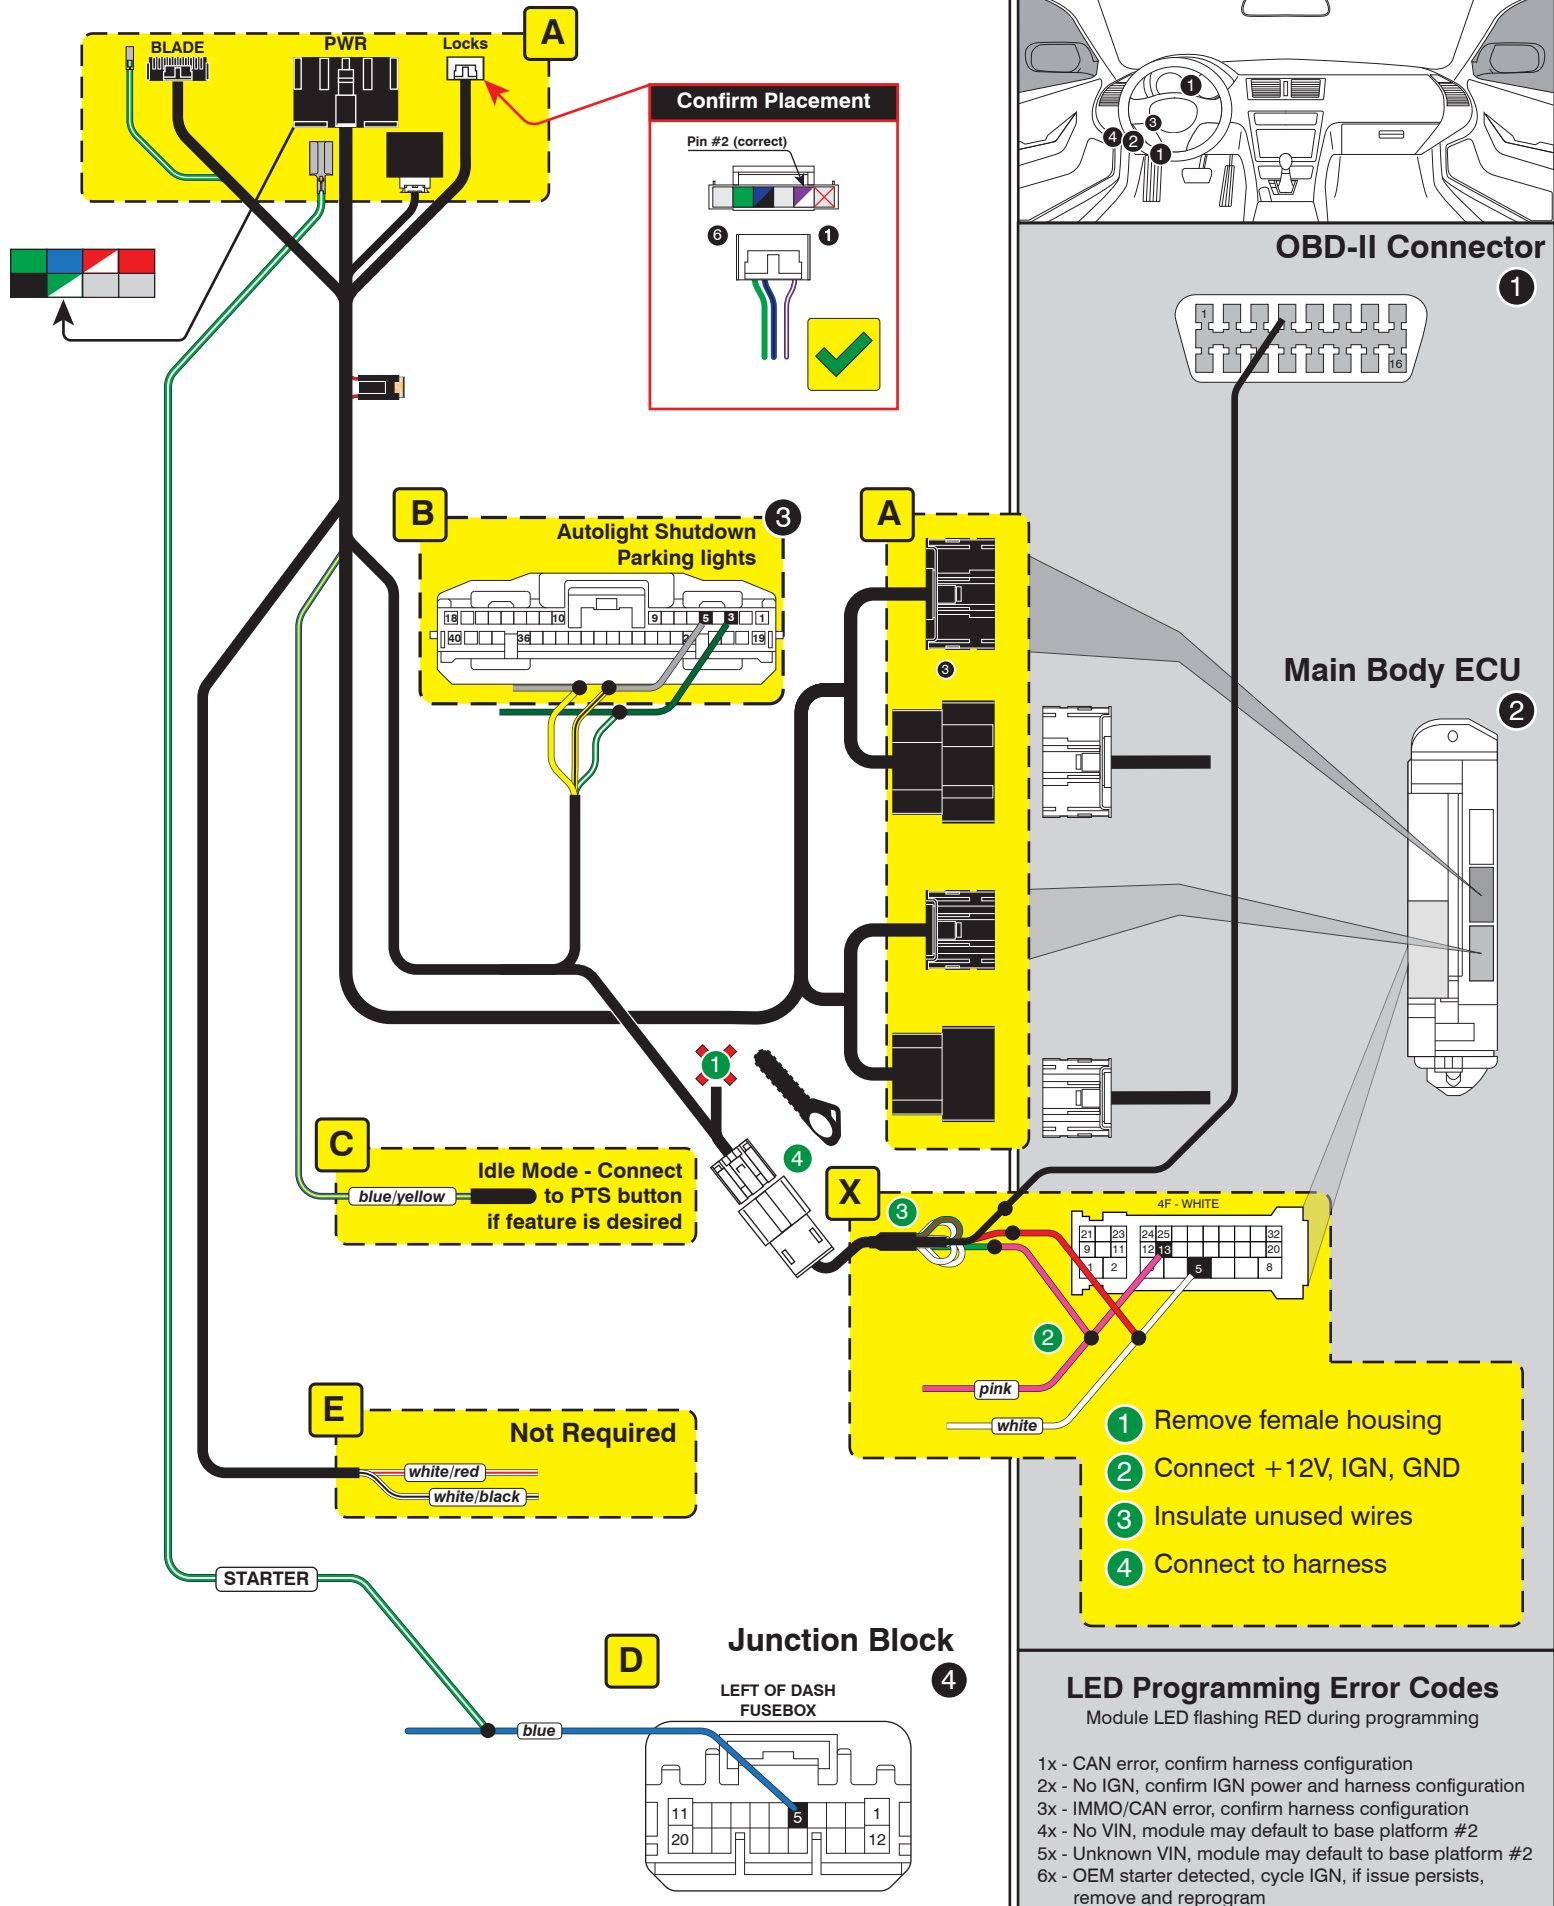

CARTRIDGE INSTALLATION

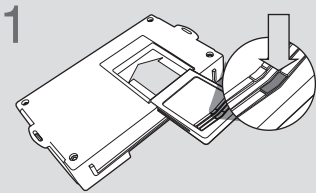

Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.


MODULE PROGRAMMING PROCEDURE

NOTE

I IMPORTANT: The hood must be closed.



Push start button twice [2x] to ON position.

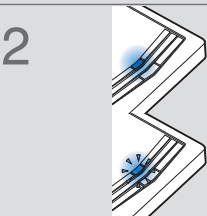


Wait, if LED turns solid BLUE for 2 seconds, proceed to step 7.

If LED flashes BLUE rapidly, proceed to step 3.



 
Push start button once [1x] to OFF position.




Wait, LED will turn solid RED. (This may take up to 5 minutes.)



 Push start button twice [2x] to ON position.



 Wait, LED will turn solid BLUE for 2 seconds



Push start button once [1x] to OFF position.

8

Module Programming Procedure completed.