# FTI-NSP1: Vehicle Coverage and Preparation Notes



Make	Model	Year	Install	CAN	Lights	ВСМ	Locks	Clutch
DL-NI5								Clutch Assembly
Infiniti	QX70 PTS AT	2014-17	Type1	CAN A	RED	PKP	Type B	

Type 1 installation requires **BLADE-AL(DL)-NI5** firmware, flash module and update the controller before installing.

NI-LOCK harness configuration: Lock connections for Intelli-key vehicles are type B, secure unused connectors for safety.

**Optional Hazard Light Control:** Pre-wired in NI-LOCK harness (*green/white*). Vehicles equipped with **MOMENTARY** switch use POC1 set to option #30 [Hazard1], vehicles equipped with **LATCHING** switch use option #23 [Hazard2].

**RAP Shutdown:** Pre-wired in NI-LOCK harness to driver's door pin at BCM, connect **CM POC** configured for RAP to *orange/white* wire in **NI-LOCK** harness.

**PARKING LIGHTS:** Positive parking lights are available at the rear of the fuse junction panel, connector E103/106/6, pin #9, colors\* vary by year and model, test circuit behavior to confirm light activity.

NI-LOCK/NI5 Behavior and wiring options: NI-LOCK accessory harness is capable of providing connection to ARM & DISARM (lock A, B, or C), RAP (org/wht), and HAZARD (grn/wht) connections in a single connector at the BCM.




NI5 firmware is capable of providing control over the factory alarm, automatically disarming the alarm when remote start is engaged, by providing ignition and immobilizer data emulating key presence. The alarm will disarm when needed but will not rearm at the end of a remote start session, so this must also be considered. No additional arm/disarm wiring is required, but upon a normal unlock using aftermarket remotes the instrument cluster will illuminate as a result of ignition activity. If this activity is an issue, mandatory connection of the arm/disarm wires at the BCM is required, as well as using the circuit jumper in note [B] of the installation diagram.

## FTI-NSP1: Installation and Configuration Notes

- A CONNECTION REQUIRED SEE BRAKE 1/2 NOTE ON NEXT PAGE
- B NOT REQUIRED SEE FIRMWARE NOTE ABOVE
- C REQUIRED CONNECTION
- D CONFIGURE AND CONNECT AS ILLUSTRATED
- E OPTIONAL CONNECTION




	FEATURE COVERAGE																	
0	0	0	0	0	0	0		0	0	0	0	0	0					
IMMOBILIZER DATA	SECURE TAKEOVER	роов госк	DOOR UNLOCK	DISARM OEM ALARM	A/M ALARM CTRL	A/M RS CONTROL		DOOR STATUS	HOOD STATUS	TRUNK STATUS	BRAKE STATUS	твасн оотрот	E-BRAKE STATUS					

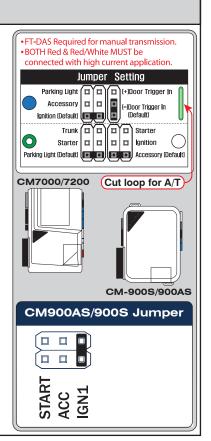



Patent No. US 8,856,780 CA 2759622

 Page 25 of 27 COM-BLADE-AL(DL)-NI5-EN Doc. No.: ##69843## 20200317



Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

## NOTE

When programming, only one key fob will be used. The other one must be located at least 10 feet away from the vehicle.





Insert keyfob 1 in keyport.





DO NOT PRESS BRAKE PEDAL

Push start button twice [2x] to ON position.

3

Wait, LED will turn solid BLUE for 2 seconds



DO NOT PRESS BRAKE PEDAL

Push start button once [1x] to OFF position.

5

Module Programming Procedure completed.



Patent No. US 8,856,780 CA 2759622

Page 27 of 27 COM-BLADE-AL(DL)-NI5-EN Doc. No.: ##69843## 20200317

#### **IMPORTANT**

I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

#### **NOTE**

I All vehicle doors must be closed and locked prior to remote start sequence.



## TIME RESTRICTION COMING UP!

1



Unlock vehicle door using OEM or after-market remote, or door request switch.



#### TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door. Enter vehicle. Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.

WWW.IDATALINK.COM