 




OBD-II Connector 1




Ignition Switch 2

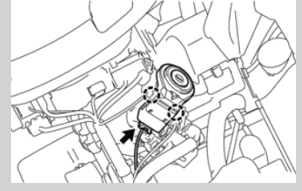

Main Body ECU 3

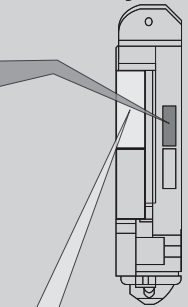


TPMS Ignition Cut 4

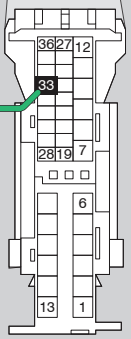

LED Programming Error Codes

- Module LED flashing RED during programming
- 1x - Can error, confirm connections
 - 2x - No IGN, check connections & adapter
 - 3x - No IMMO, confirm connections and equipment trim level
 - 4x - VIN error, contact engineering

X Modification at 30-Pin Connector of FTI-TLK80

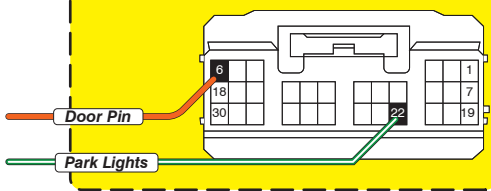

CARTRIDGE INSTALLATION



1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

MODULE PROGRAMMING PROCEDURE

NOTE

1 **IMPORTANT:** The hood must be closed.



1 Use the BLACK key only. DO NOT use the GRAY valet key.



2 Insert key into ignition.

 


3 Turn key to ON position.



4 LED will turn solid RED.

5



5 Wait, LED will turn solid BLUE for 2 seconds.

6



6 Turn key to OFF position.

7

7 Module Programming Procedure completed.