

Conéctese a cualquier controlador POC configurado para RAP (S-#2, cualquier POC configurado en la opción [31]) para simular la apertura de la puerta del conductor después de que el arranque remoto se haya apagado.

Not required in this install type. Secure as needed.

- Códigos de error de programación de LED**  
El LED del módulo parpadea en ROJO durante la programación
- 1x - Error de CAN, verifique el cableado
  - 2x - Error de VIN, verifique el cableado CAN
  - 3x - Firmware incorrecto
  - 4x - Error de VIN, vehículo no identificado
  - 5x - Error de inmovilizador, verifique RX / TX
  - 6x - Error de KLON, verifique el cableado RX / TX
  - 7x - Error de KLON, proceso fallido, reiniciar módulo
  - 8x - Error de cifrado, 80 bits detectados
  - 9x - Introduzca el cilindro, retírelo y continúe

\*Edge, Flex, and MKX only

## CARTRIDGE INSTALLATION



1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

## MODULE PROGRAMMING PROCEDURE - WITH ONE OEM KEY & KLON




1 Insert key into ignition.



2 Turn key to ON position.



3 LED will turn solid RED.

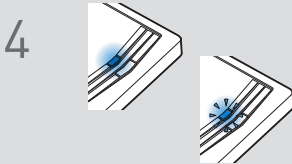

4 If LED turns solid BLUE, proceed with step 13.

If LED flashes BLUE, proceed with step 5.




If the LED begins to flash RED/BLUE, the key has an 80-bit encryption that is not covered by KLON.




5 Turn key to OFF position.



6 **WARNING:**  
Disconnect power last.  
Disconnect module from vehicle.

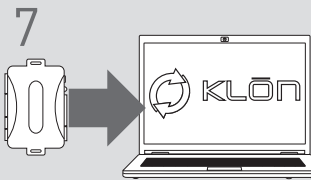

7 Connect module to computer and proceed with extended programming.

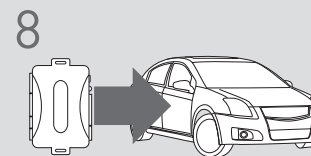

8 **WARNING:** Do not press module programming button.  
Connect power first.  
Connect module to vehicle.



9 Insert key into ignition.



10 Turn key to ON position.



11 Wait, LED will turn solid BLUE for 2 seconds.



12 Turn key to OFF position.

13

Module Programming Procedure completed.

## MODULE PROGRAMMING PROCEDURE - WITH TWO OEM KEYS

### NOTE

I To complete this procedure, both OEM keys are required.



II Keep both OEM remotes at least 10 feet away from the vehicle.



Use both valet keys for the module programming procedure.

1 Insert key 1 into ignition.



2 Turn key 1 to ON position.



3 If LED turns solid BLUE, proceed with step 18.

 


If LED turns solid RED, proceed with step 4.

4 Wait, LED will flash BLUE. (This may take up to 10 seconds.)



5 Turn key 1 to OFF position.




6 Turn key 1 to ON position.




**!** If the LED begins to flash RED, verify the RX and TX connections between the module and the vehicle.

7 If LED turns solid BLUE for 2 seconds, proceed with step 18.

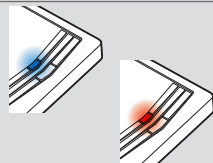


If LED turns solid RED, proceed with step 8 within 5 seconds, after LED turns OFF.


8 Turn key 1 to OFF position.

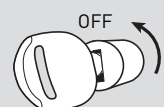


9 Remove key 1.

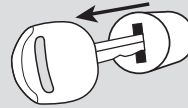


10 Insert key 2 into ignition.

 


11 Turn key 2 to ON position.

 

 
12 Wait, LED will turn solid RED then will turn OFF.




13 Turn key 2 to OFF position.

 

14 Remove key 2.

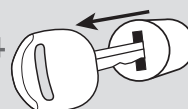

 15 Press and release programming button.




16 Remote start vehicle.



OR


Jump the ignition to 12volts.

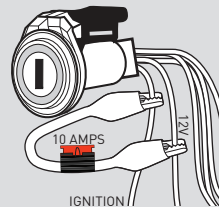

IGNITION

**!** If the LED begins to flash RED, you are using a cloned key or used the same key twice.

 17 Wait, LED will turn solid RED then will turn solid BLUE.



18 Module Programming Procedure completed.