


**Immobilizer/Key Cylinder**

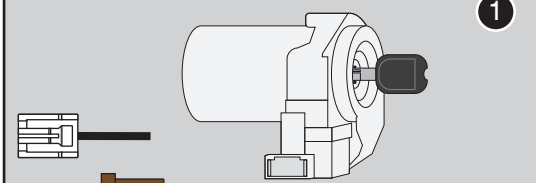


**Ignition Switch Harness**



**Headlight Switch Connector**



**Brake Switch**

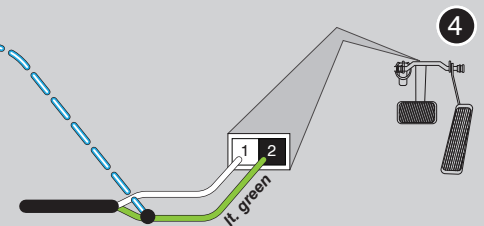

**M/T Applications**  
Clutch Bypass Wiring




**LED Programming Error Codes**

Module LED flashing RED during programming

- 1x - No SWC (doorlock) activity, check orange wire connection
- 2x - IMMO error, check connection and harness configuration (jumpers)
- 3x - Generic error, come on... it's a T-harness :)

## CARTRIDGE INSTALLATION

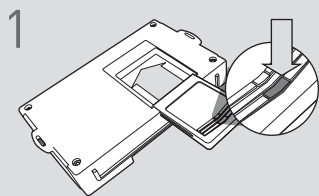


1 Slide cartridge into unit. Notice button under LED.

2

Ready for Module Programming Procedure.

## MODULE PROGRAMMING PROCEDURE

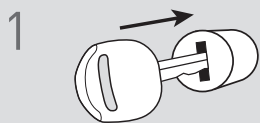


1 Insert key into ignition.




2 Turn key to ON position.

3



3 Wait, LED will turn solid BLUE for 2 seconds.

4



4 Turn key to OFF position.

5

5 Module Programming Procedure completed.