

Make	Model	Year	Install	BCM	Lights	Locks	POC 1	I/O Changes
DL-NI4 Nissan	Xterra STD Key AT	2005-15	Type 1	RSC	Park / Auto NI-LOCK*	DATA	Hazard1/2	Green White/Blue START2/ACC

Installation **Type 1** requires **BLADE-AL(DL)-NI4**, flash module and update the controller firmware before beginning the installation.

**I/O Changes:** Each vehicle in this installation group have different configuration requirements for proper handling of ACC and START circuit handling. Please ensure that the appropriate changes have been made before testing.

**The required, controller specific, changes are listed below.**

**CMX I/O Changes:**

**START2:** Set **HCP #1**, feature option **S-#4-1** (Default (+)Parking Light) to **Option 2 (2nd START)**, connect **green/white** to **yellow** (2nd START) at harness configuration point **[C]**

**ACC:** Set **HCP #3**, feature option **S-#4-3** (Default (+)Ignition) to **Option 4 (2nd ACC)**, connect **CN1 blue** wire to **blue** (2nd ACC) at configuration point **[C]**

**Optional Hazard Light Control:**

**NI-LOCK** harness **green/white** is pre-wired for hazards, connect harness wire to the controller POC1 (**blue/white**), additional configuration required. Vehicles equipped with a **MOMENTARY** activation switch require that POC1 be configured for **Hazard light** (POC option #30), if the switch is **LATCHING** type you will use **Hazard light 2** (POC option #23).

**Auto-Light OFF:**

**NI-LOCK** harness **orange** is pre-wired for Auto-light shut off, if the vehicle is equipped with auto-lights connect CM REARM output (**orange**) to **orange** wire in harness.

**D** **NI-LOCK harness configuration:** Configure Double Pulse Unlock (**feature 1-04, option 2**) Vehicle lock functions are handled through data, additional harness configuration is not required.

**NI-LOCK\* vehicles** require additional wiring and a relay to open the auto-light shutdown loop provided on the NI-LOCK harness.

**FTI-NSK1: Installation and Configuration Notes**

- A** CUTS REQUIRED - INSULATE AFTER CUTTING
- B** REQUIRED CONNECTION - USE JUMPER IF NO IMMOBILIZER
- C** CONNECT AS ILLUSTRATED
- D** CONNECT AS ILLUSTRATED
- E** CONNECT AS ILLUSTRATED



FEATURE COVERAGE																	
IMMOBILIZER DATA	PRIORITY UNLOCK	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	TRUNK/HATCH RELEASE	A/M ALARM CTRL	A/M RS CONTROL	HOOD STATUS	DOOR STATUS	TRUNK STATUS	BRAKE STATUS	E-BRAKE STATUS	TACH OUTPUT	SECURE TAKEOVER	PARKING LIGHTS	HAZARD LIGHTS
○	○	○	○							○	○	○	○	○			○

•FT-DAS Required for manual transmission.  
•BOTH Red & Red/White MUST be connected with high current application.

**Jumper Setting**


Parking Light	Accessory	Ignition (Default)	(+)Door Trigger In (Default)	(-)Door Trigger In (Default)
Trunk	Starter	Parking Light (Default)	Starter	Ignition
				Accessory (Default)

CM7000/7200 **Cut loop for A/T**

CM-900S/900AS

**CM900AS/900S Jumper**

START	ACC	IGN1
-------	-----	------

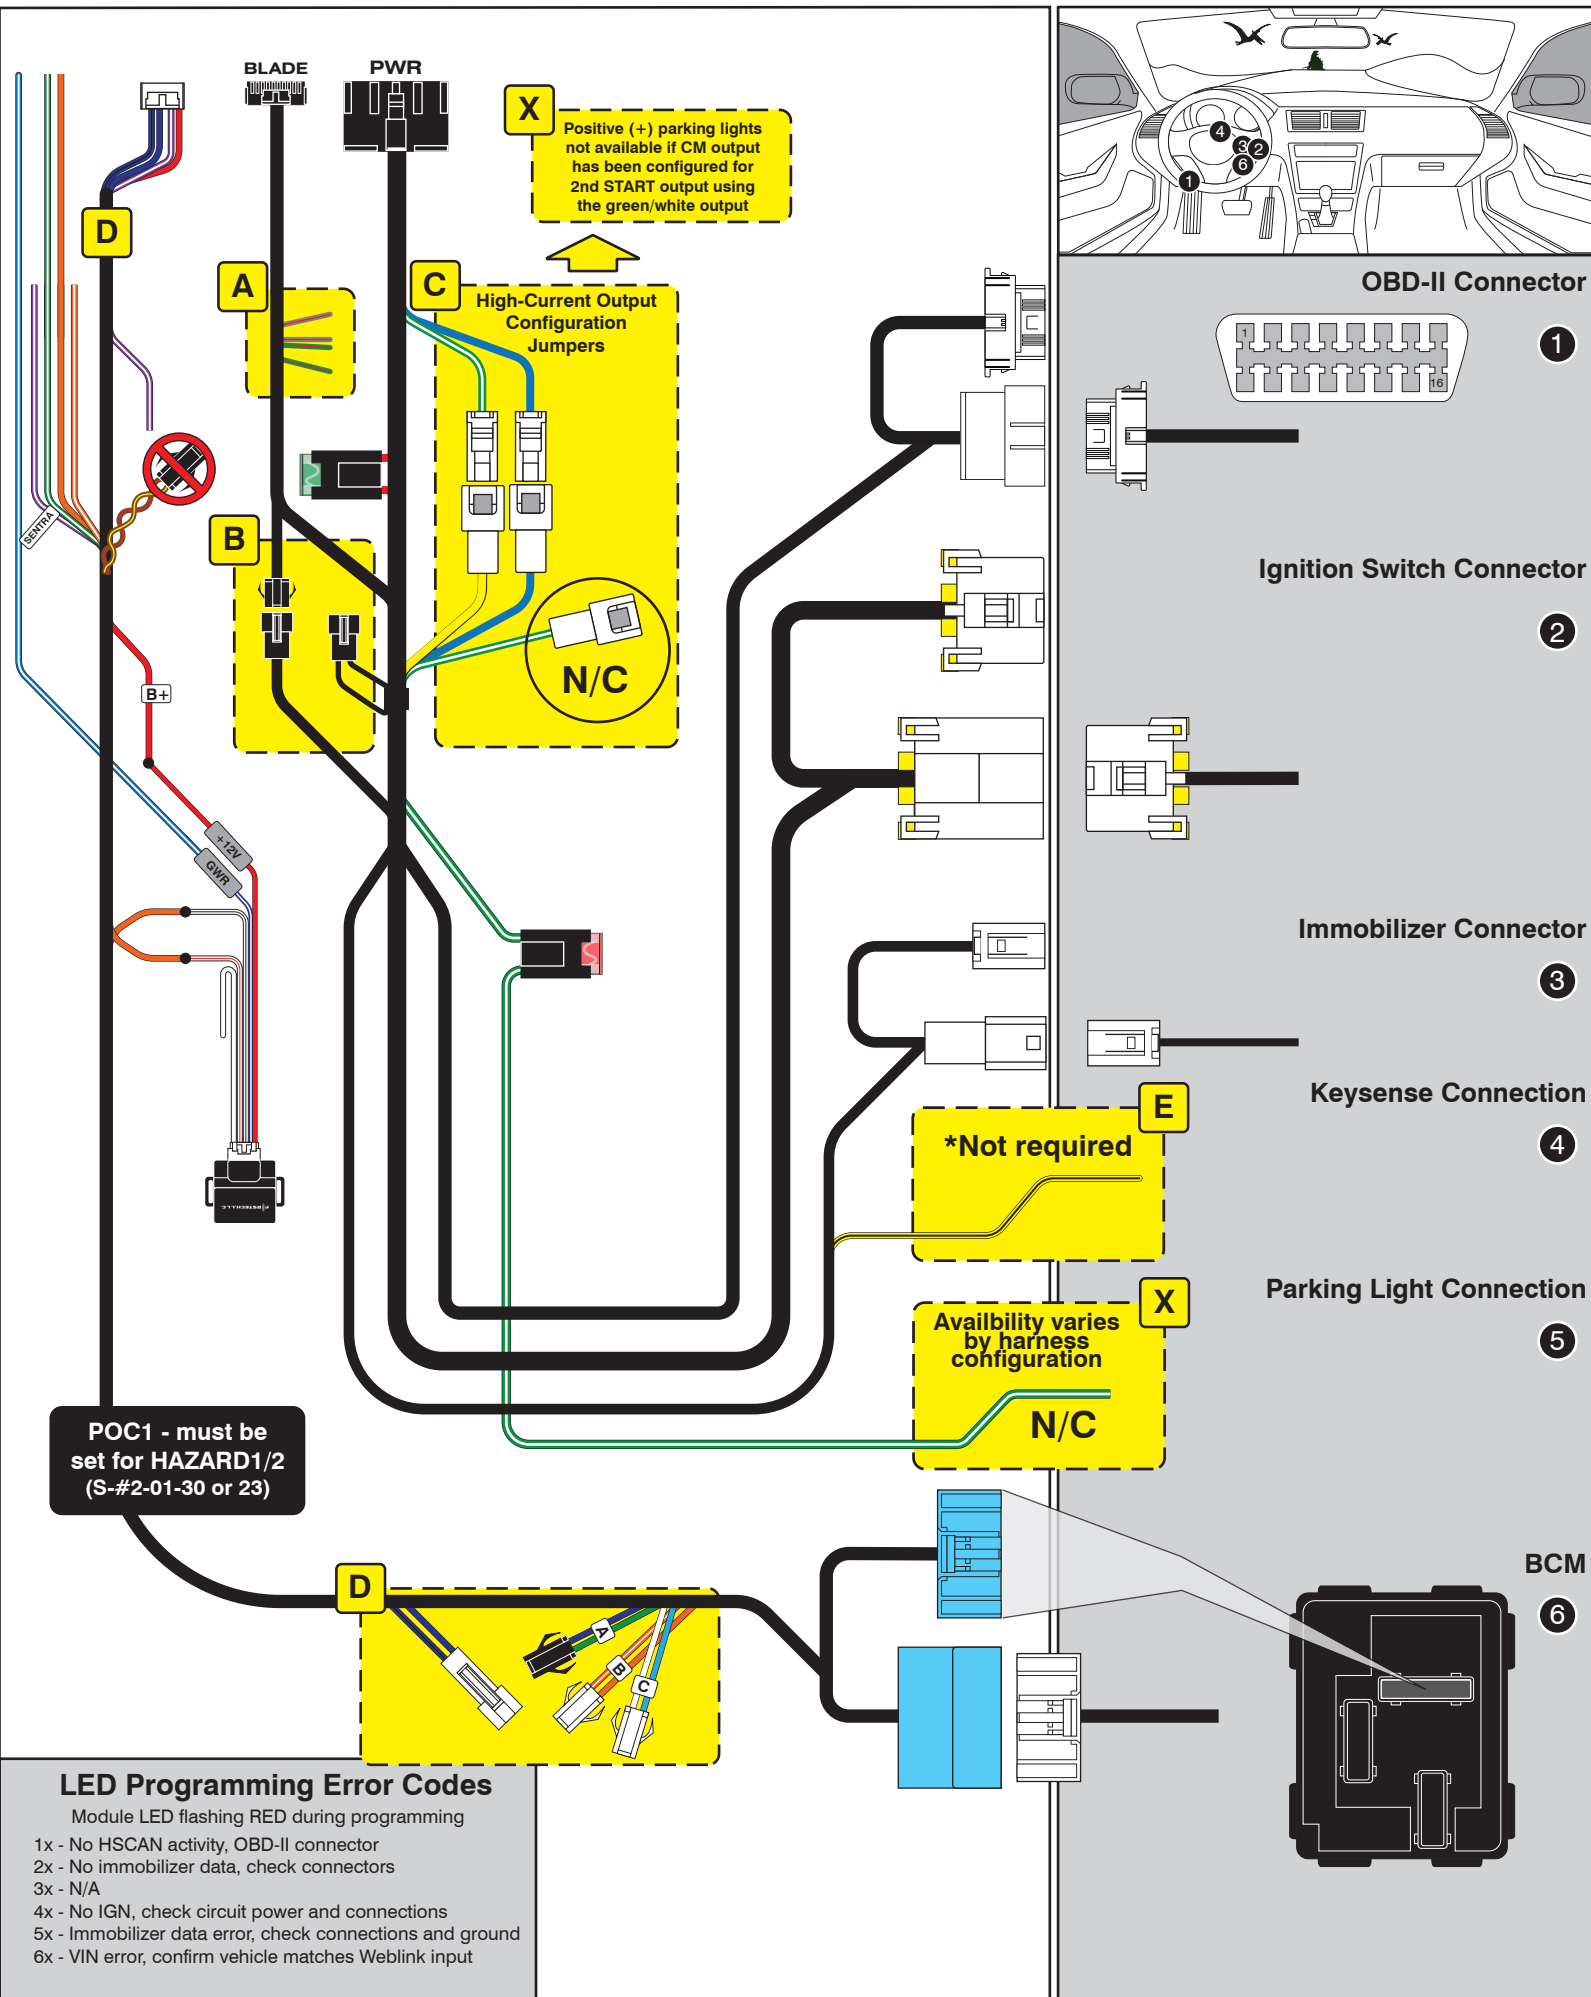

**X** Positive (+) parking lights not available if CM output has been configured for 2nd START output using the green/white output


**C** High-Current Output Configuration Jumpers

**N/C**

**E** \*Not required



**X** Availability varies by harness configuration  
**N/C**

**POC1 - must be set for HAZARD1/2 (S-#2-01-30 or 23)**

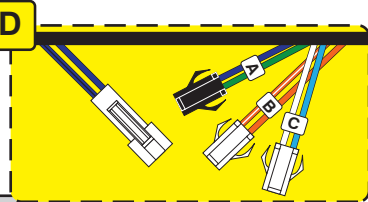


**LED Programming Error Codes**

- Module LED flashing RED during programming
- 1x - No HSCAN activity, OBD-II connector
  - 2x - No immobilizer data, check connectors
  - 3x - N/A
  - 4x - No IGN, check circuit power and connections
  - 5x - Immobilizer data error, check connections and ground
  - 6x - VIN error, confirm vehicle matches Weblink input

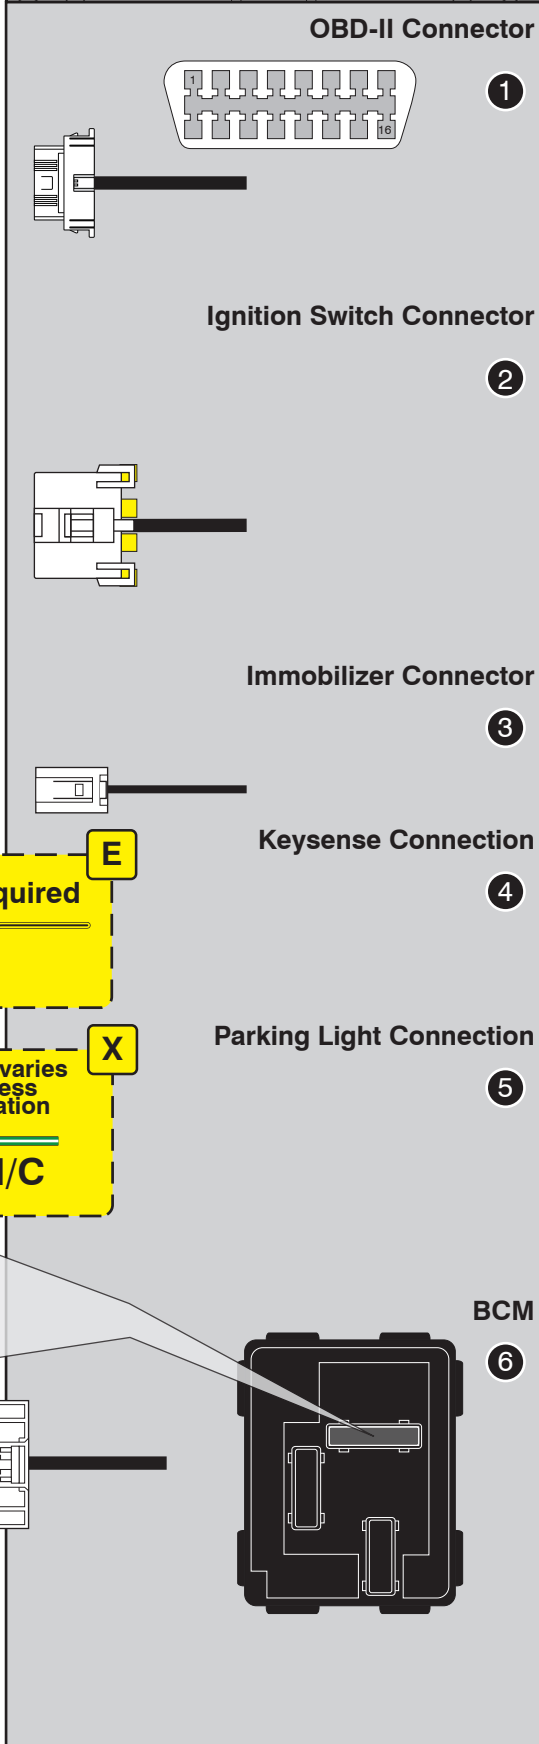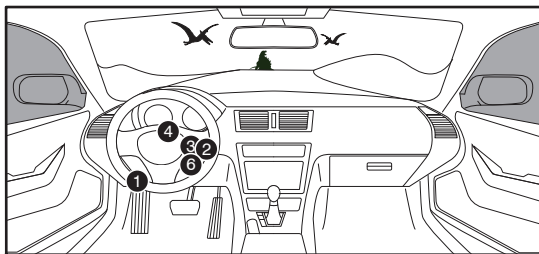

## CARTRIDGE INSTALLATION

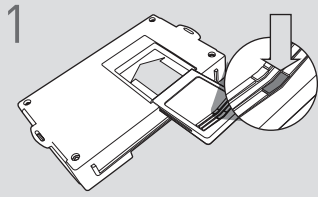

1 Slide cartridge into unit. Notice button under LED.


2

Ready for Module Programming Procedure.



## MODULE PROGRAMMING PROCEDURE

### NOTE

I To complete this procedure, use one regular key or one valet key.




II When programming, all key fobs must be located at least 10 feet away from the vehicle.




1 Insert key into ignition.

2




Turn key to ON position.

3



Wait, LED will turn solid BLUE for 2 seconds.

4



Turn key to OFF position.

5

Module Programming Procedure completed.