

# FTI-FDK1: Vehicle Coverage and Preparation Notes

Make	Model	Year	Install	CAN	Lights	Clutch	Trunk	IGN Jumper
<b>DL-FM4</b> Ford	Transit Connect STD Key	2014-18	Type 12	OBD-II	Park / Auto 1/26 (42)	N/A	BRN 49/60	PINK

This install requires **BLADE-AL(DL)-FM4**, flash module and update the controller firmware before installing. Additionally... This firmware requires that all the doors be closed during programming. If you call support indicating that the module is flashing 3x red and does not program, you're going to be asked to read step #1 of the instructions. Don't feel bad, you're not the first one to make this mistake, and you won't be the last, but it does make our day. :)

**CAN:** FM4 CAN data is sourced from the vehicle OBD-II connector

**Lights:** FDK1 harness provides dual +12V parking light outputs, connect to BCM connector C-2280A, positions 1 & 26 (**yellow/blue & brown/yellow**)

**RAP:** Retained accessory power shutdown requires connecting to the **green/violet** driver's door pin wire, available at BCM connector C-2280B or in the harness in the driver kick panel

**Door locks:** Door lock operation should be tested to confirm that the door locks remain functional after BCM enters sleep mode. If BCM sleep affects door locks then configure unlock before start & relock after start (feature option 1-01, setting 2)

**Lock:** **gray/yellow**, pin #36, 60-pin BCM connector (**C2280B, brown**)

**Unlock:** **violet/gray or violet/orange**, pin #26, 60-pin BCM connector (**C2280C, blue**)

**Driver's Unlock:** **blue/brown**, pin #55, 60-pin BCM connector (**C2280B, brown**), **green/violet**, connect only if present, diode isolate as illustrated in note [E].

## FTI-FDK1 - Installation and Configuration Notes

- A** DO NOT CUT
- B** DO NOT CONNECT (if the vehicle is not equipped with an immobilizer, connect before programming)
- C** REQUIRED CONNECTION
- D** REQUIRED CONNECTION
- E** REQUIRED CONNECTION



FEATURE COVERAGE													
IMMOBILIZER DATA													
DOOR LOCK													
DOOR UNLOCK													
ARM OEM ALARM													
DISARM OEM ALARM													
TRUNK/HATCH RELEASE													
DOOR STATUS													
TRUNK STATUS													
RAP SHUTDOWN													
BRAKE STATUS													
TACH OUTPUT													
E-BRAKE OUTPUT													
A/M CONTROL													
PARKING LIGHTS													

•FT-DAS Required for manual transmission.  
•BOTH Red & Red/White MUST be connected with high current application.

**Jumper Setting**

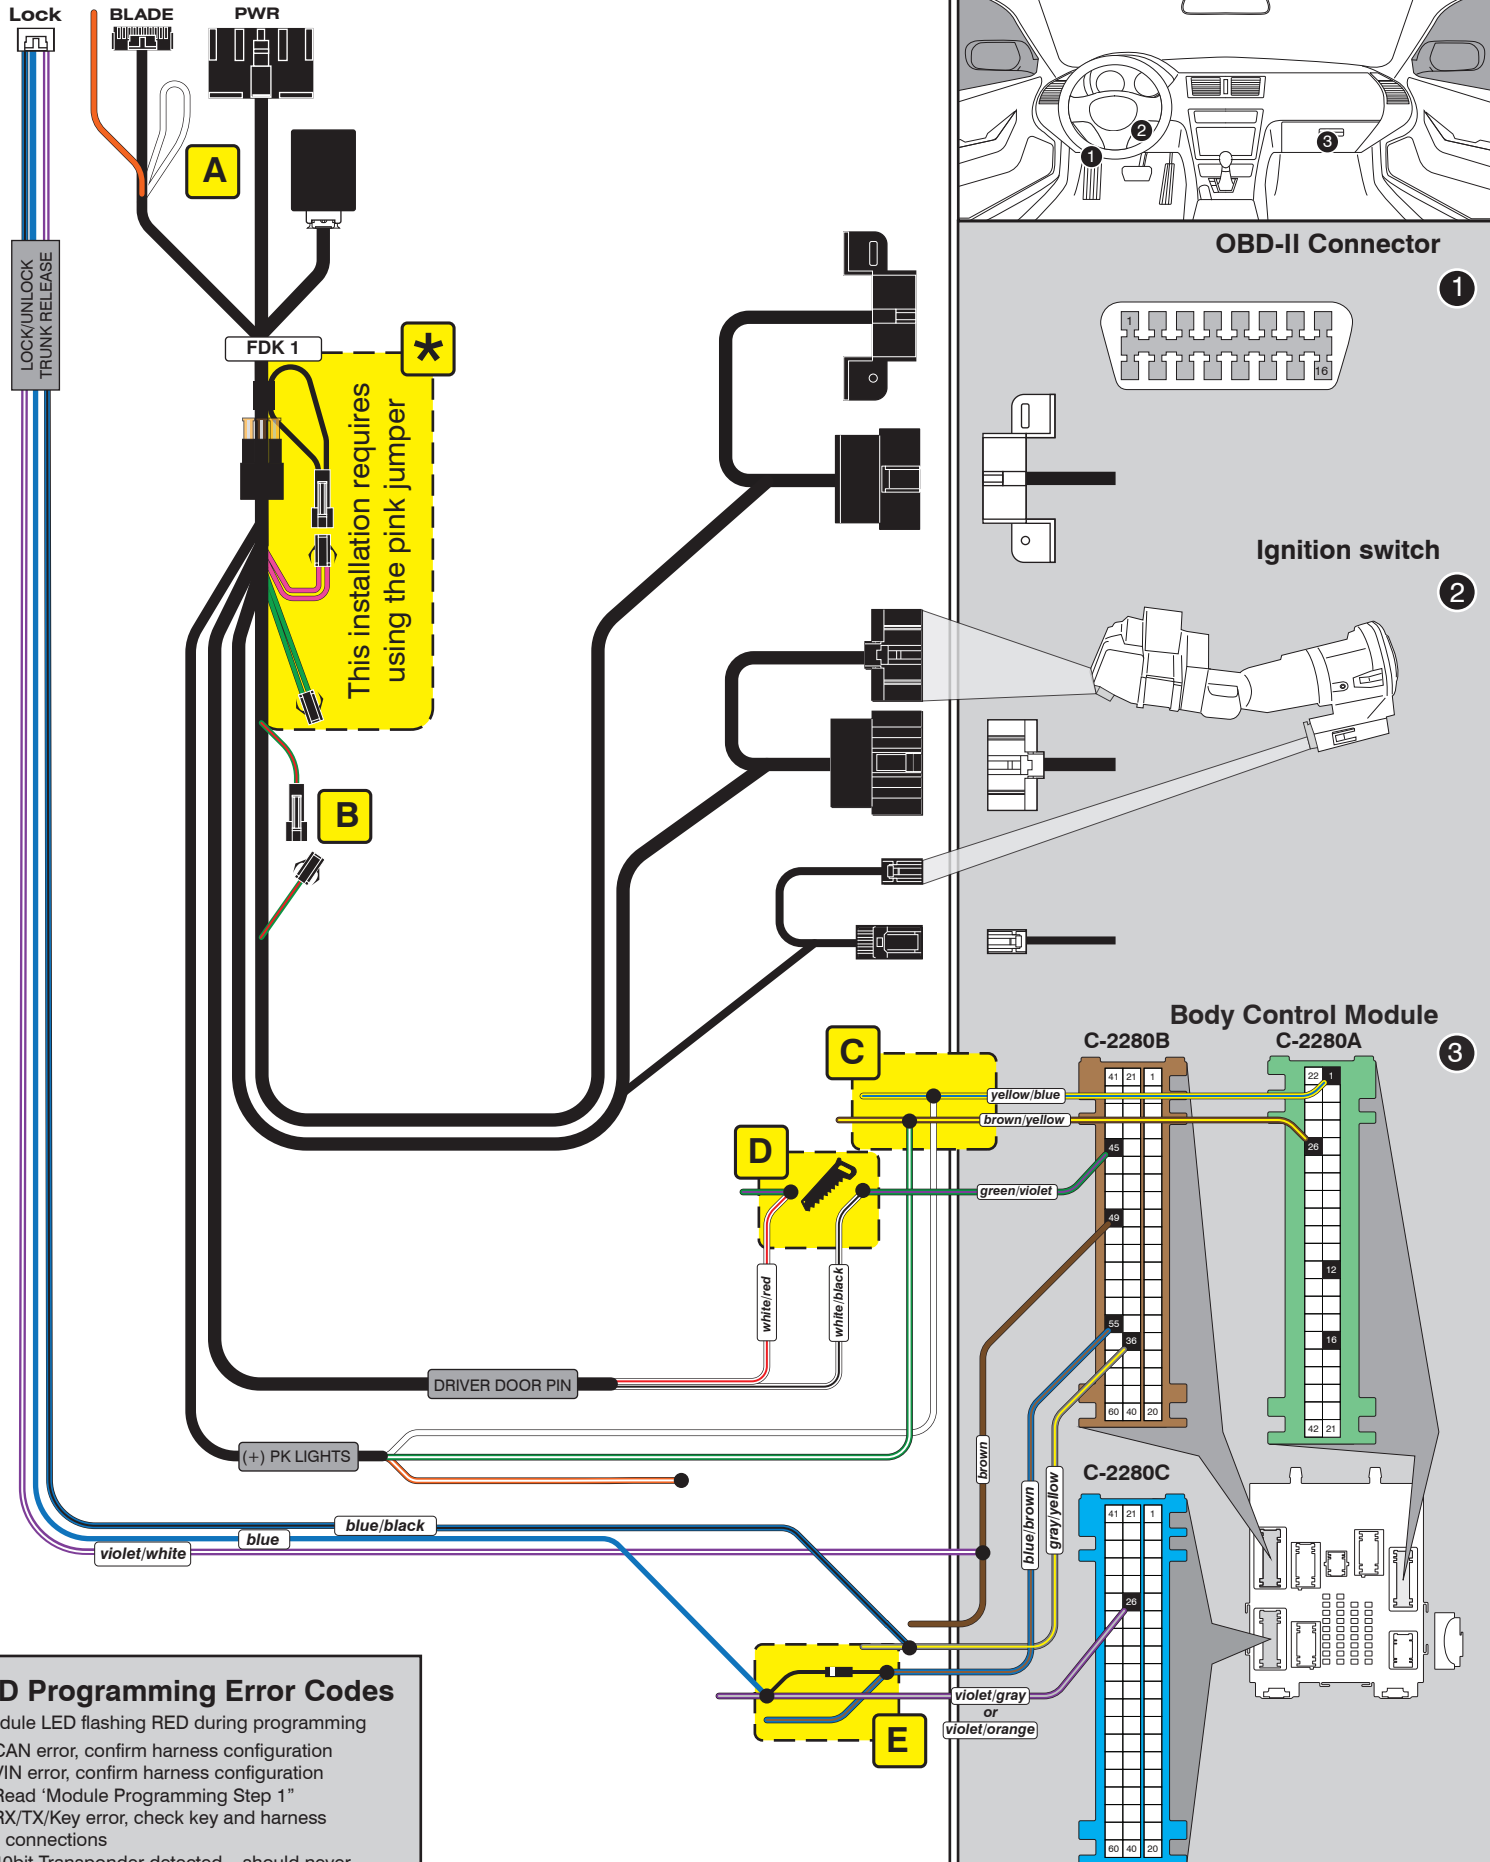
Parking Light				(+)Door Trigger In (Default)
Accessory				(-)Door Trigger In (Default)
Ignition (Default)				
Trunk				Starter
Starter				Ignition
Parking Light (Default)				Accessory (Default)

**CM7000/7200** **Cut loop for A/T**

**CM-900S/900AS**

**CM900AS/900S Jumper**

START  
ACC  
IGN1

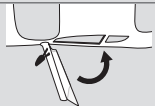
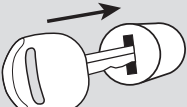
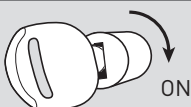
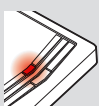
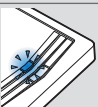
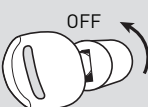
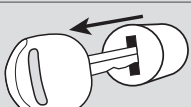
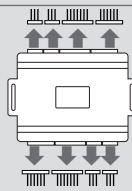


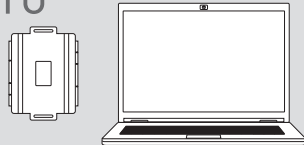


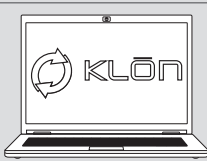

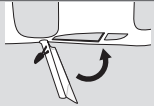
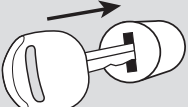
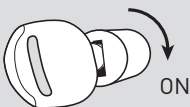

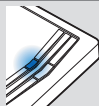
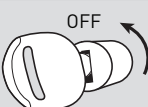
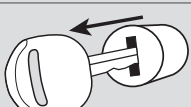

### LED Programming Error Codes

Module LED flashing RED during programming

- 1x - CAN error, confirm harness configuration
- 2x - VIN error, confirm harness configuration
- 3x - Read 'Module Programming Step 1'
- 4x - RX/TX/Key error, check key and harness connections
- 5x - 40bit Transponder detected... should never happen, contact support
- 6x+ - KLON failure, start over or contact support

## MODULE PROGRAMMING PROCEDURE - STD KEY

- 1  Close all vehicle doors and trunk/hatch.
- 2  Insert key into ignition.
- 3  Turn key to ON position.  
 LED will turn solid RED.
- 4  Wait, LED will flash BLUE rapidly. (This may take up to 15 seconds)
- 5  Turn key to OFF position.
- 6  Remove key.
- 7  Disconnect all connectors from remote starter except the power connector.
- 8  Disconnect the power connector.
- 9  Remove remote starter from vehicle.
- 10  Connect remote starter to computer.

- 11  Proceed with extended programming.
- 12  Connect module to vehicle.
- 13  Close all vehicle doors and trunk/hatch.
- 14  Insert key into ignition.
- 15  Turn key to ON position.  
 LED will turn solid RED.
- 16  Wait, LED will turn solid BLUE for 2 seconds. (This may take up to 15 seconds)
- 17  Turn key to OFF position.
- 18  Remove key.
- 19  Module Programming Procedure completed.